



Wiper and Washer (w/ Auto Wiper System)

From Power Source System (See Page 56)

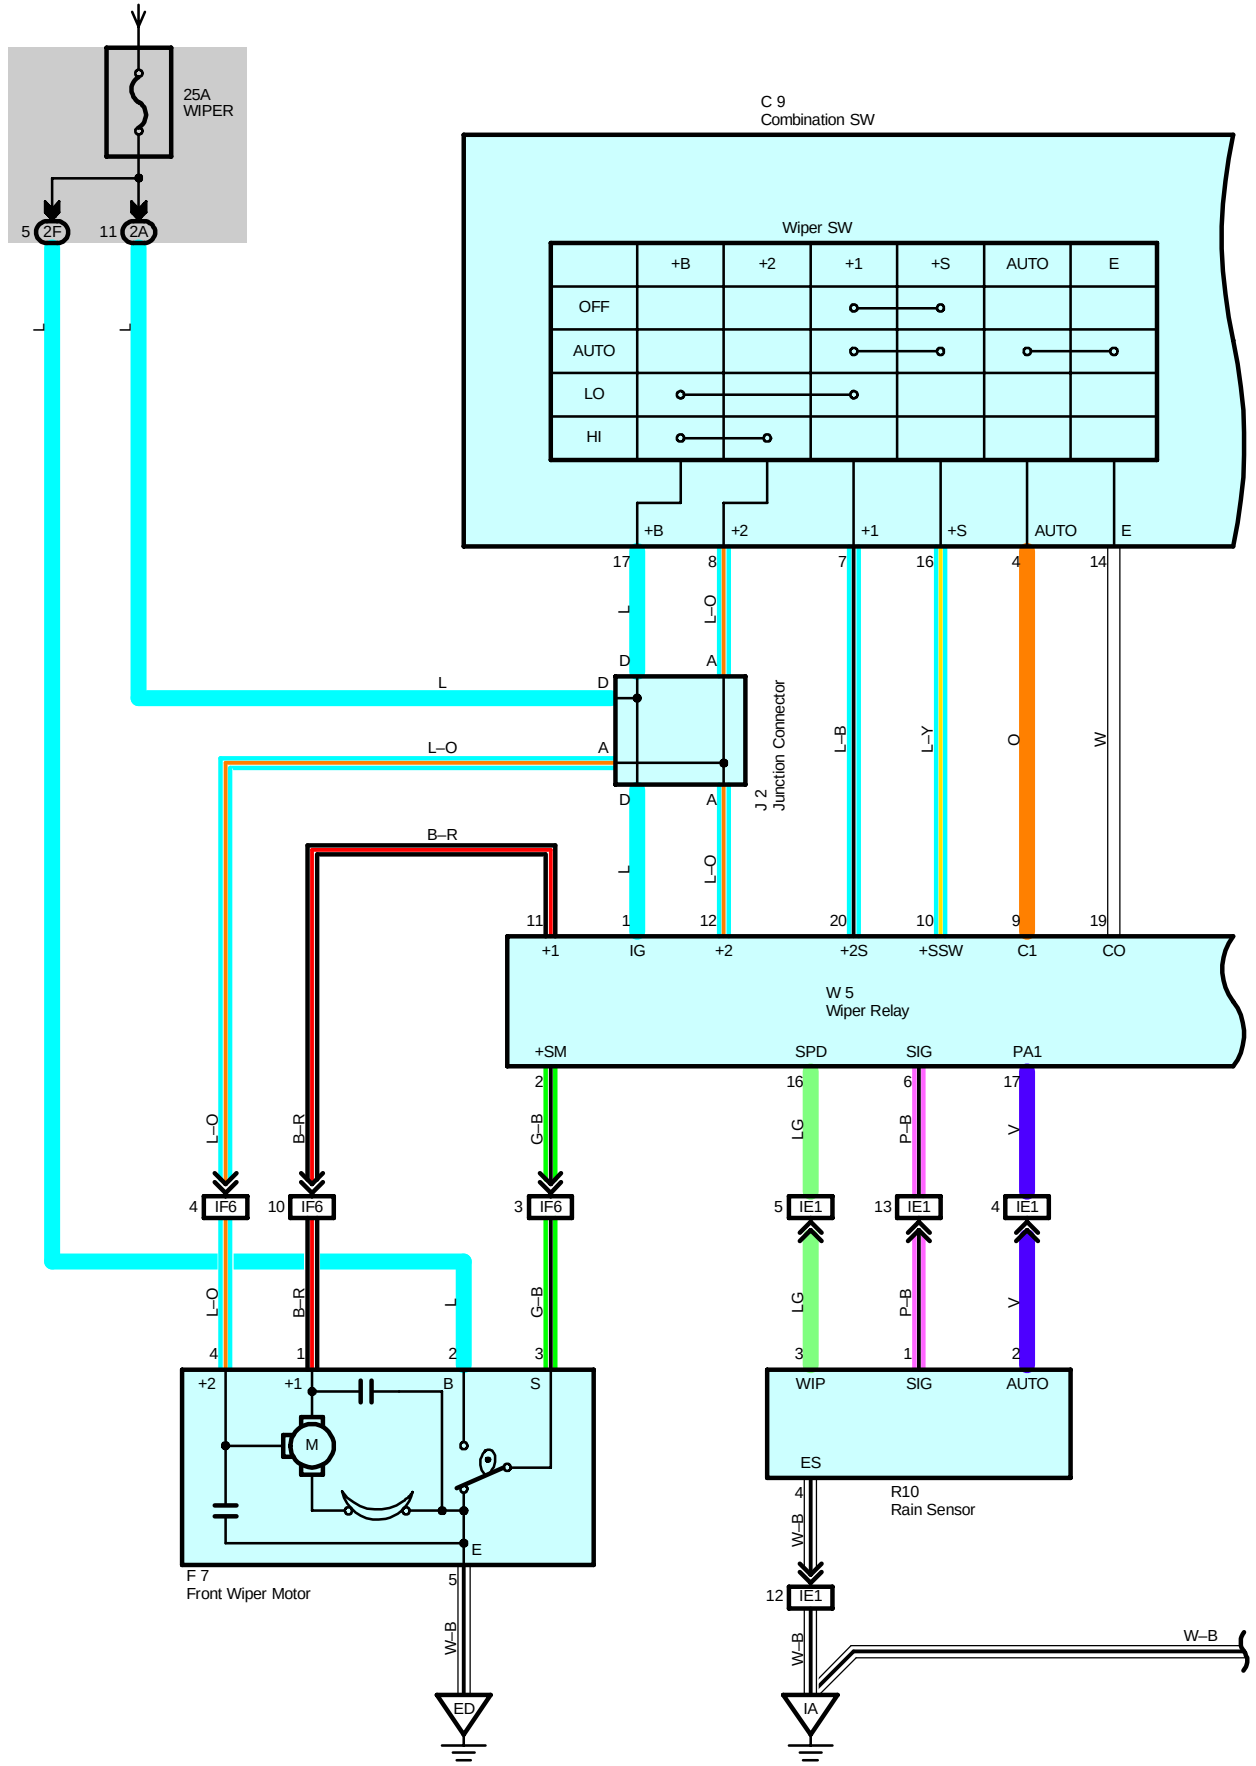

From Power Source System (See Page 56)

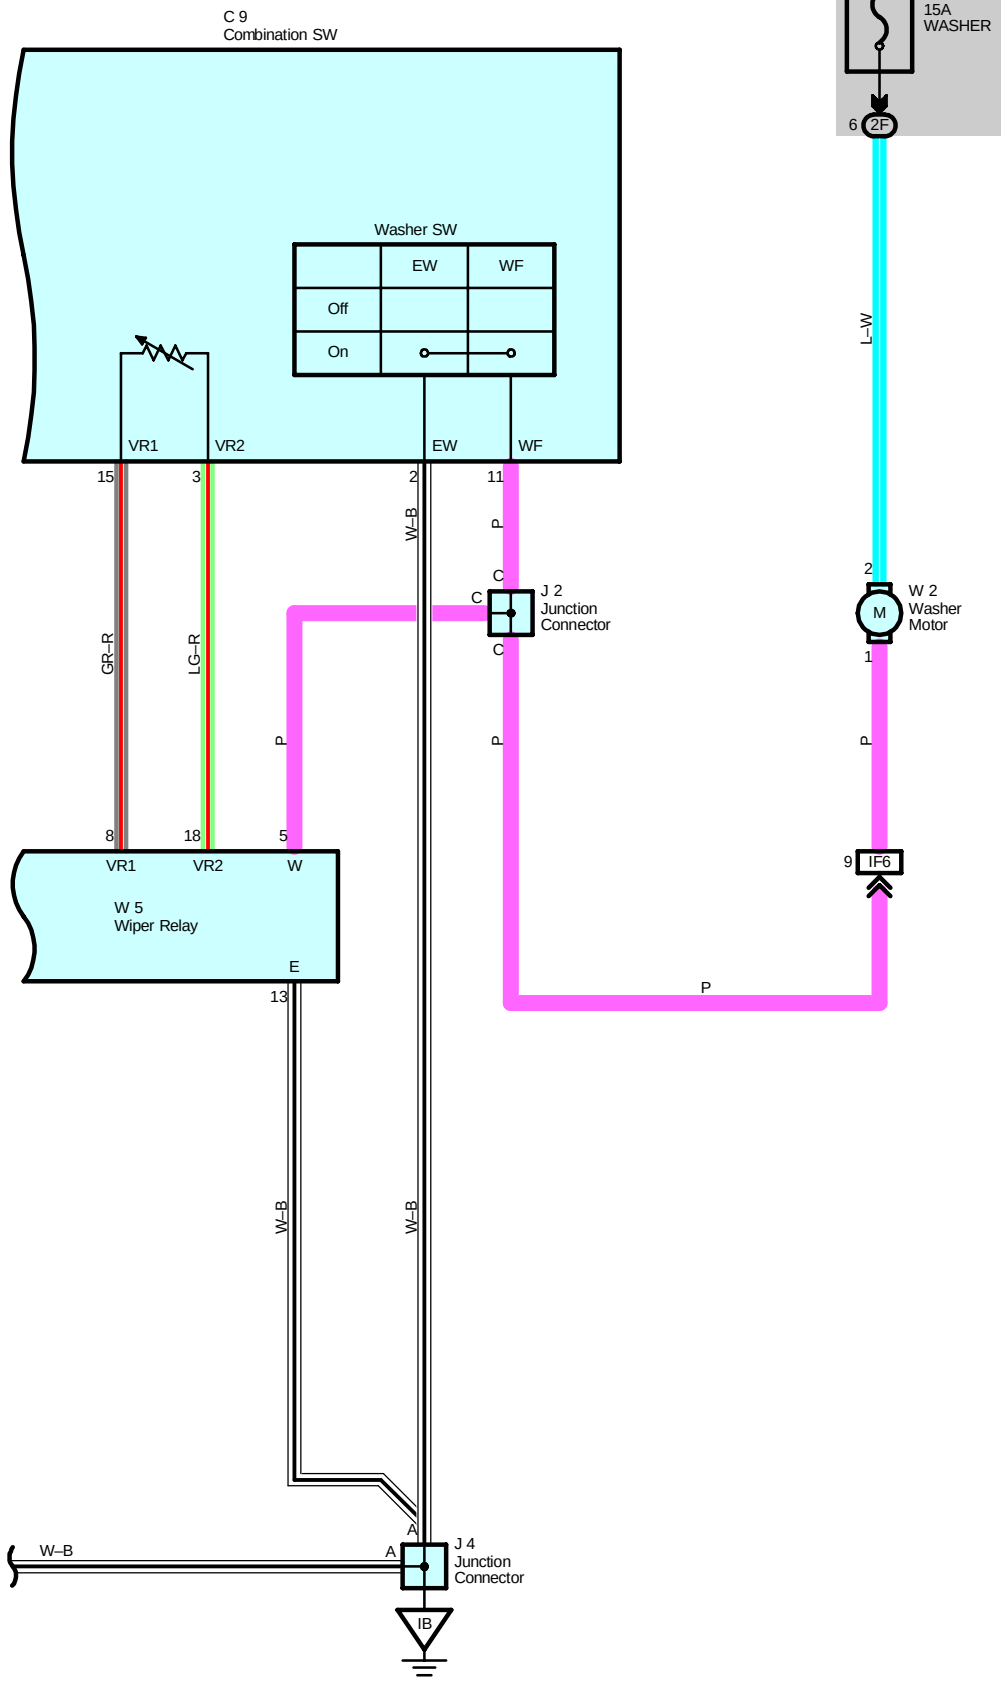

Wiper and Washer (w/ Auto Wiper System)

System Outline

Auto Wiper Operation

When the wiper SW is placed to AUTO position, the rain sensor detects the amount of rain on the front windshield, and a signal is output to the wiper controller. The wiper controller automatically controls the intermittent time and operates the wiper, in accordance with the signal.

Service Hints

W5 Wiper Relay

13–Ground : Always continuity

1–Ground : Approx. 12 volts with the ignition SW at ON or ST position

F7 Front Wiper Motor

2–3 : Closed unless the front wiper motor at STOP position

○ : Parts Location

Code	See Page	Code	See Page	Code	See Page
C9	38	J4	39	W5	39
F7	36	R10	41		
J2	39	W2	37		

○ : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
2A	28	Instrument Panel Wire and Driver Side J/B (Lower Finish Panel)
2F	28	Engine Room Main Wire and Driver Side J/B (Lower Finish Panel)

□ : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IE1	46	Instrument Panel Wire and Roof Wire (Lower Part of Front Pillar LH)
IF6	46	Engine Room Main Wire and Instrument Panel Wire (Right Side of Steering Column Tube)

▽ : Ground Points

Code	See Page	Ground Points Location
ED	44	Left Fender
IA	46	Instrument Panel Reinforcement LH
IB	46	Instrument Panel Brace LH