



Remote Control Mirror (w/ Driving Position Memory)

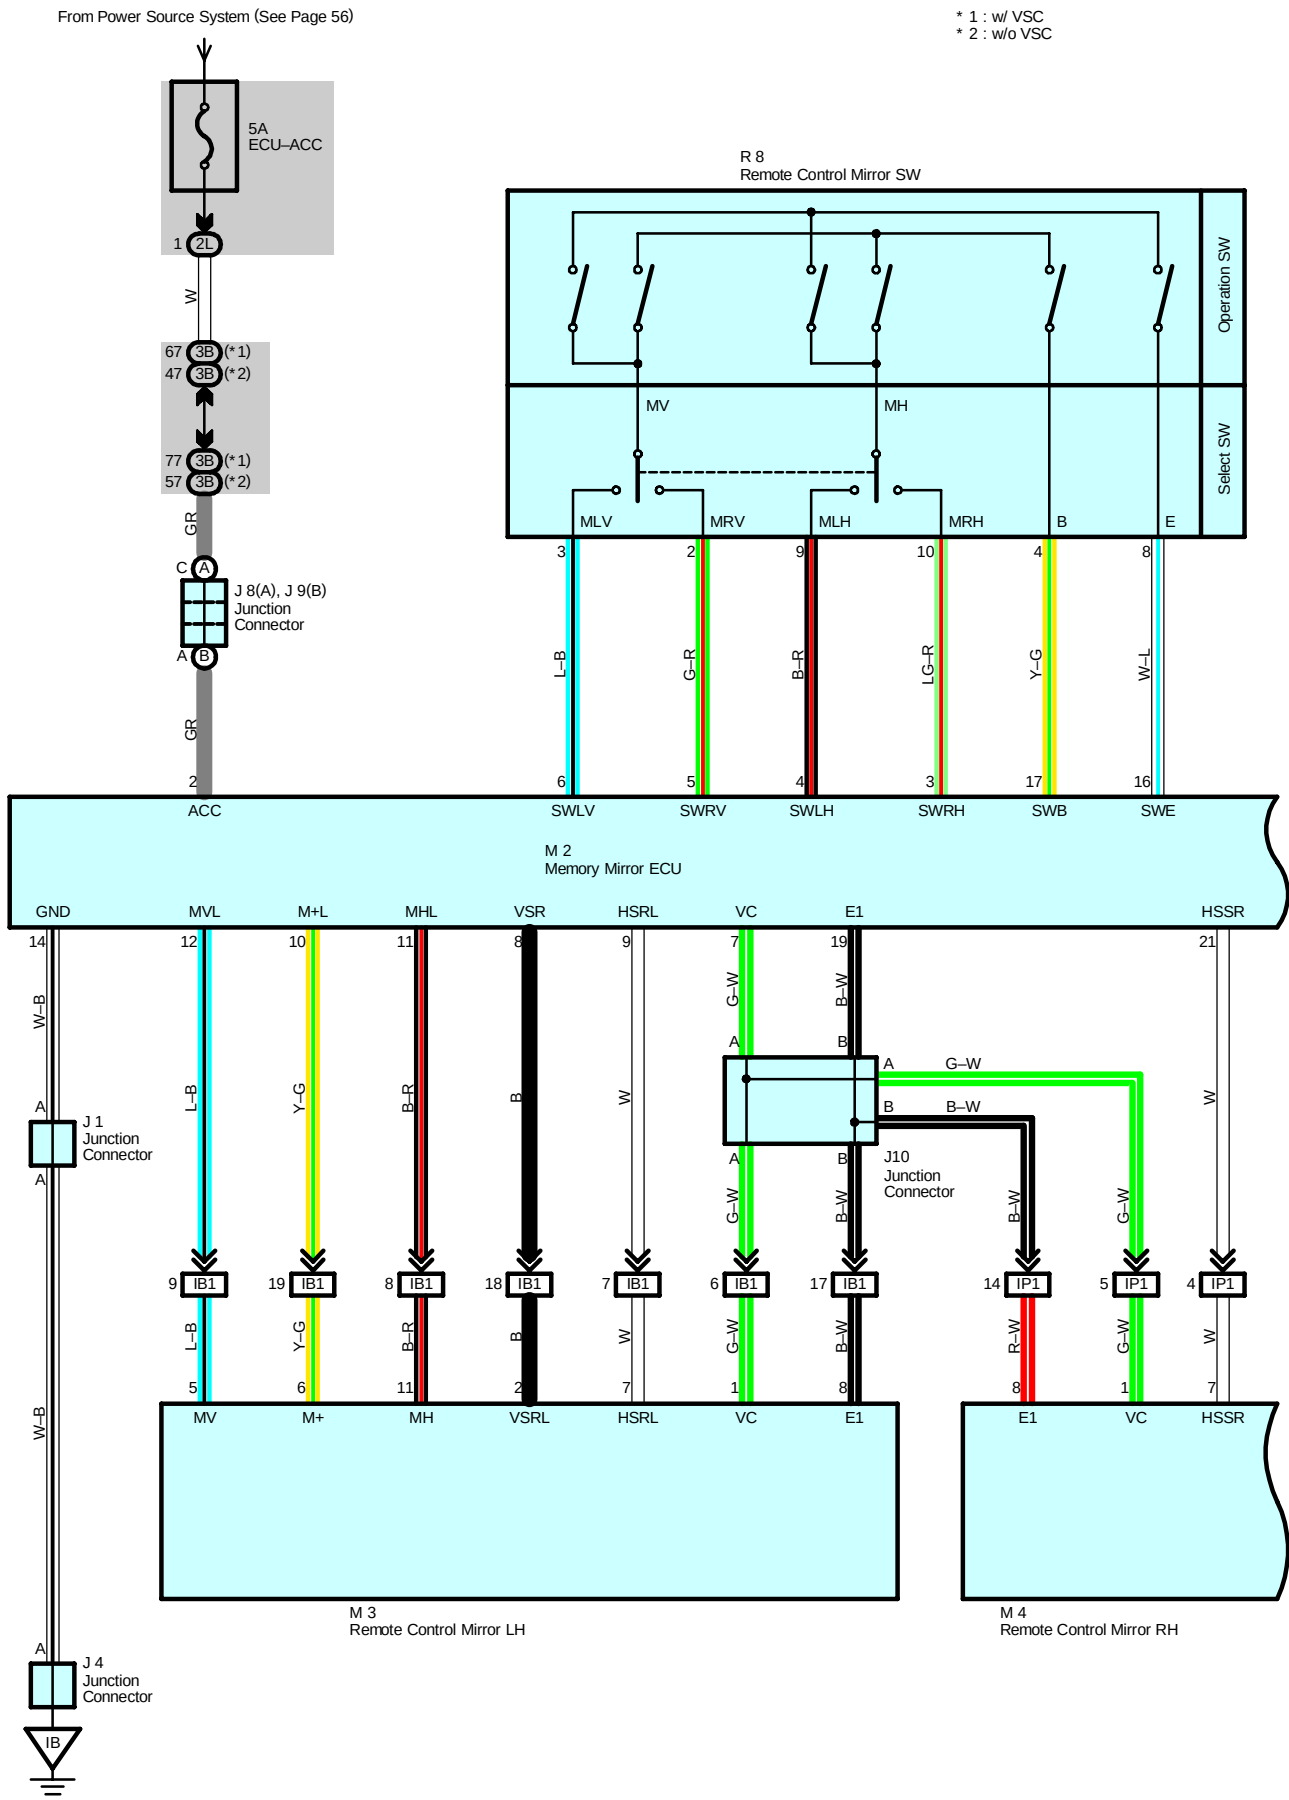

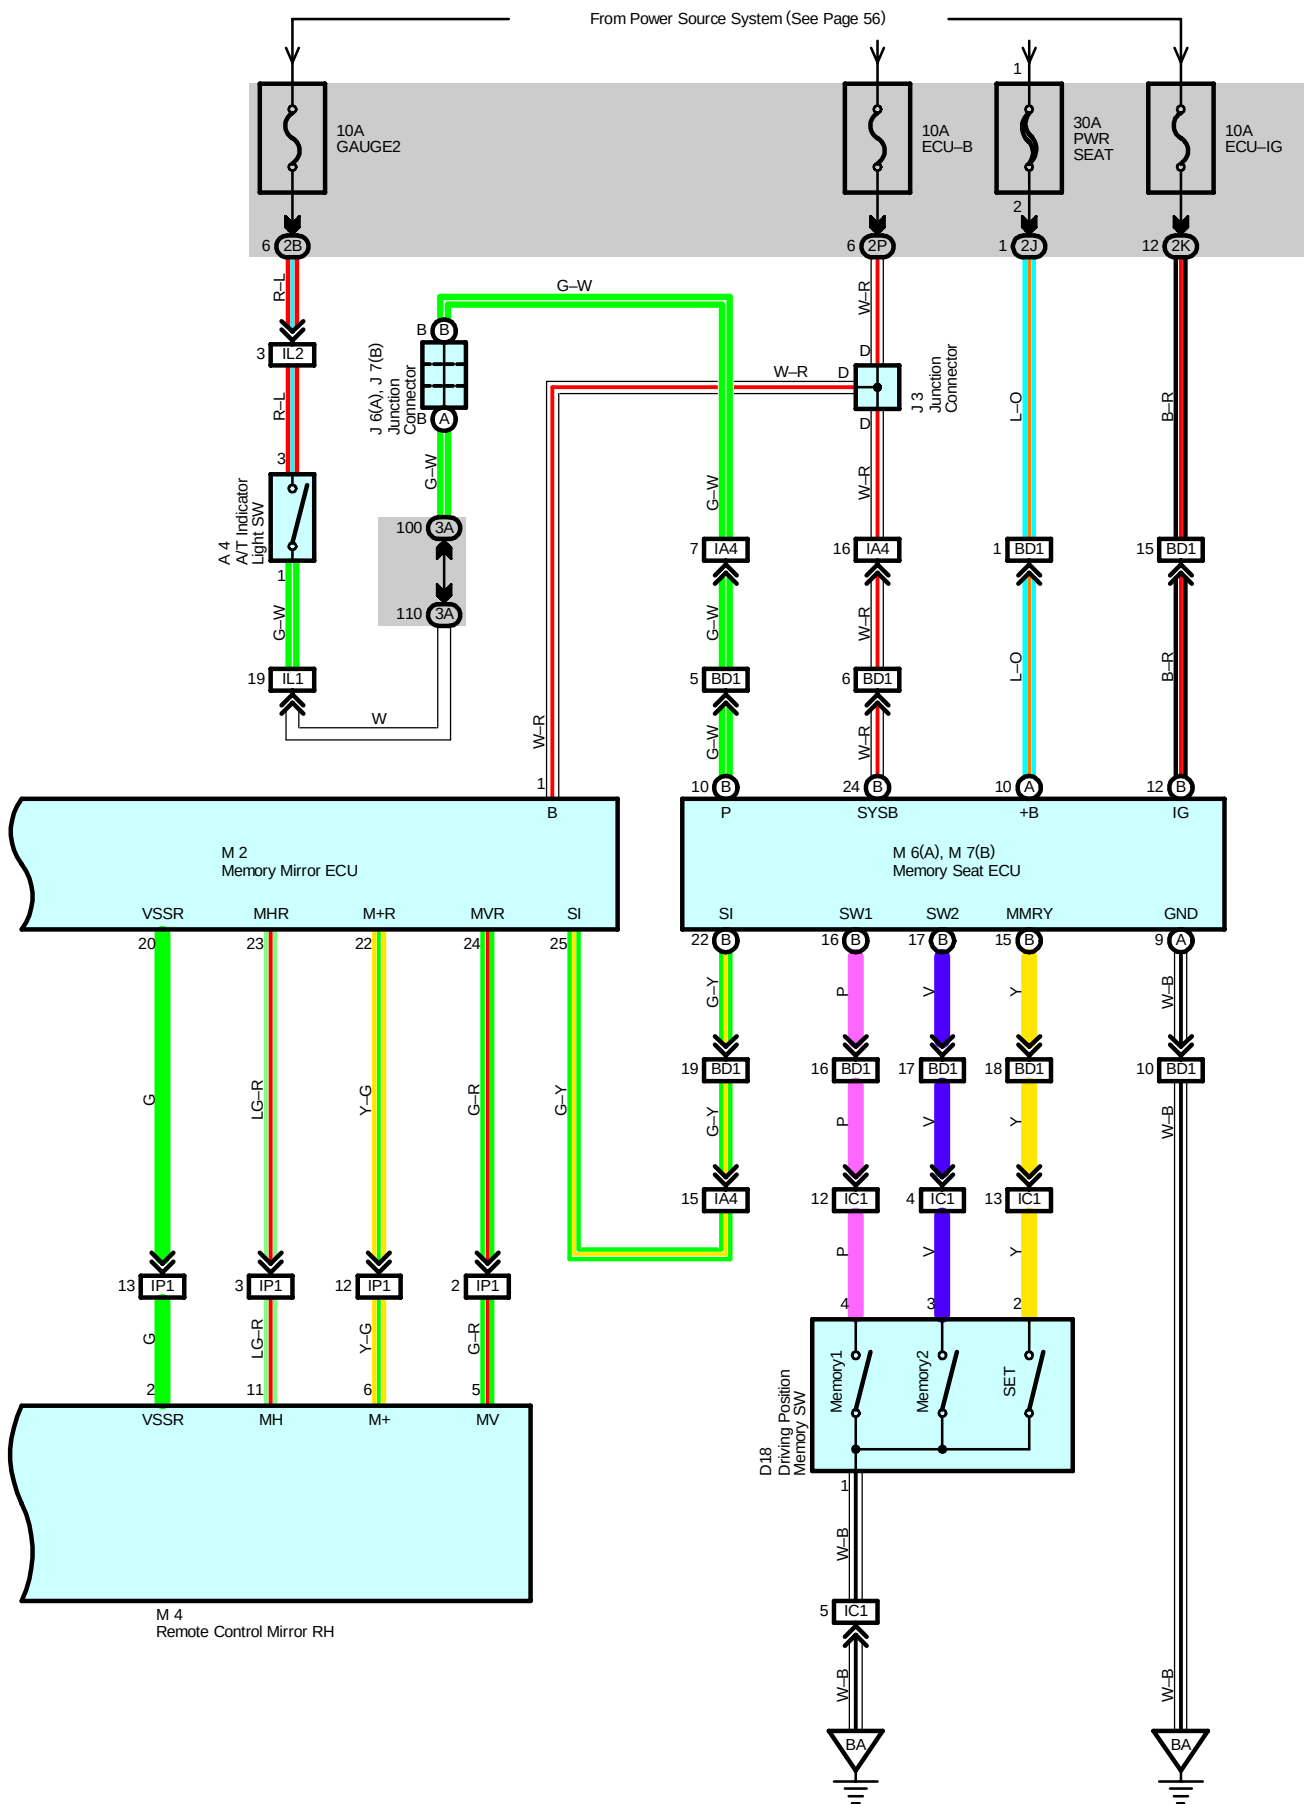

Remote Control Mirror (w/ Driving Position Memory)

System Outline

When the ignition SW is turned on, the outer mirrors can be operated. When the remote control mirror SW is operated, a signal is input to the memory mirror ECU, and the outer mirror can be adjusted to the desired position. In this system, the position sensor detects the number of rotations of each motor (Movement amount of each mirror) and inputs it to the memory mirror ECU. This makes it possible to store and recall the outer mirror position using the driving position memory SW. The outer mirror position is stored and recalled through communication control of the body ECU.

Service Hints

M2 Memory Mirror ECU

2-Ground : Approx. 12 volts with ignition SW at ACC or ON position

14-Ground : Always continuity

1-Ground : Always approx. 12 volts

○ : Parts Location

Code	See Page	Code	See Page	Code	See Page
A4	36	J7	B 39	M4	41
D18	40	J8	A 39	M6	A 42
J1	39	J9	B 39	M7	B 42
J3	39	J10	39	R8	39
J4	39	M2	39		
J6	A 39	M3	41		

○ : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
2B	28	Instrument Panel Wire and Driver Side J/B (Lower Finish Panel)
2J	28	Floor No.1 Wire and Driver Side J/B (Lower Finish Panel)
2K		
2L	29	Instrument Panel Wire and Driver Side J/B (Lower Finish Panel)
2P		
3A	34 (w/ VSC)	Instrument Panel Wire and Passenger Side J/B (Instrument Panel Brace RH)
	35 (w/o VSC)	
3B	34 (w/ VSC)	
	35 (w/o VSC)	

□ : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IA4	46	Instrument Panel Wire and Floor No.1 Wire (Left Kick Panel)
IB1	46	Front Door LH Wire and Instrument Panel Wire (Left Kick Panel)
IC1	46	Front Door LH Wire and Floor No.1 Wire (Left Kick Panel)
IL1	48	Engine Wire and Instrument Panel Wire (Behind the Glove Box)
IL2		
IP1	48	Front Door RH Wire and Instrument Panel Wire (Right Kick Panel)
BD1	52	Floor No.1 Wire and Front Seat LH Wire (Under the Driver's Seat)

▽ : Ground Points

Code	See Page	Ground Points Location
IB	46	Instrument Panel Brace LH
BA	50	Under the Driver's Seat