


Remote Control Mirror (w/o Driving Position Memory)

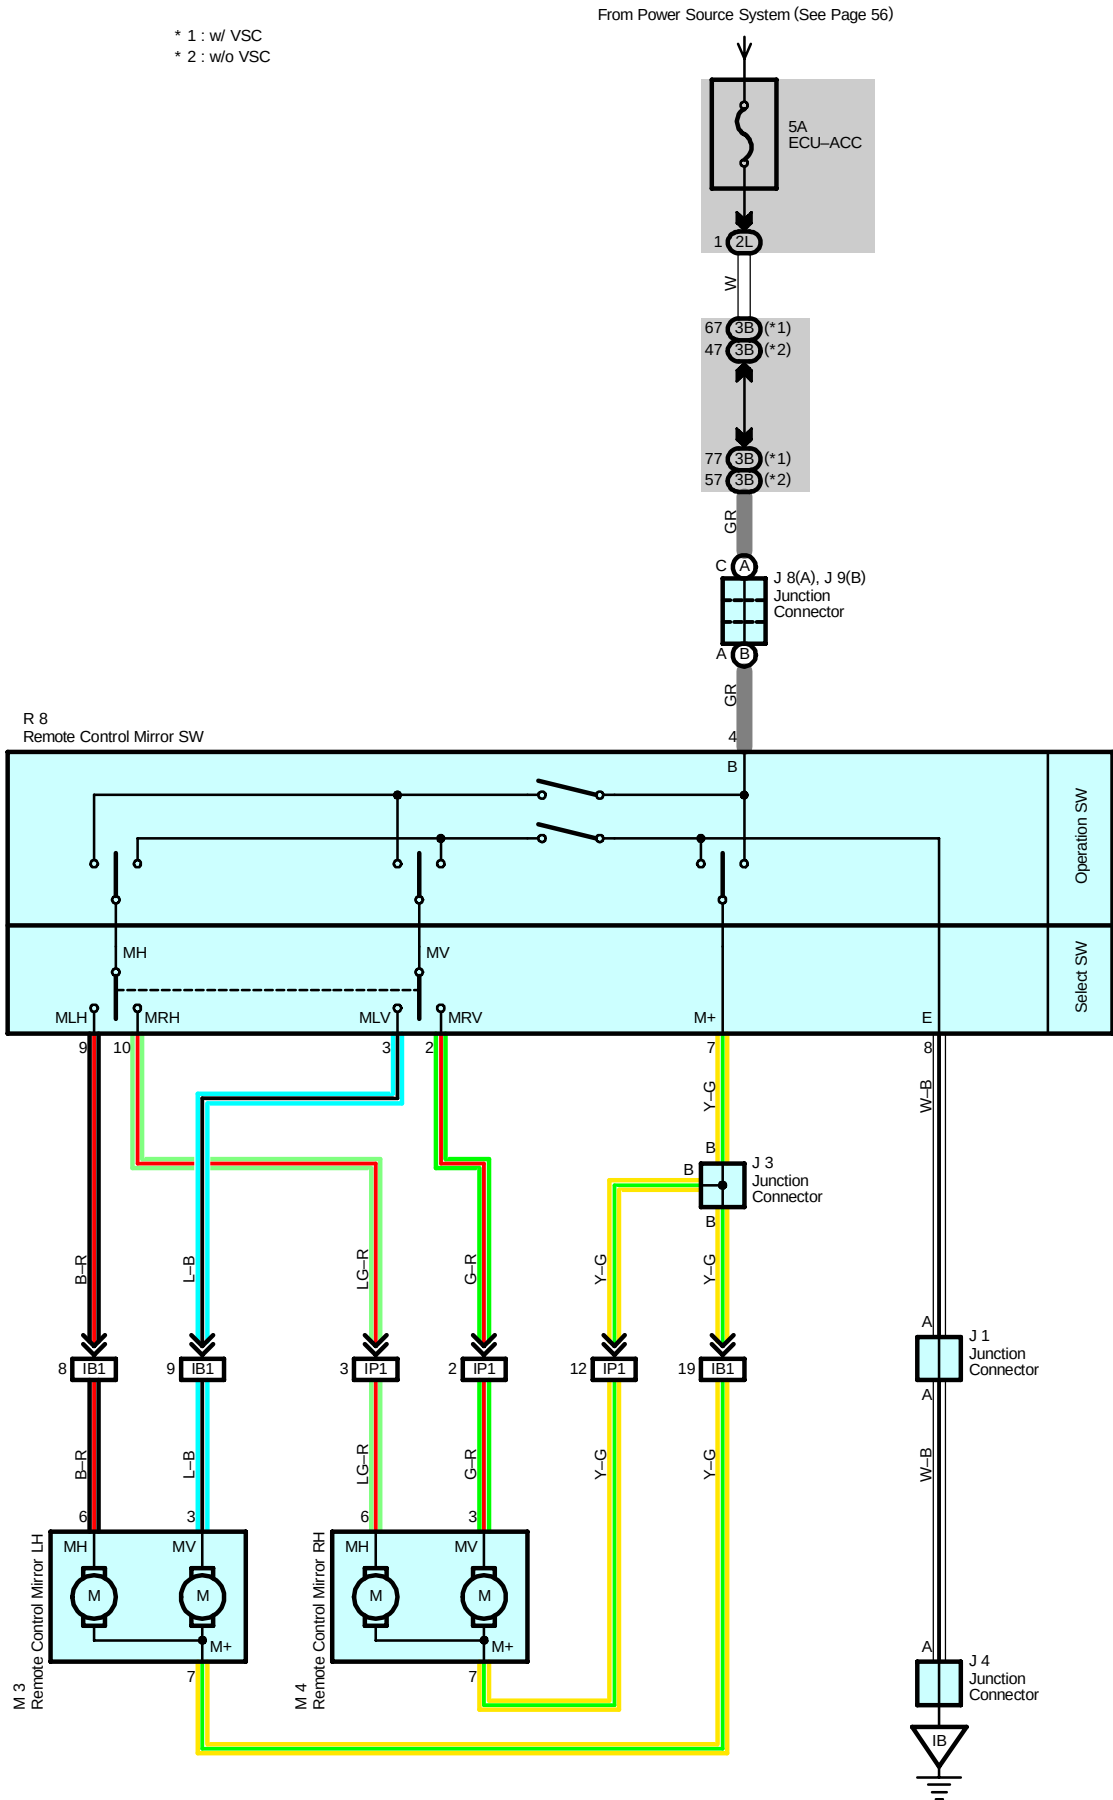

Service Hints

R8 Remote Control Mirror SW

4-Ground : Approx. 12 volts with ignition SW at ACC or ON position

8-Ground : Always continuity

○ : Parts Location

Code	See Page	Code		See Page	Code	See Page
J1	39	J8	A	39	M4	41
J3	39	J9	B	39	R8	39
J4	39	M3		41		

○ : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
2L	29	Instrument Panel Wire and Driver Side J/B (Lower Finish Panel)
3B	34 (w/ VSC) 35 (w/o VSC)	Instrument Panel Wire and Passenger Side J/B (Instrument Panel Brace RH)

□ : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IB1	46	Front Door LH Wire and Instrument Panel Wire (Left Kick Panel)
IP1	48	Front Door RH Wire and Instrument Panel Wire (Right Kick Panel)

▽ : Ground Points

Code	See Page	Ground Points Location
IB	46	Instrument Panel Brace LH