


Power Seat (Driver's Seat w/o Driving Position Memory)

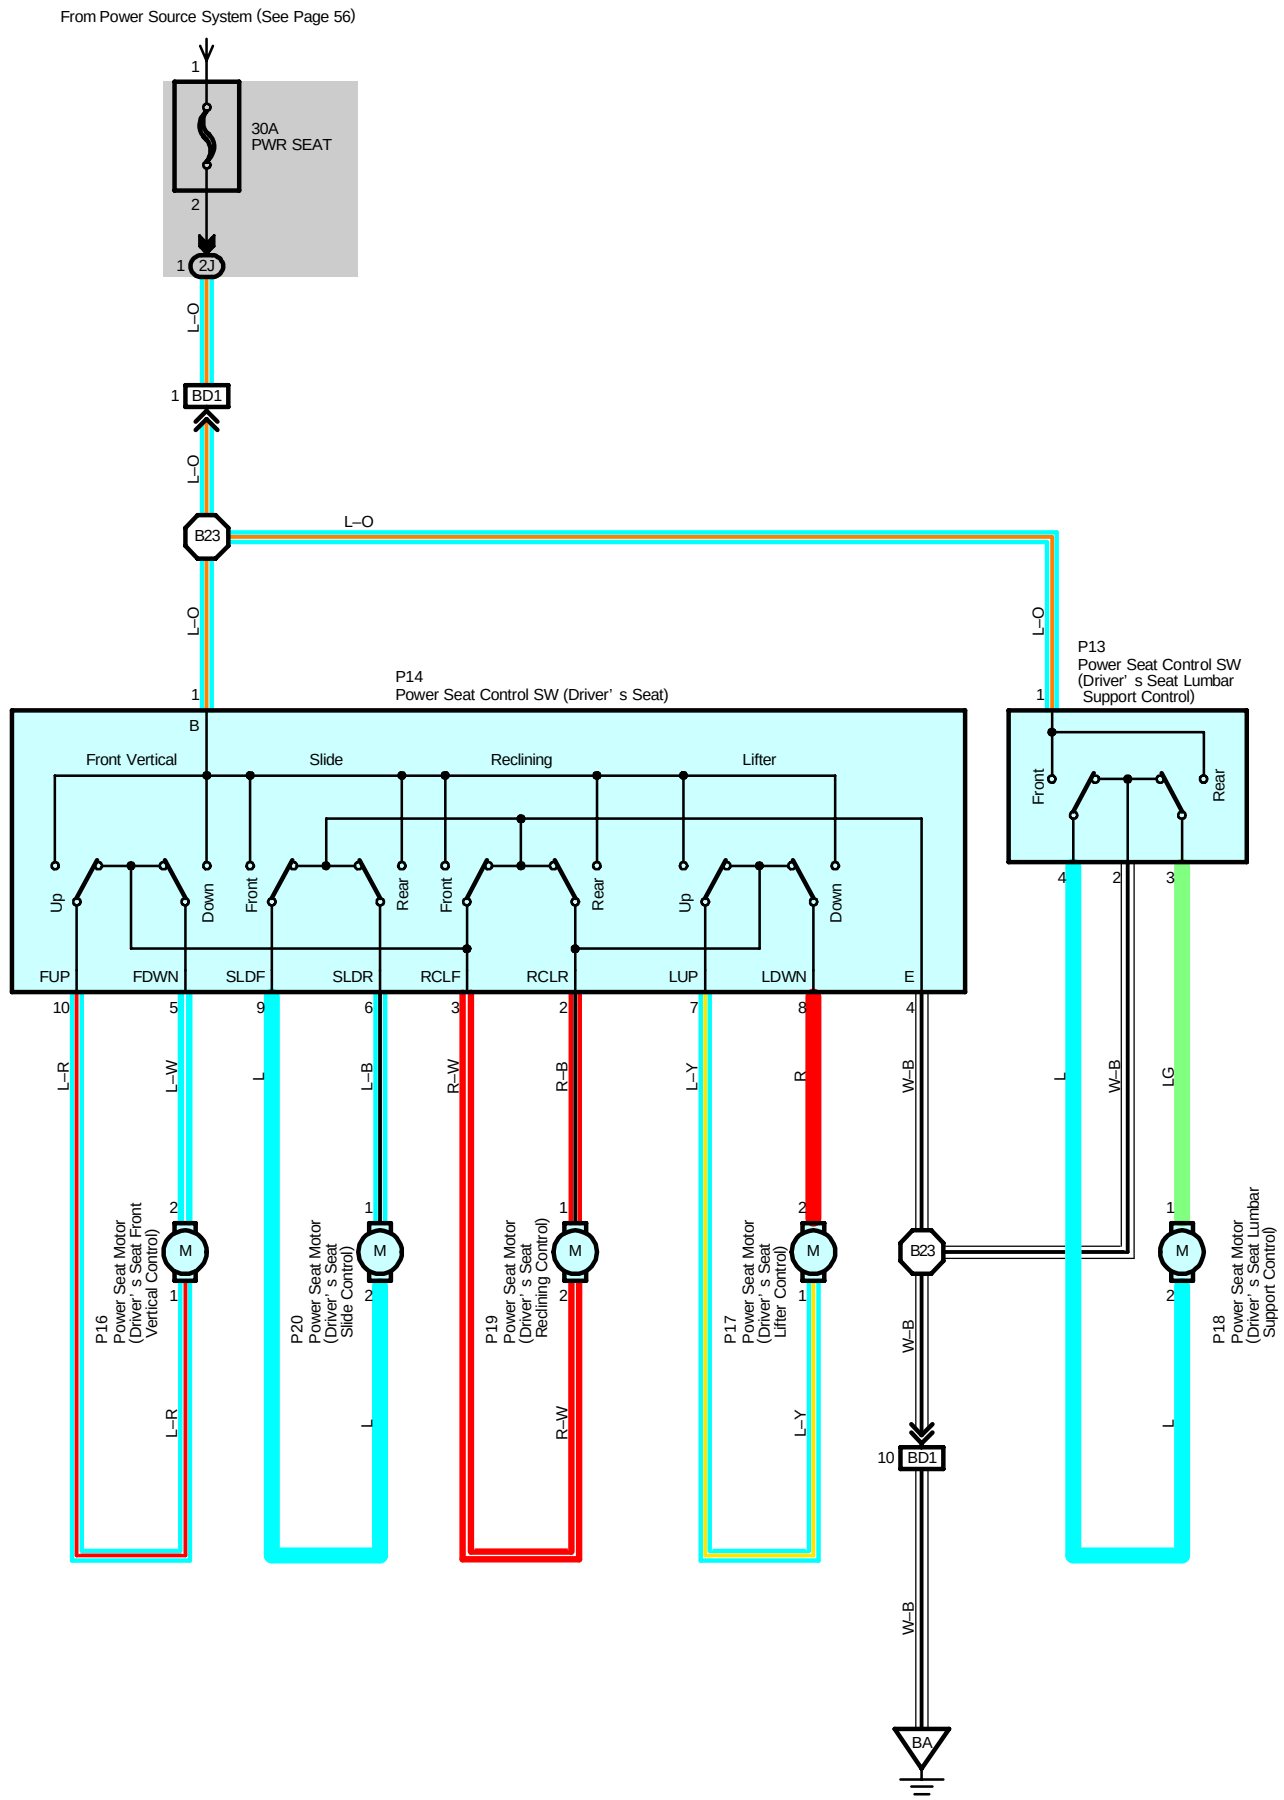

Service Hints

P14 Power Seat Control SW (Driver's Seat)

1-Ground : Always approx. 12 volts

4-Ground : Always continuity

: Parts Location

Code	See Page	Code	See Page	Code	See Page
P13	42	P17	42	P20	42
P14	42	P18	42		
P16	42	P19	42		

: Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
2J	28	Floor No.1 Wire and Driver Side J/B (Lower Finish Panel)

: Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
BD1	52	Floor No.1 Wire and Front Seat LH Wire (Under the Driver's Seat)

: Ground Points

Code	See Page	Ground Points Location
BA	50	Under the Driver's Seat

: Splice Points

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
B23	52	Front Seat LH Wire			