


Power Seat (Front Passenger's Seat)

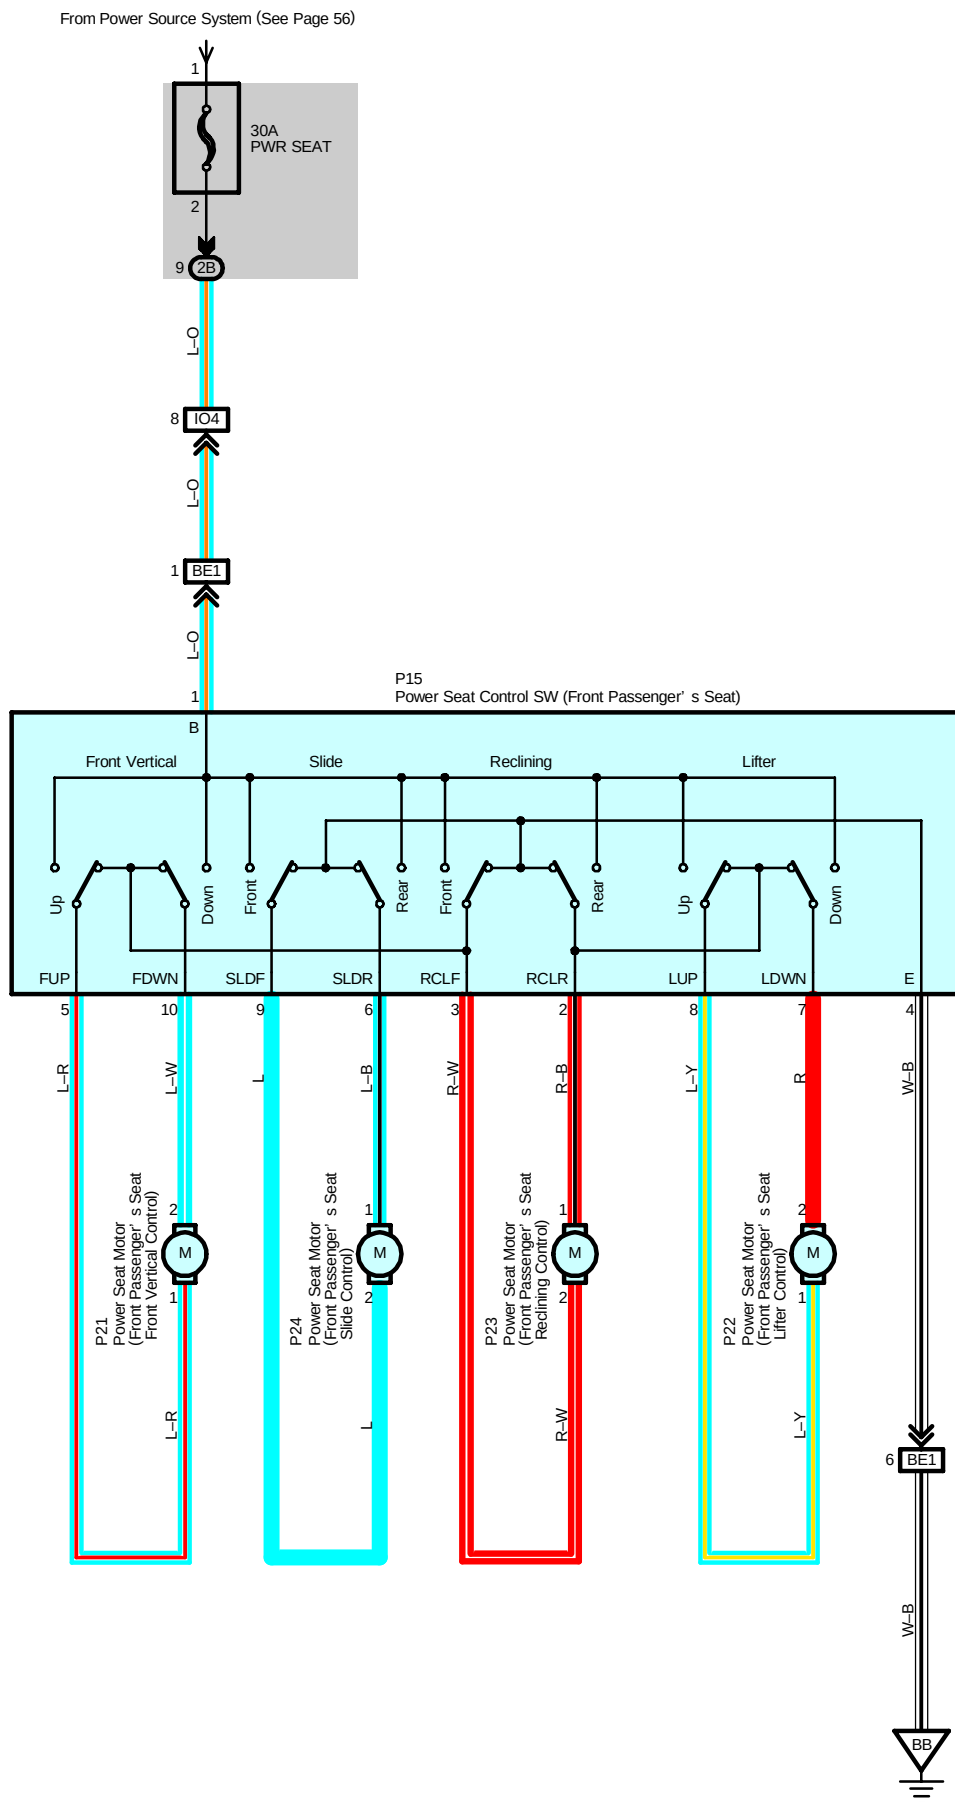

Service Hints

P15 Power Seat Control SW (Front Passenger's Seat)

1-Ground : Always approx. 12 volts

4-Ground : Always continuity

: Parts Location

Code	See Page	Code	See Page	Code	See Page
P15	42	P22	42	P24	42
P21	42	P23	42		

: Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
2B	28	Instrument Panel Wire and Driver Side J/B (Lower Finish Panel)

: Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IO4	48	Instrument Panel Wire and Floor No.2 Wire (Right Kick Panel)
BE1	52	Floor No.2 Wire and Front Seat RH Wire (Under the Front Passenger's Seat)

: Ground Points

Code	See Page	Ground Points Location
BB	50	Under the Front Passenger's Seat