



Moon Roof

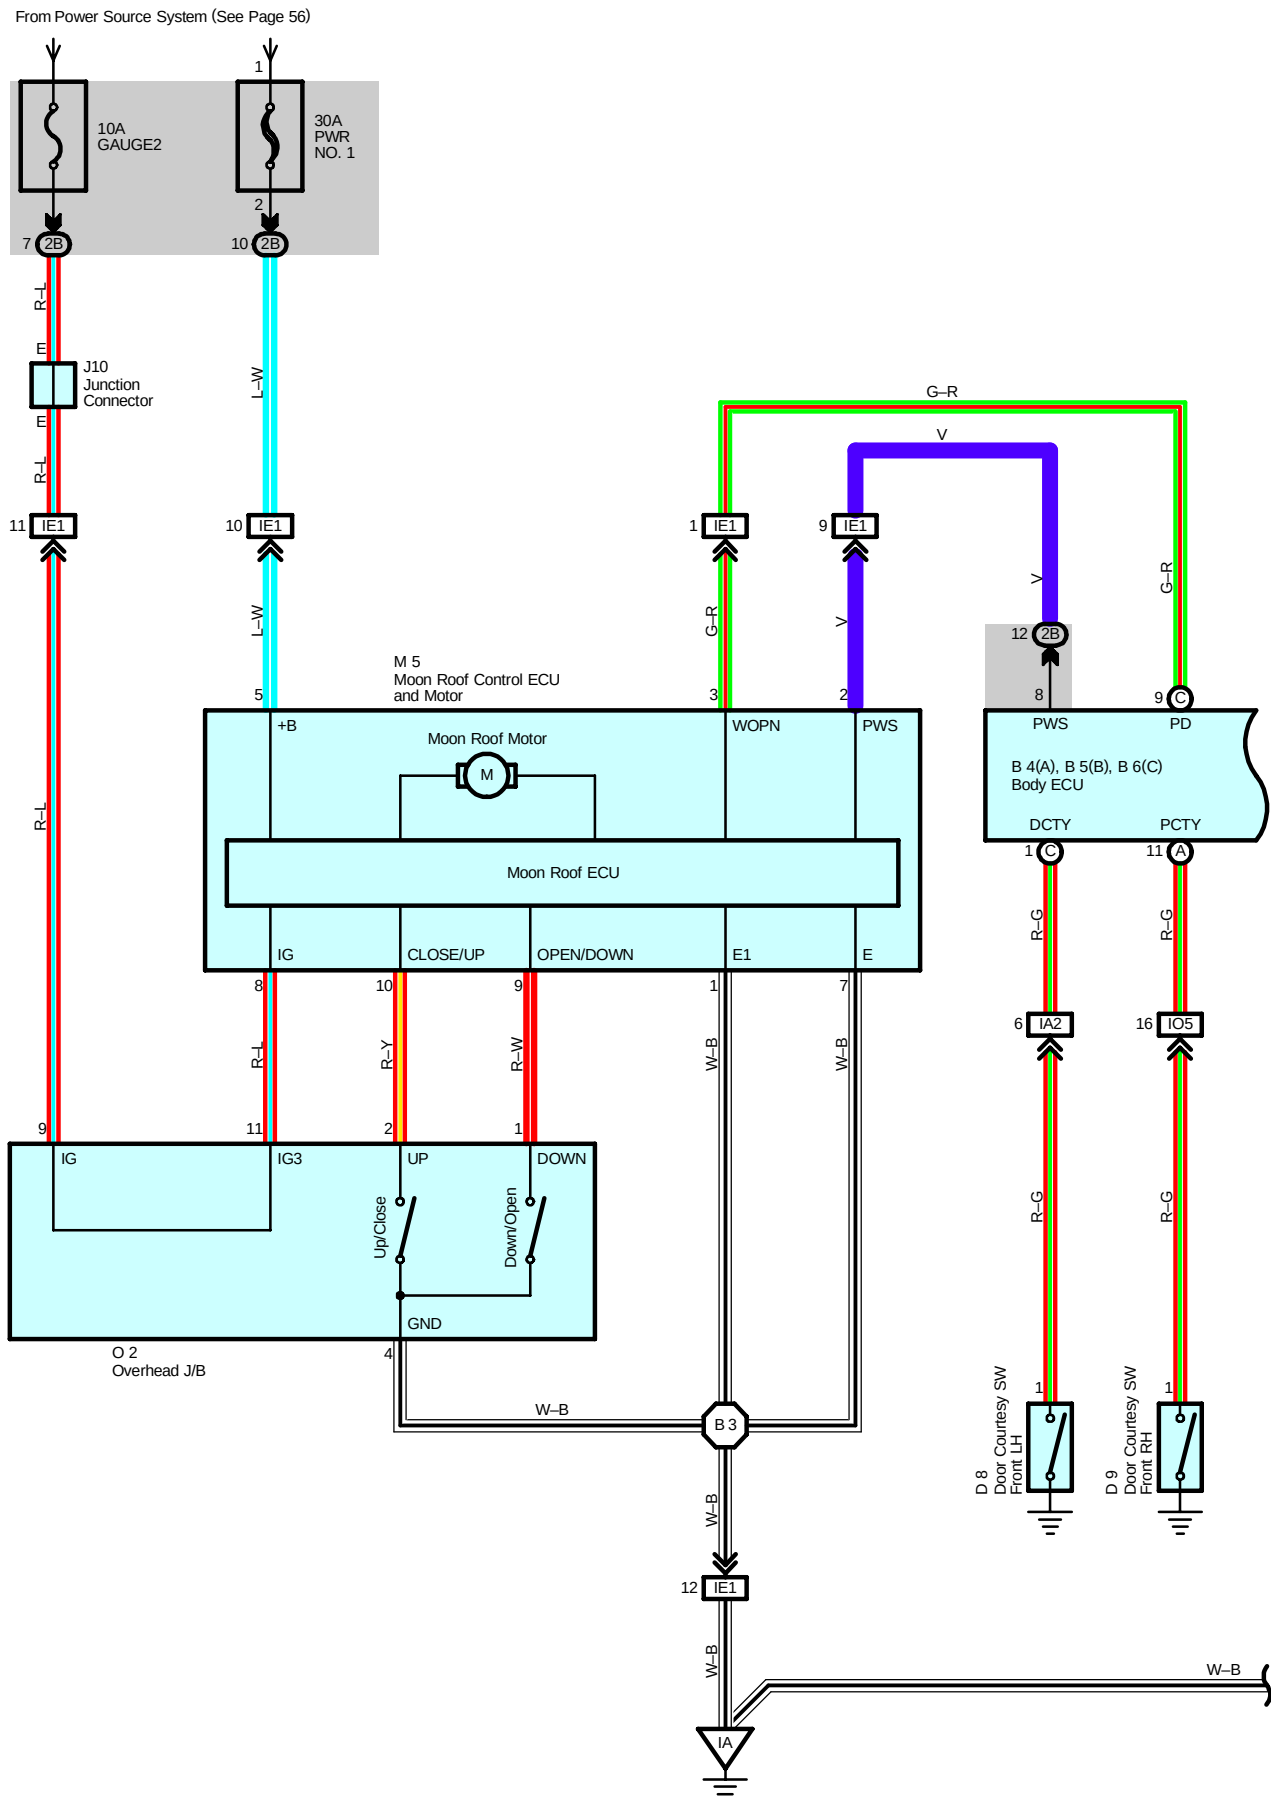

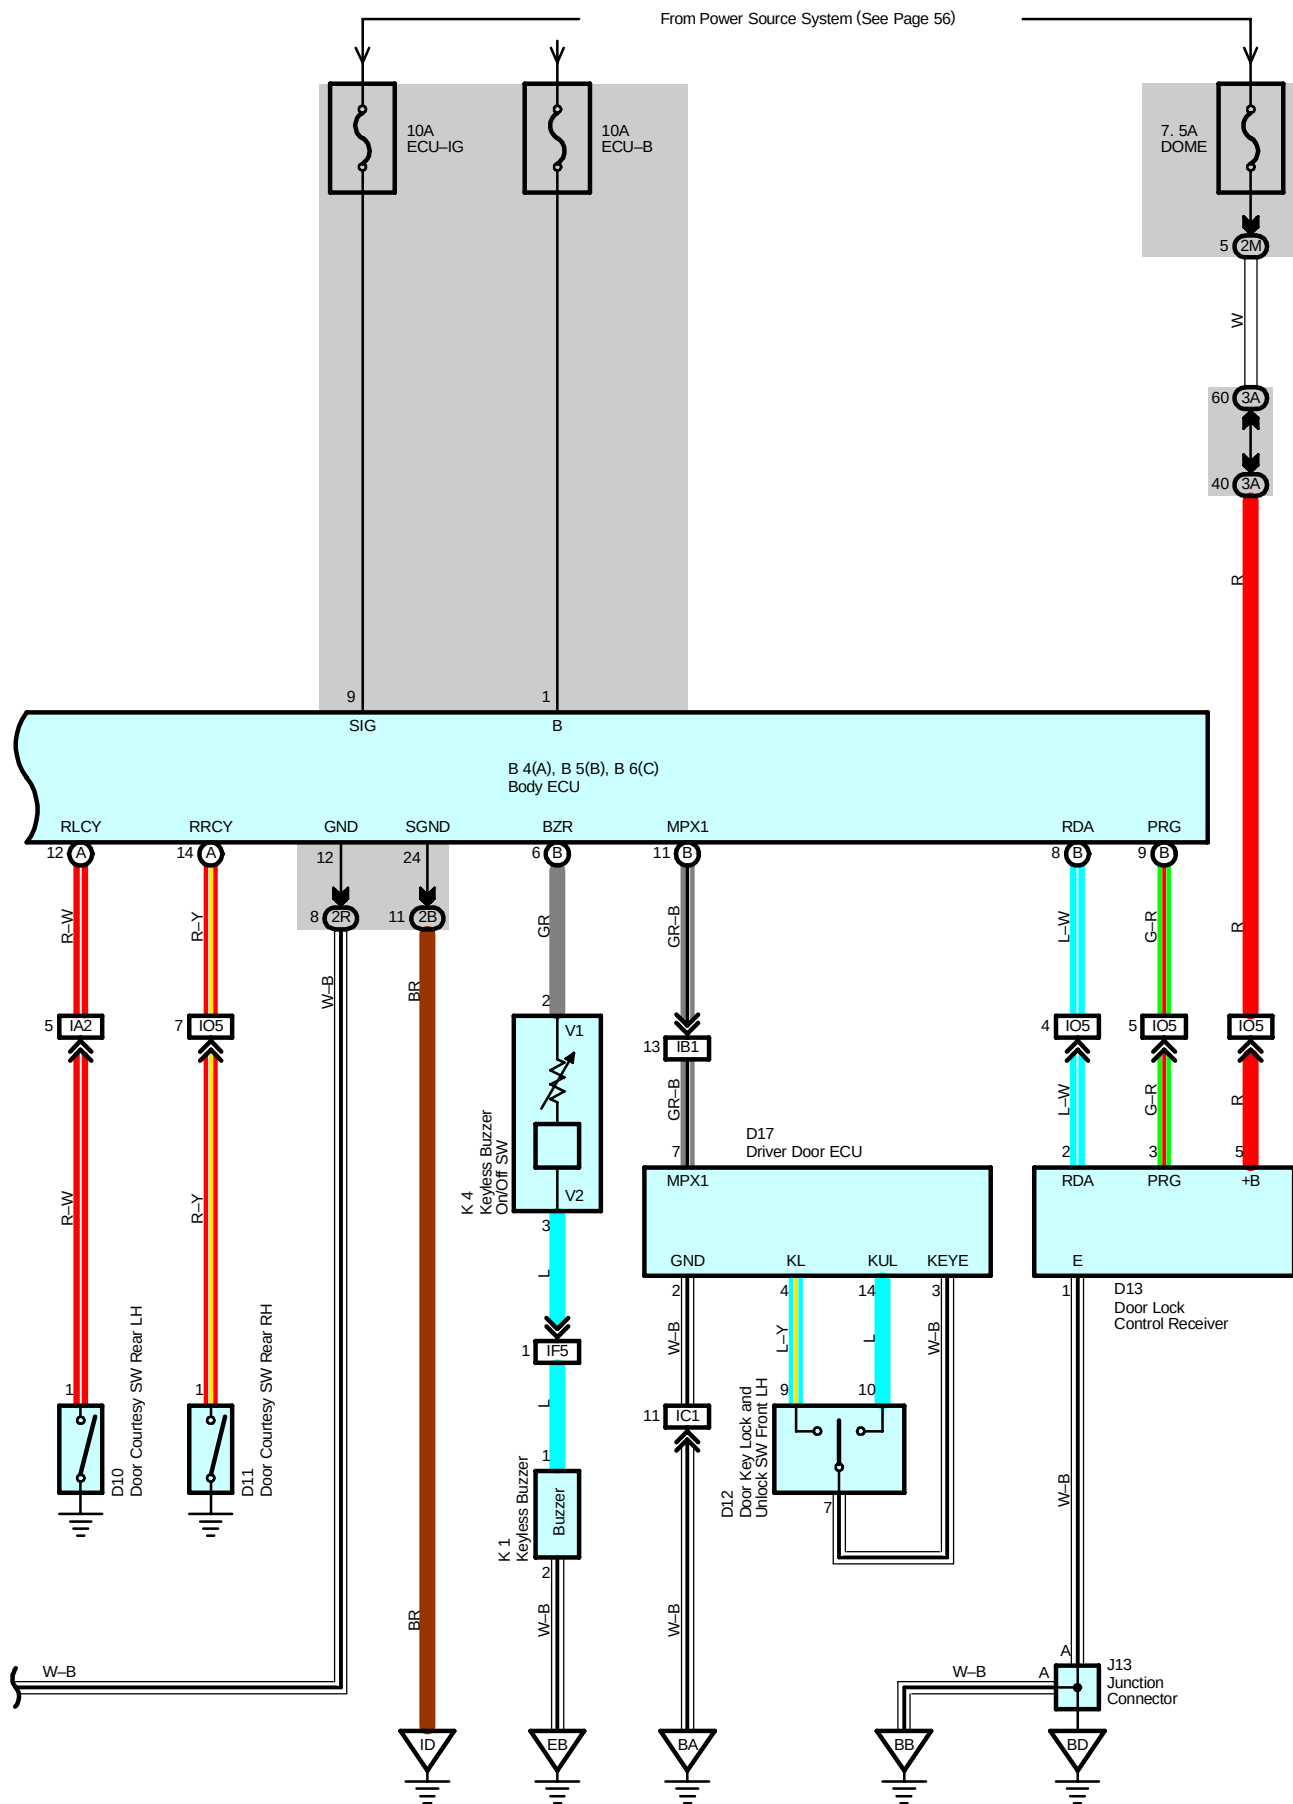

Moon Roof

Service Hints

M5 Moon Roof Control ECU and Motor

5–Ground : Always approx. 12 volts

7–Ground : Always continuity

: Parts Location

Code	See Page	Code	See Page	Code	See Page
B4	A 38	D11	40	K1	37
B5	B 38	D12	40	K4	39
B6	C 38	D13	40	M5	41
D8	40	D17	40	O2	41
D9	40	J10	39		
D10	40	J13	40		

: Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
2B	28	Instrument Panel Wire and Driver Side J/B (Lower Finish Panel)
2M	29	
2R		
3A	34 (w/ VSC)	Instrument Panel Wire and Passenger Side J/B (Instrument Panel Brace RH)
	35 (w/o VSC)	

: Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IA2	46	Instrument Panel Wire and Floor No.1 Wire (Left Kick Panel)
IB1	46	Front Door LH Wire and Instrument Panel Wire (Left Kick Panel)
IC1	46	Front Door LH Wire and Floor No.1 Wire (Left Kick Panel)
IE1	46	Instrument Panel Wire and Roof Wire (Lower Part of Front Pillar LH)
IF5	46	Engine Room Main Wire and Instrument Panel Wire (Right Side of Steering Column Tube)
IO5	48	Instrument Panel Wire and Floor No.2 Wire (Right Kick Panel)

: Ground Points

Code	See Page	Ground Points Location
EB	44	Right Fender
IA	46	Instrument Panel Reinforcement LH
ID	46	Instrument Panel Brace RH
BA	50	Under the Driver's Seat
BB	50	Under the Front Passenger's Seat
BD	50	Front Side of Rear Quarter Wheel House RH

: Splice Points

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
B3	50	Roof Wire			