


Seat Heater

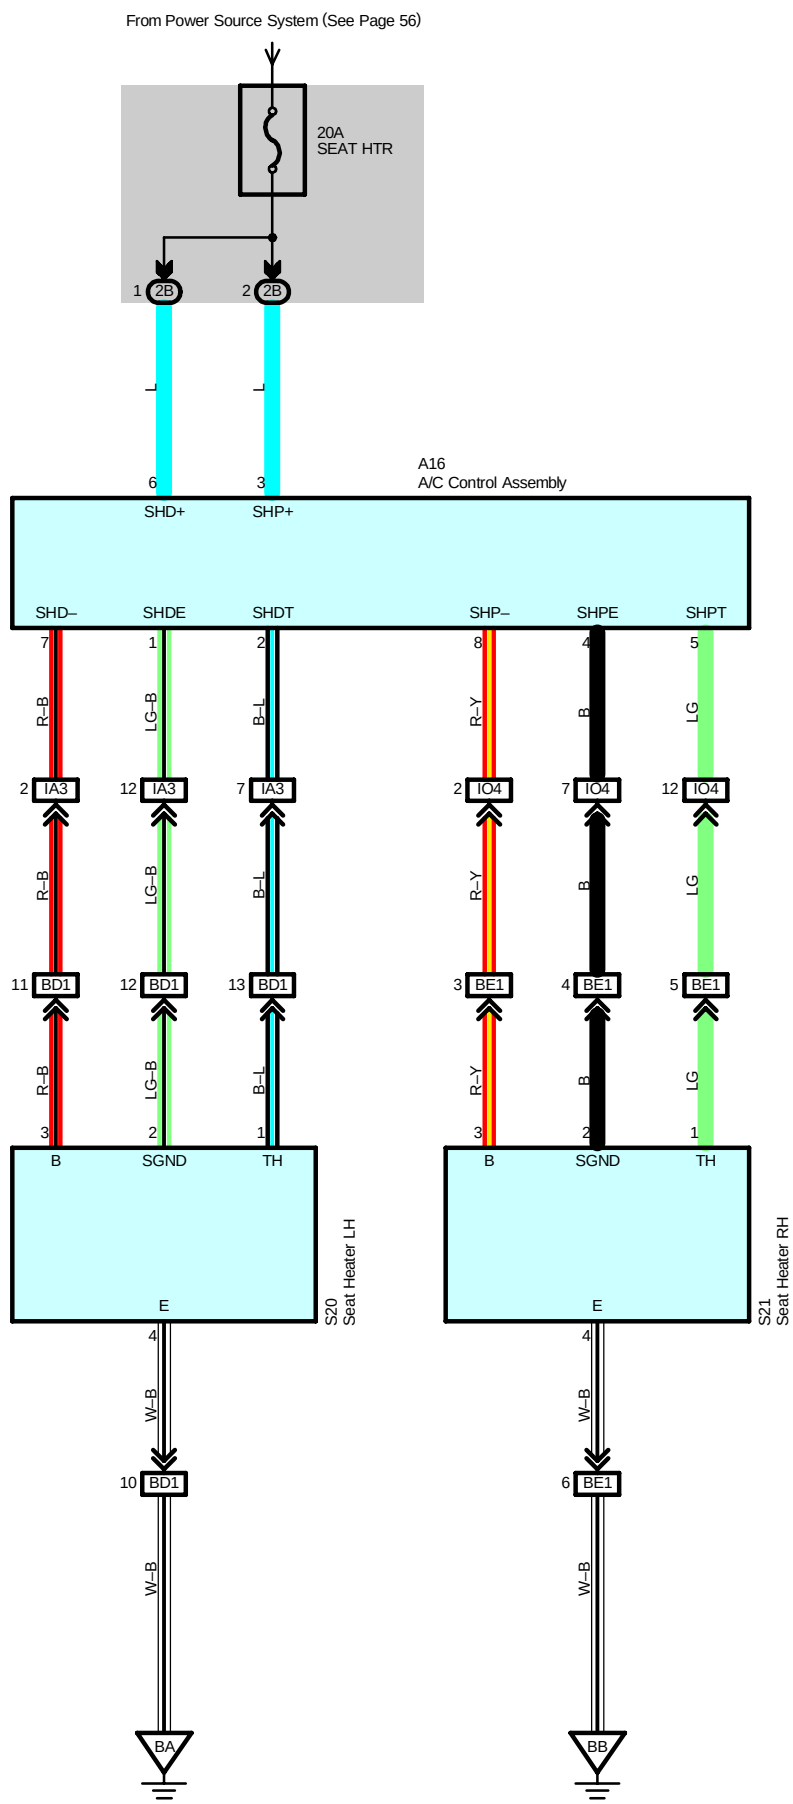

Service Hints

A16 A/C Control Assembly

3, 6–Ground : Approx. 12 volts with ignition SW at ON or ST position

: Parts Location

Code	See Page	Code	See Page	Code	See Page
A16	38	S20	42	S21	42

: Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
2B	28	Instrument Panel Wire and Driver Side J/B (Lower Finish Panel)

: Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IA3	46	Instrument Panel Wire and Floor No.1 Wire (Left Kick Panel)
IO4	48	Instrument Panel Wire and Floor No.2 Wire (Right Kick Panel)
BD1	52	Floor No.1 Wire and Front Seat LH Wire (Under the Driver's Seat)
BE1	52	Floor No.2 Wire and Front Seat RH Wire (Under the Front Passenger's Seat)

: Ground Points

Code	See Page	Ground Points Location
BA	50	Under the Driver's Seat
BB	50	Under the Front Passenger's Seat