 


242



Service Hints

B7 Buckle SW LH

6-1 : Closed with driver seat belt in use

B8 Buckle SW RH

6-1 : Closed with front passenger seat belt in use

T16, T17 Tension Reducer Solenoid LH, RH

1-Ground : Approx. 12 volts with ignition SW at ON or ST position

: Parts Location

Code	See Page	Code	See Page	Code	See Page
B7	42	H14	39	T16	41
B8	42	J10	39	T17	41

: Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
2B	28	Instrument Panel Wire and Driver Side J/B (Lower Finish Panel)
2H	28	Floor No.1 Wire and Driver Side J/B (Lower Finish Panel)

: Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IO4	48	Instrument Panel Wire and Floor No.2 Wire (Right Kick Panel)
IO5		

: Ground Points

Code	See Page	Ground Points Location
BA	50	Under the Driver's Seat
BB	50	Under the Front Passenger's Seat

: Splice Points

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
B9	50	Floor No.2 Wire			