



Cellular Mobile Telephone

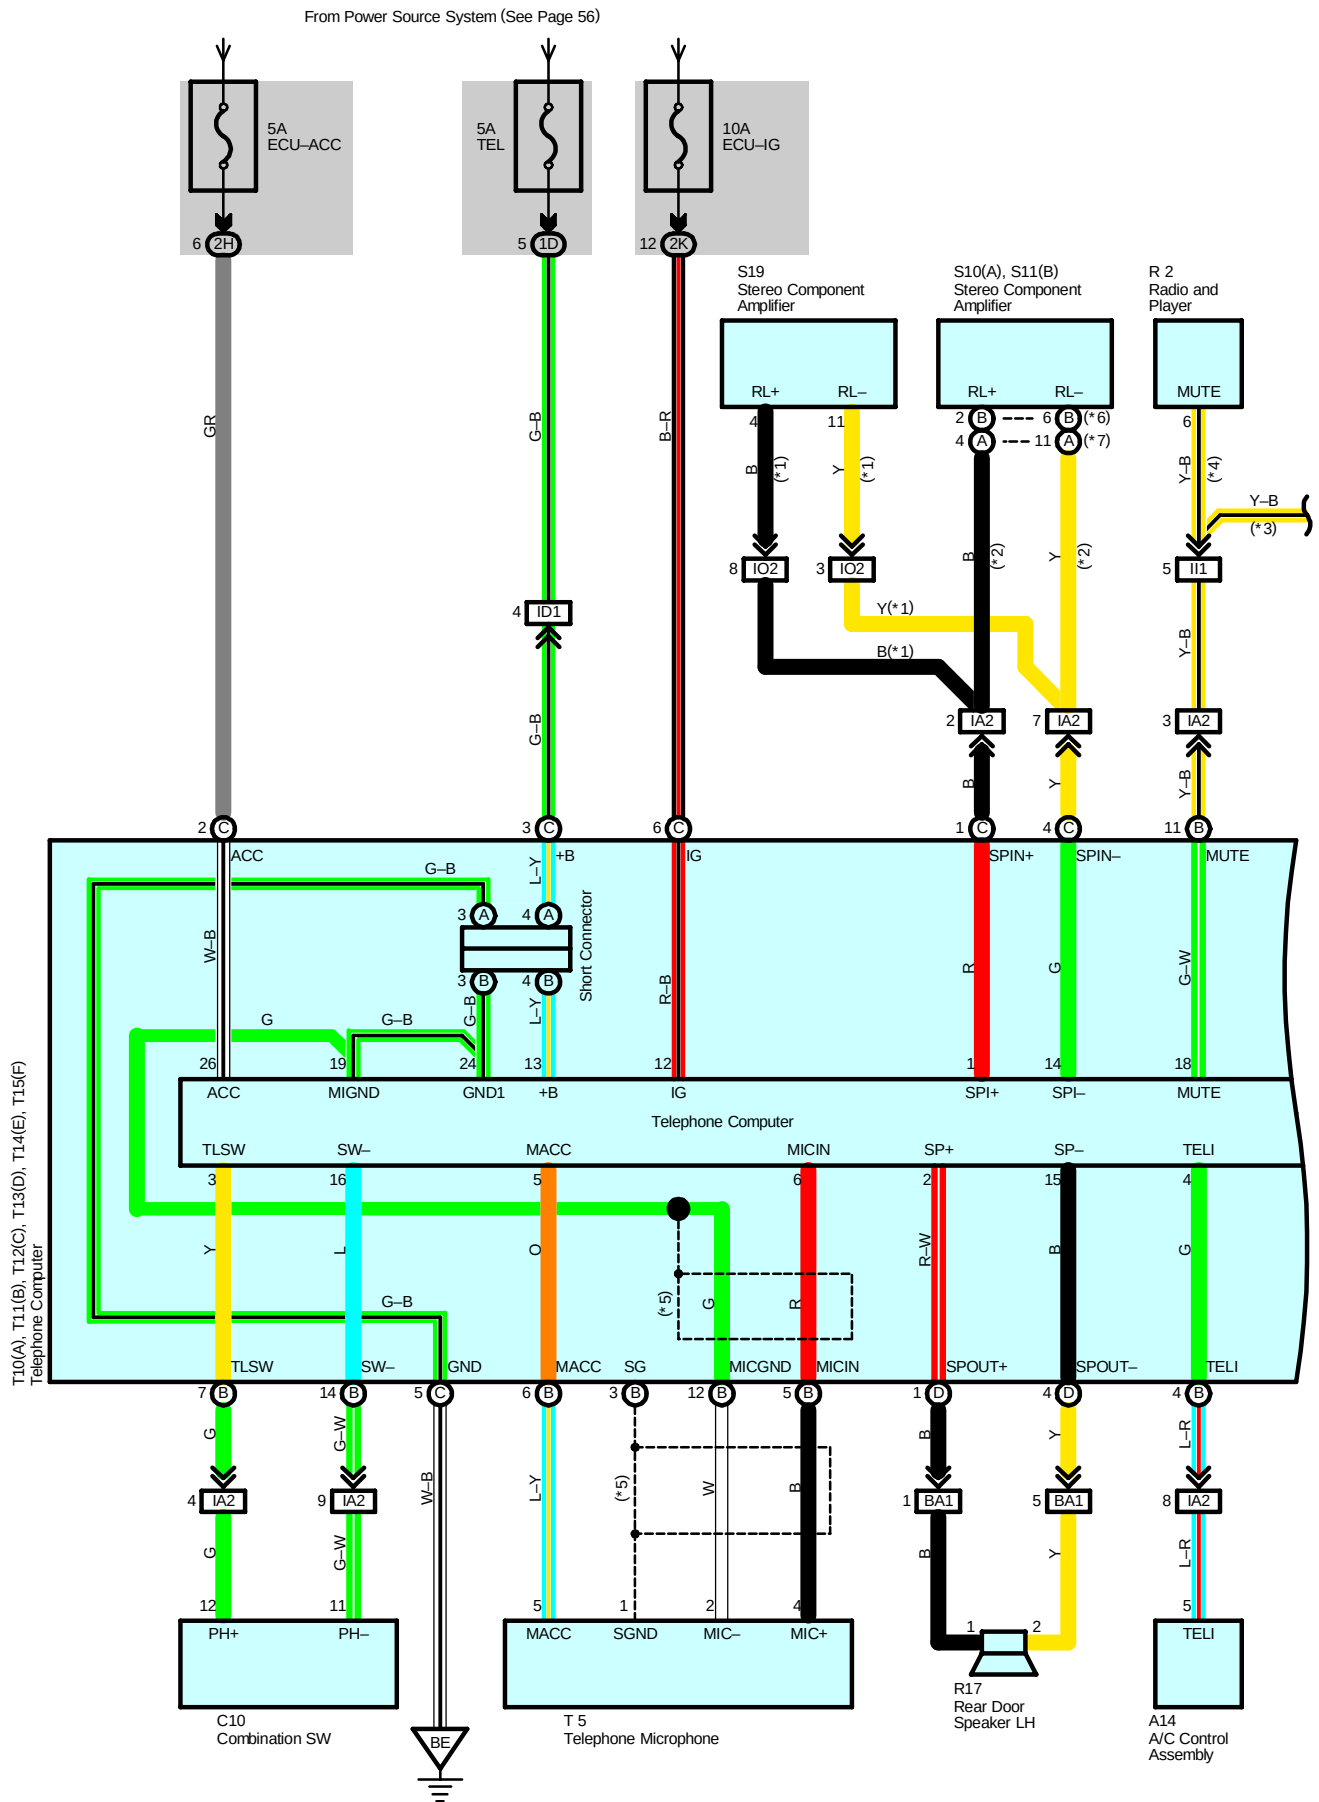

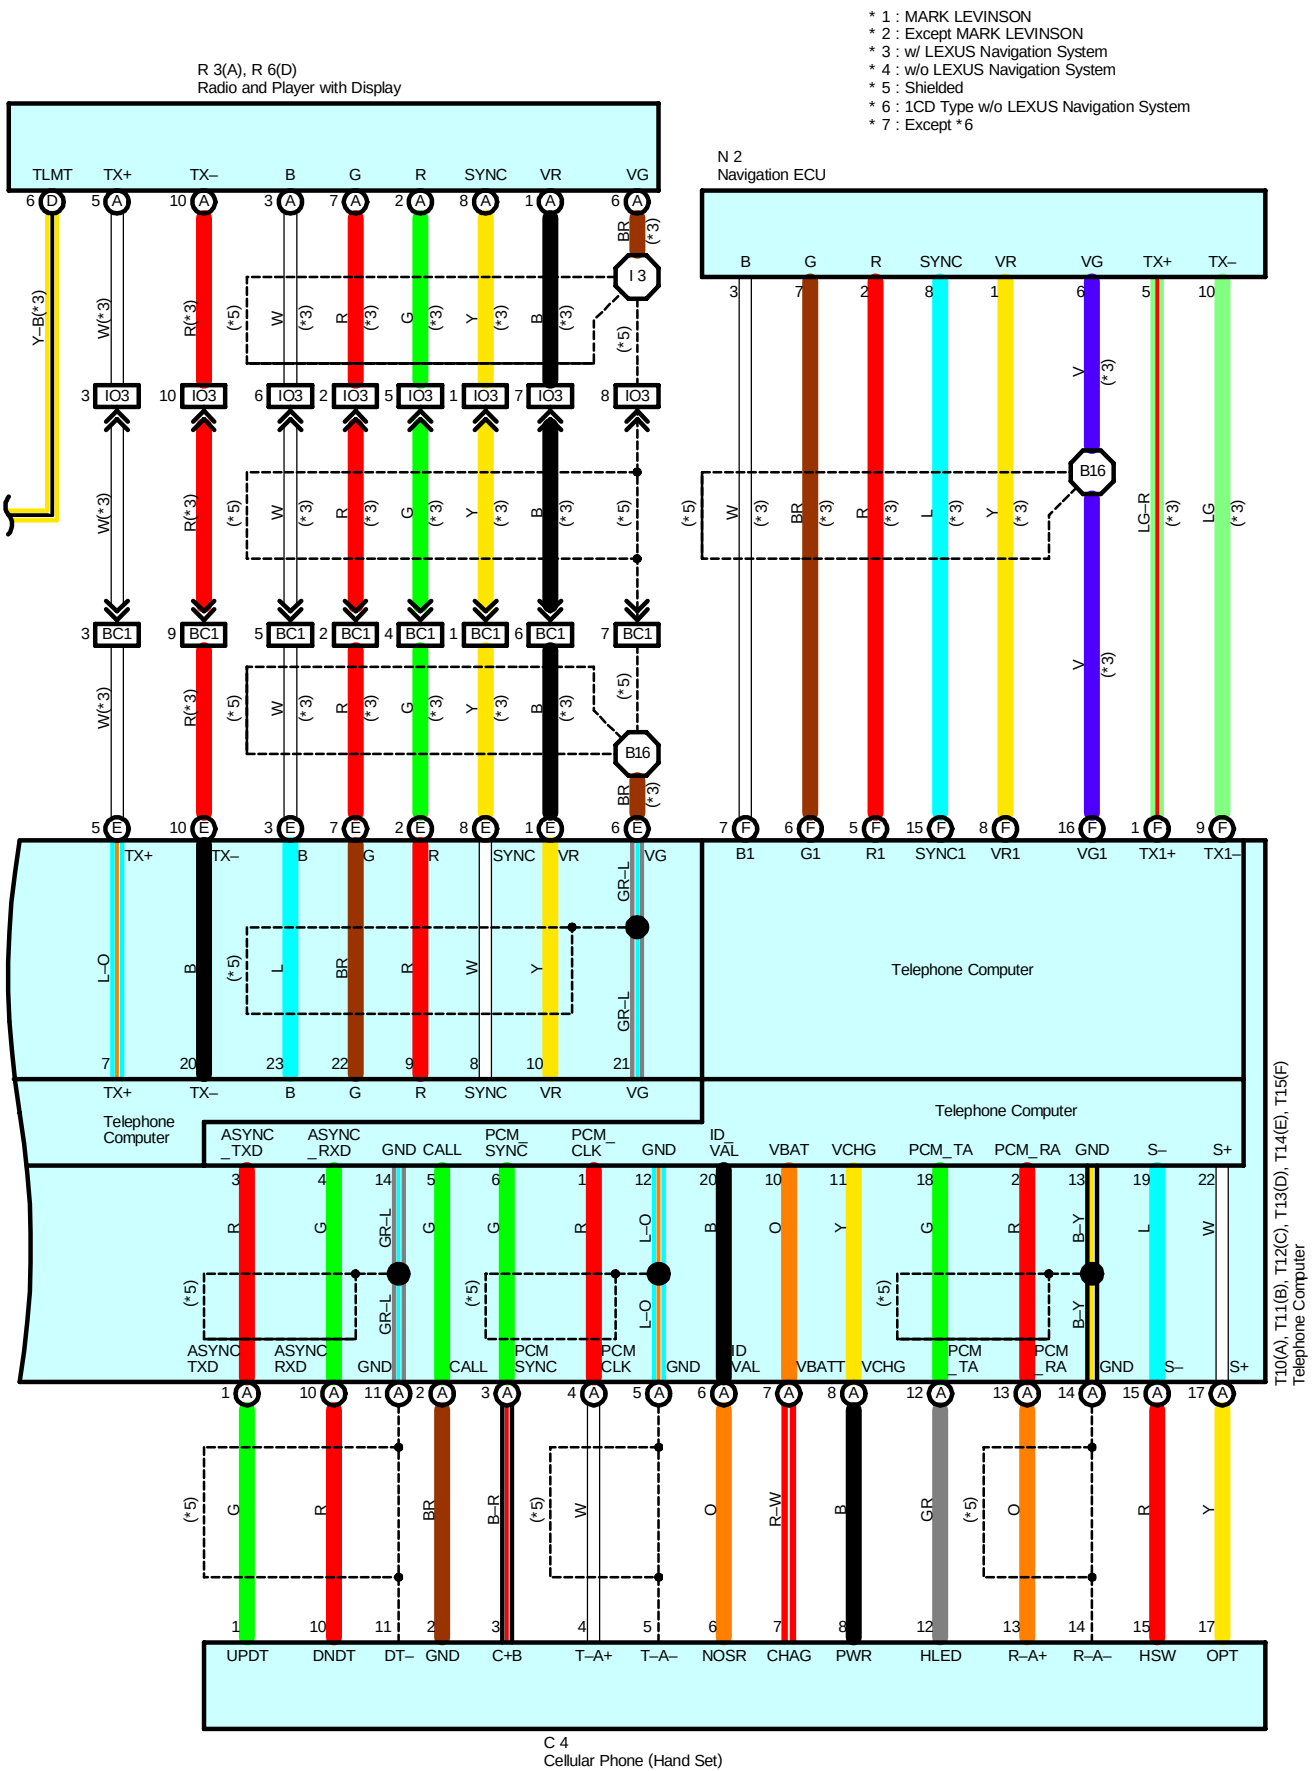

Cellular Mobile Telephone

Service Hints

T12 (C) Telephone Computer

- (C) 6—Ground : Approx. 12 volts with ignition SW at ON or ST position
- (C) 2—Ground : Approx. 12 volts with ignition SW at ON or ACC position
- (C) 3—Ground : Always approx. 12 volts
- (C) 5—Ground : Always continuity

○ : Parts Location

Code		See Page		Code		See Page		Code		See Page	
A14		38		R6	D	39		T10	A	41	
C4		38		R17		41		T11	B	41	
C10		38		S10	A	39		T12	C	41	
N2		41		S11	B	39		T13	D	41	
R2		39		S19		41		T14	E	41	
R3	A	39		T5		39		T15	F	41	

○ : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1D	25	Engine Room Main Wire and Engine Room J/B (Engine Compartment Left)
2H	28	Floor No.1 Wire and Driver Side J/B (Lower Finish Panel)
2K		

□ : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IA2	46	Instrument Panel Wire and Floor No.1 Wire (Left Kick Panel)
ID1	46	Engine Room Main Wire and Floor No.1 Wire (Left Side of Driver Side J/B)
II1	48	Instrument Panel Wire and Instrument Panel No.2 Wire (Behind the A/C Control Assembly)
IO2	48	Instrument Panel Wire and Floor No.2 Wire (Right Kick Panel)
IO3		
BA1	50	Rear Door No.2 Wire and Floor No.1 Wire (Left Center Pillar)
BC1	50	Floor No.1 Wire and Floor No.2 Wire (Behind the Rear Passenger's Seat RH)

▽ : Ground Points

Code	See Page	Ground Points Location
BE	50	Lower Back Panel Center

○ : Splice Points

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
I3	48	Instrument Panel Wire	B16	50	Floor No.1 Wire