



Radio and Player (MARK LEVINSON w/o Navigation System)

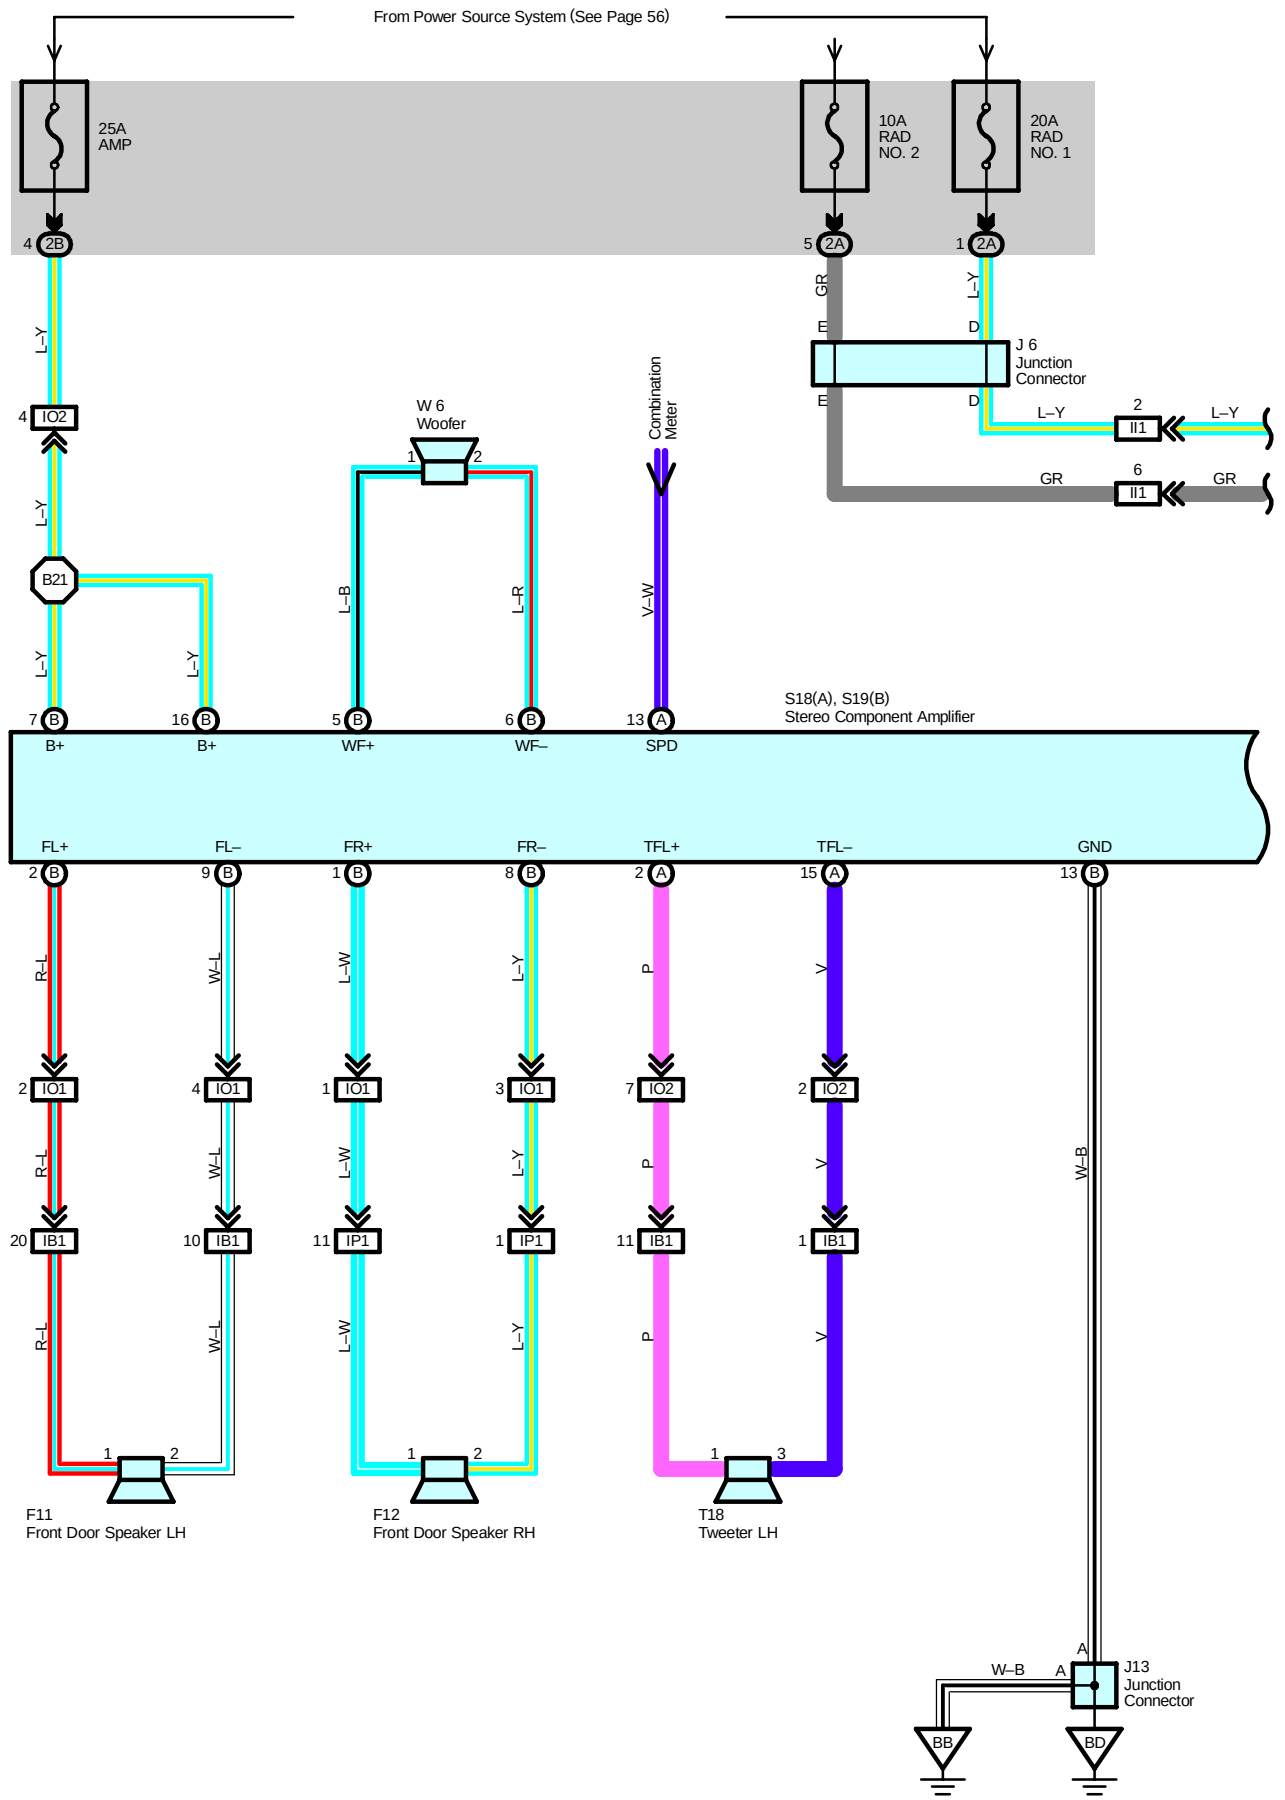

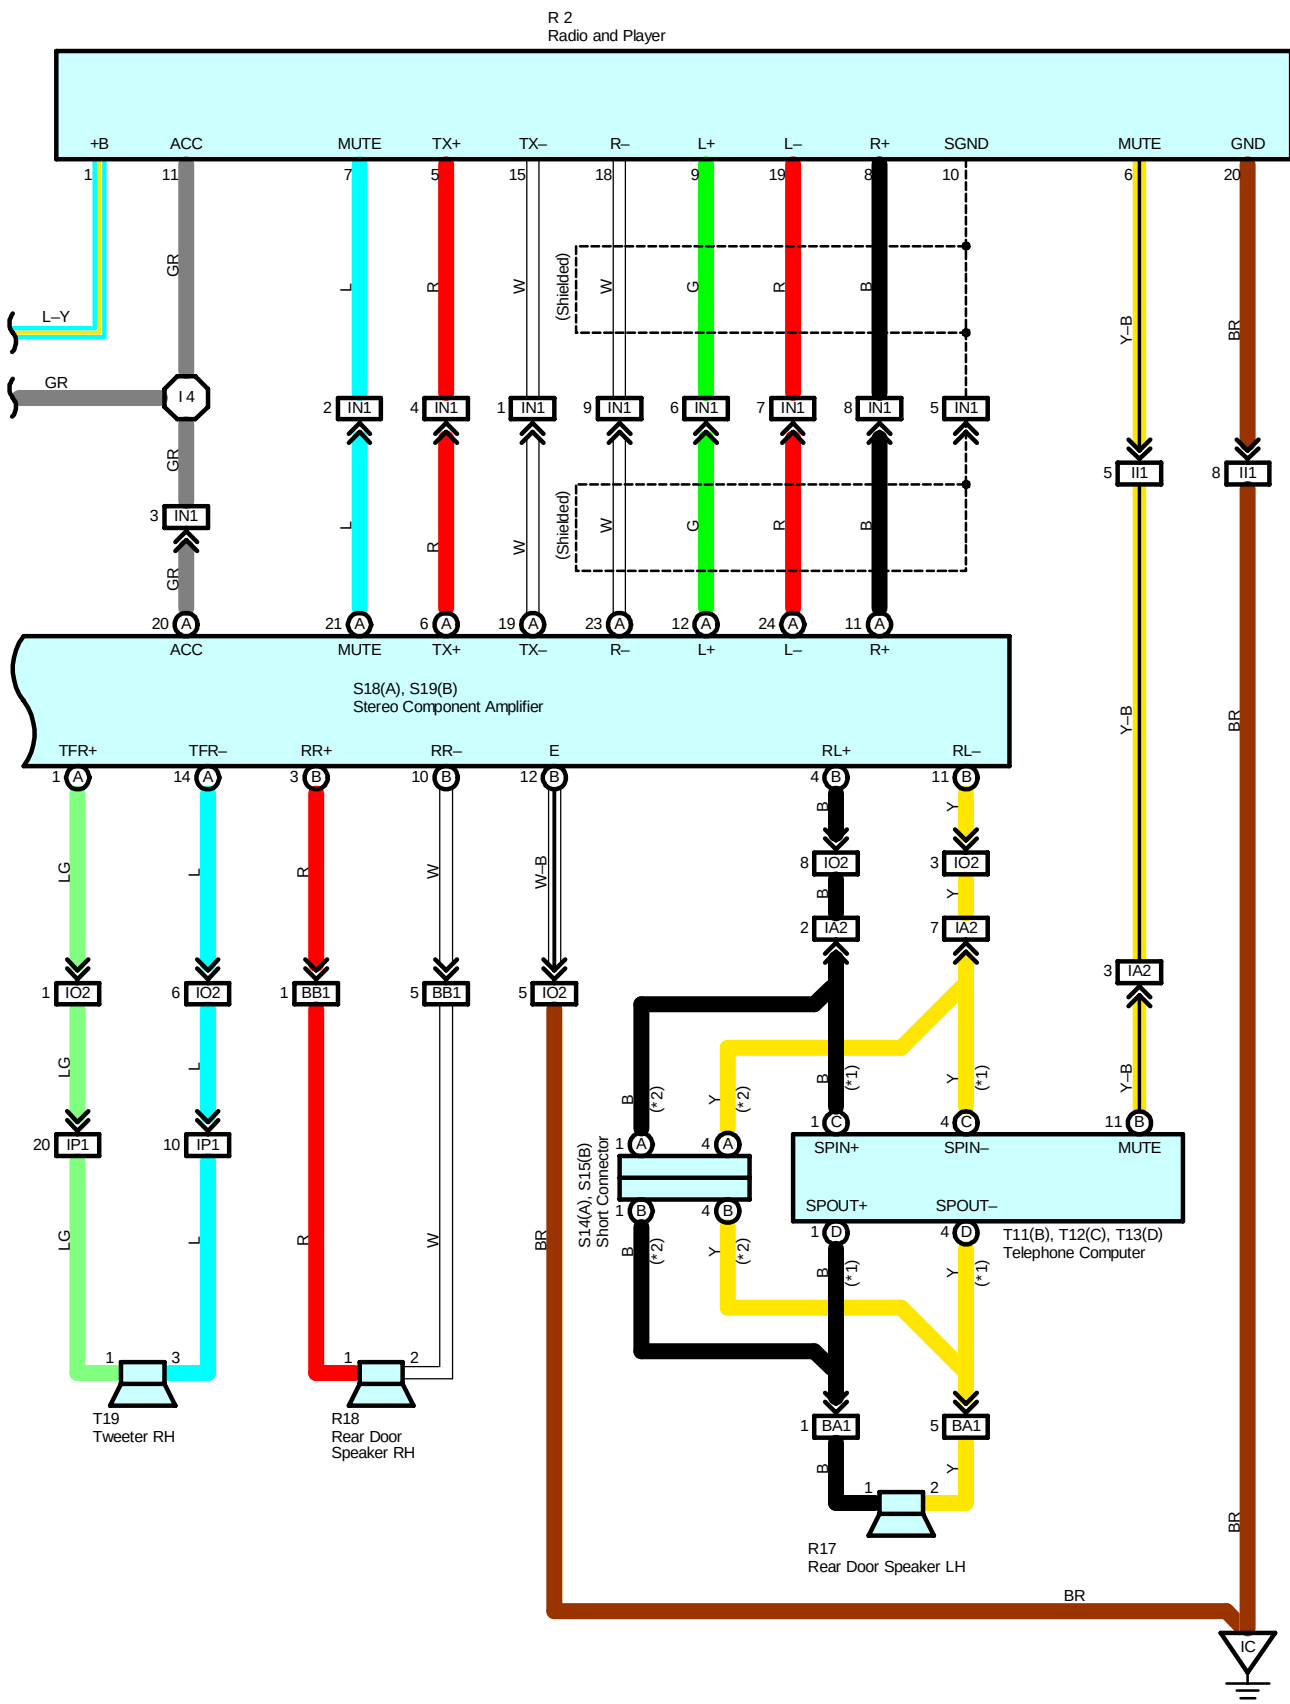

Radio and Player (MARK LEVINSON w/o LEXUS Navigation System)

Service Hints

R2 Radio and Player

11–Ground : Approx. 12 volts with ignition SW at ACC or ON position

1–Ground : Always approx. 12 volts

20–Ground : Always continuity

S18 (A), S19 (B) Stereo Component Amplifier

(A) 20–Ground : Approx. 12 volts with ignition SW at ACC or ON position

(B) 7, (B) 16–Ground : Always approx. 12 volts

(B) 12, (B) 13–Ground : Always continuity

○ : Parts Location

Code	See Page	Code	See Page	Code	See Page
F11	40	R18	41	T12	C 41
F12	40	S14	A 41	T13	D 41
J6	39	S15	B 41	T18	41
J13	40	S18	A 41	T19	41
R2	39	S19	B 41	W6	41
R17	41	T11	B 41		

○ : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
2A	28	Instrument Panel Wire and Driver Side J/B (Lower Finish Panel)
2B		

□ : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IA2	46	Instrument Panel Wire and Floor No.1 Wire (Left Kick Panel)
IB1	46	Front Door LH Wire and Instrument Panel Wire (Left Kick Panel)
II1	48	Instrument Panel Wire and Instrument Panel No.2 Wire (Behind the A/C Control Assembly)
IN1	48	Instrument Panel No.2 Wire and Floor No.2 Wire (Right Kick Panel)
IO1	48	Instrument Panel Wire and Floor No.2 Wire (Right Kick Panel)
IO2		
IP1	48	Front Door RH Wire and Instrument Panel Wire (Right Kick Panel)
BA1	50	Rear Door No.2 Wire and Floor No.1 Wire (Left Center Pillar)
BB1	50	Rear Door No.1 Wire and Floor No.2 Wire (Right Center Pillar)

▽ : Ground Points

Code	See Page	Ground Points Location
IC	46	Instrument Panel Brace RH
BB	50	Under the Front Passenger's Seat
BD	50	Front Side of Rear Quarter Wheel House RH

○ : Splice Points

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
I4	48	Instrument Panel No.3 Wire	B21	50	Floor No.2 Wire