



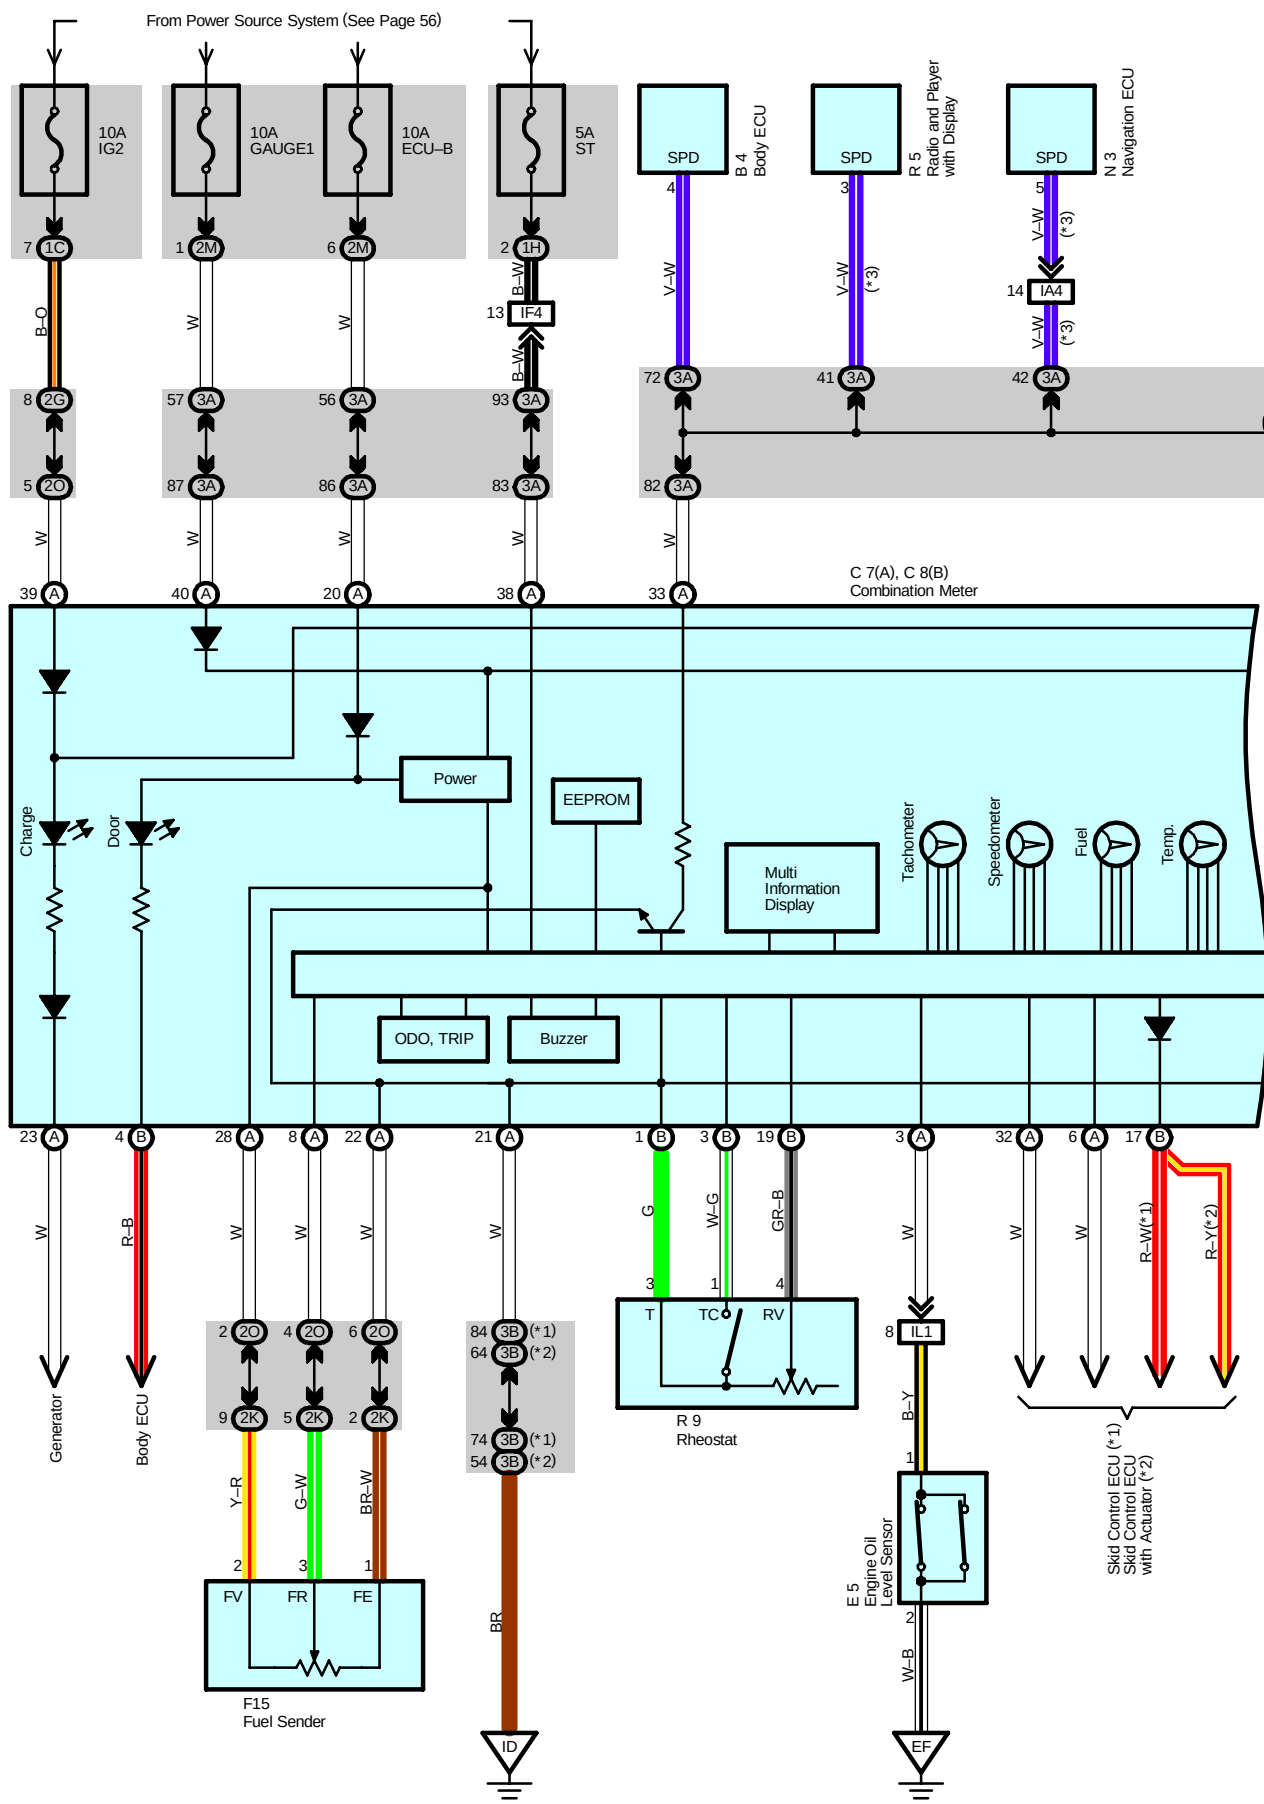

Combination Meter

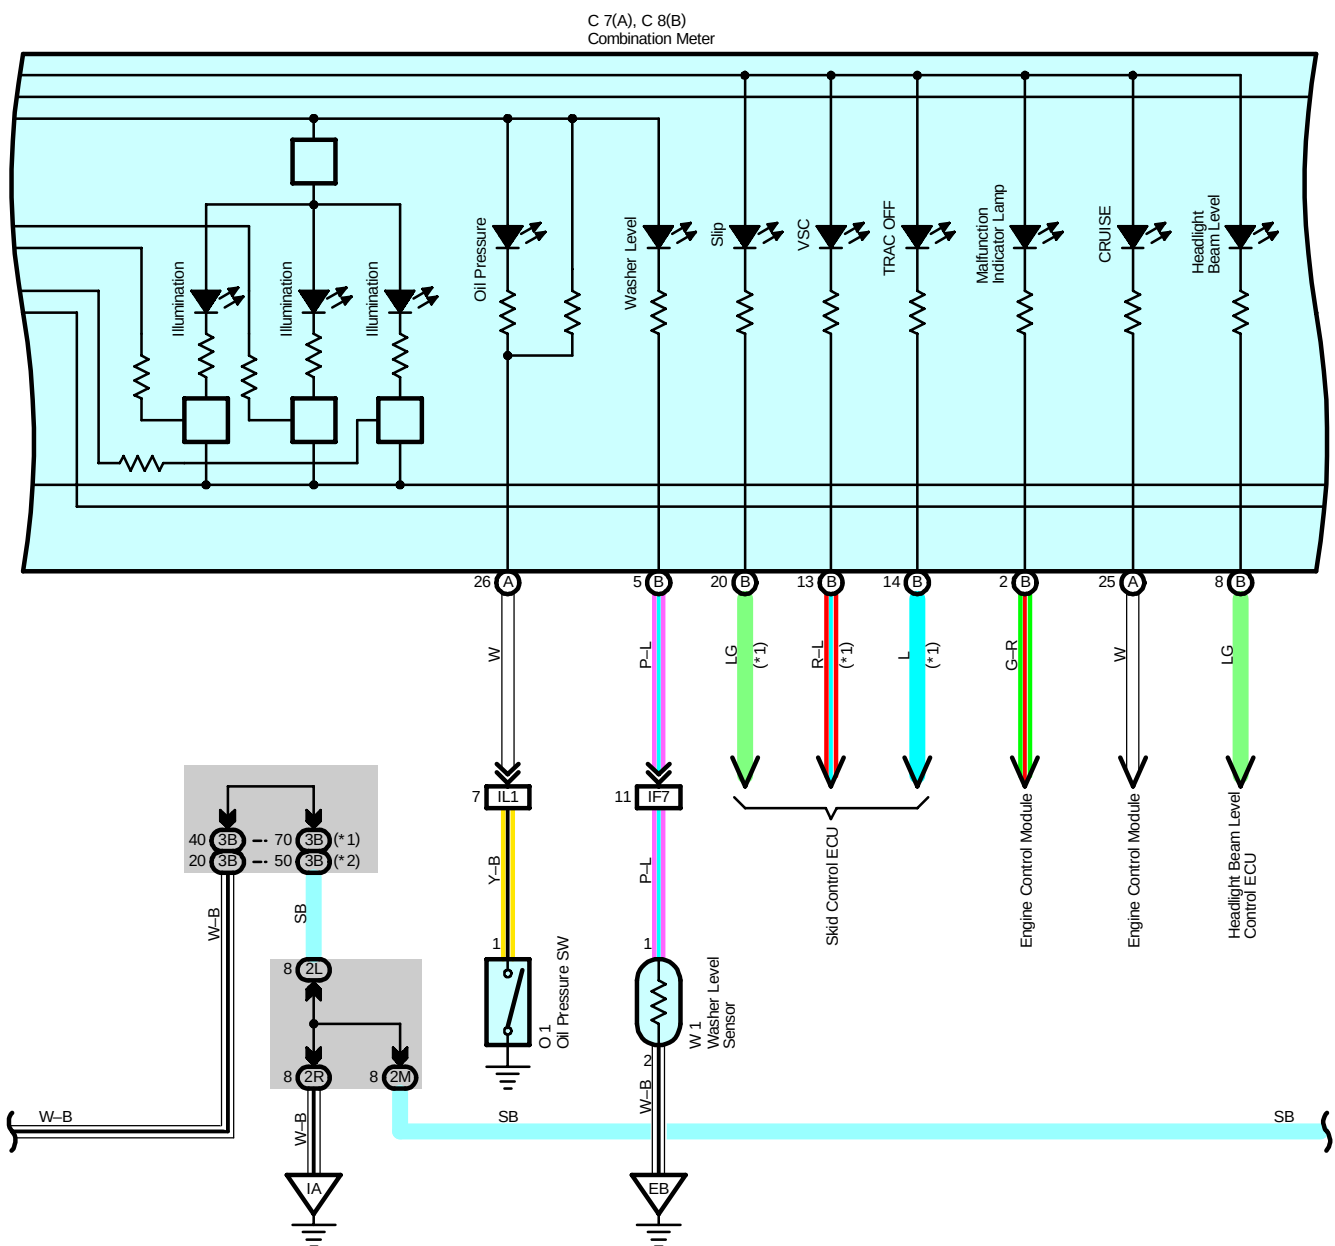

- * 1 : w/ VSC
- * 2 : w/o VSC
- * 5 : w/ Daytime Running Light
- * 6 : w/o Daytime Running Light
- * 7 : Except USA



Combination Meter

Service Hints

B1 Brake Fluid Level Warning SW

1-2 : Closed with the float down

C7 (A) Combination Meter

(A)40-Ground : Approx. 12 volts with ignition SW at ON or ST position

(A)20-Ground : Always approx. 12 volts

(A) 1, (A) 2, (A) 21-Ground : Always continuity

(A)39-Ground : Approx. 12 volts with ignition SW at ON or ST position

O1 Oil Pressure SW

1-Ground : Continuity with the oil pressure above approx. 20 kpa (2.8 psi, 0.2 kgf/cm²)

○ : Parts Location

Code		See Page	Code		See Page	Code	See Page
A14	A	38	C10		38	N3	41
A15	B	38	E5		36	O1	37
B1		36	E7		38	R5	39
B4		38	F15		40	R9	39
C7	A	38	J8	A	39	S18	41
C8	B	38	J9	B	39	W1	37

○ : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
1	22	Engine Room R/B (Engine Compartment Left)

○ : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1C	25	Engine Room Main Wire and Engine Room J/B (Engine Compartment Left)
1H		
2G	28	Engine Room Main Wire and Driver Side J/B (Lower Finish Panel)
2K	28	Floor No.1 Wire and Driver Side J/B (Lower Finish Panel)
2L	29	Instrument Panel Wire and Driver Side J/B (Lower Finish Panel)
2M		
2N		
2O		
2R		
3A	34 (w/ VSC)	Instrument Panel Wire and Passenger Side J/B (Instrument Panel Brace RH)
	35 (w/o VSC)	
3B	34 (w/ VSC)	
	35 (w/o VSC)	

□ : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IA4	46	Instrument Panel Wire and Floor No.1 Wire (Left Kick Panel)
IF4	46	Engine Room Main Wire and Instrument Panel Wire (Right Side of Steering Column Tube)
IF5		
IF7		
IK1	48	Instrument Panel Wire and Instrument Panel Wire (Instrument Panel Reinforcement RH)
IL1	48	Engine Wire and Instrument Panel Wire (Behind the Glove Box)
IO2	48	Instrument Panel Wire and Floor No.2 Wire (Right Kick Panel)



: Ground Points

Code	See Page	Ground Points Location
EB	44	Right Fender
ED	44	Left Fender
EF	44	Intake Side of Cylinder Block
IA	46	Instrument Panel Reinforcement LH
ID	46	Instrument Panel Brace RH