



Starting and Ignition

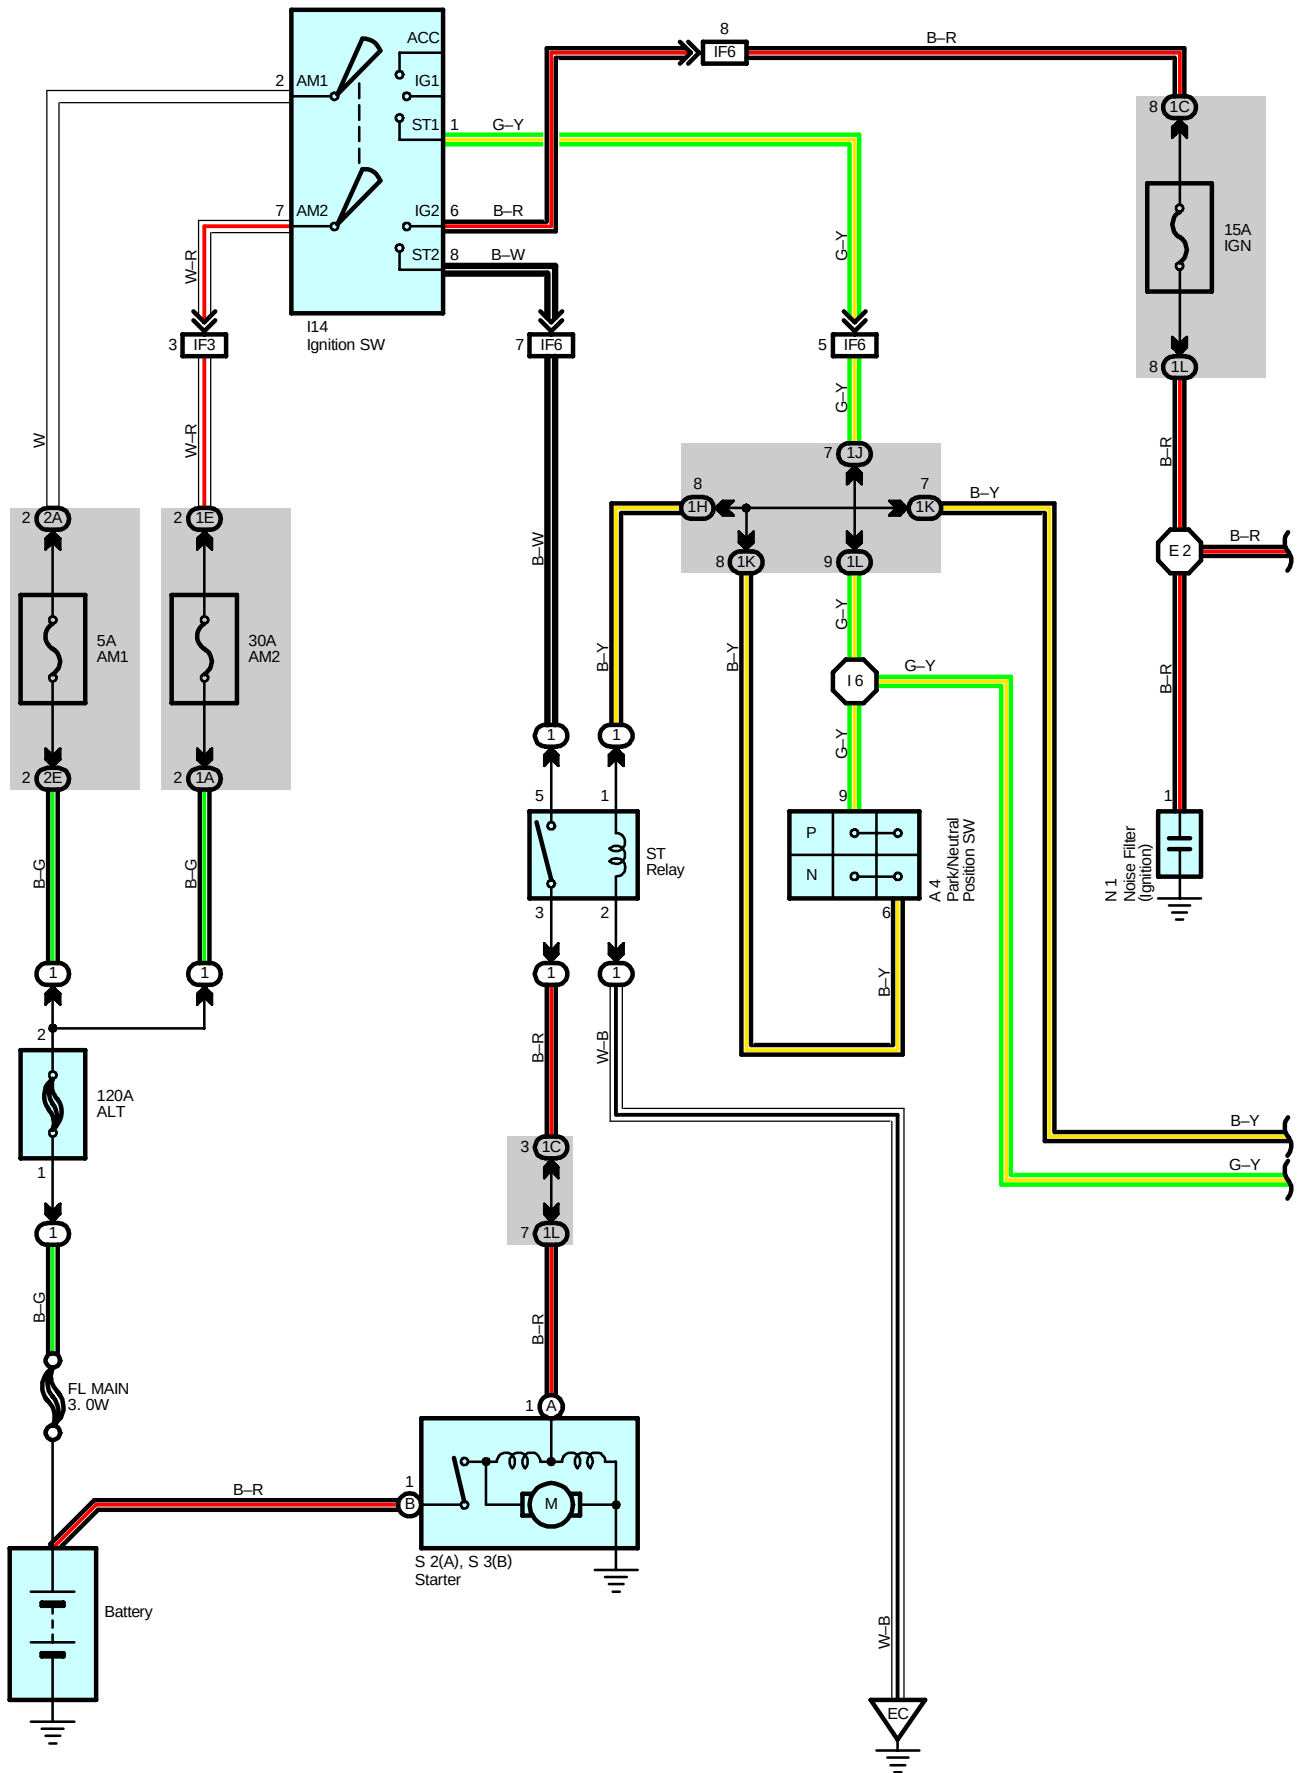

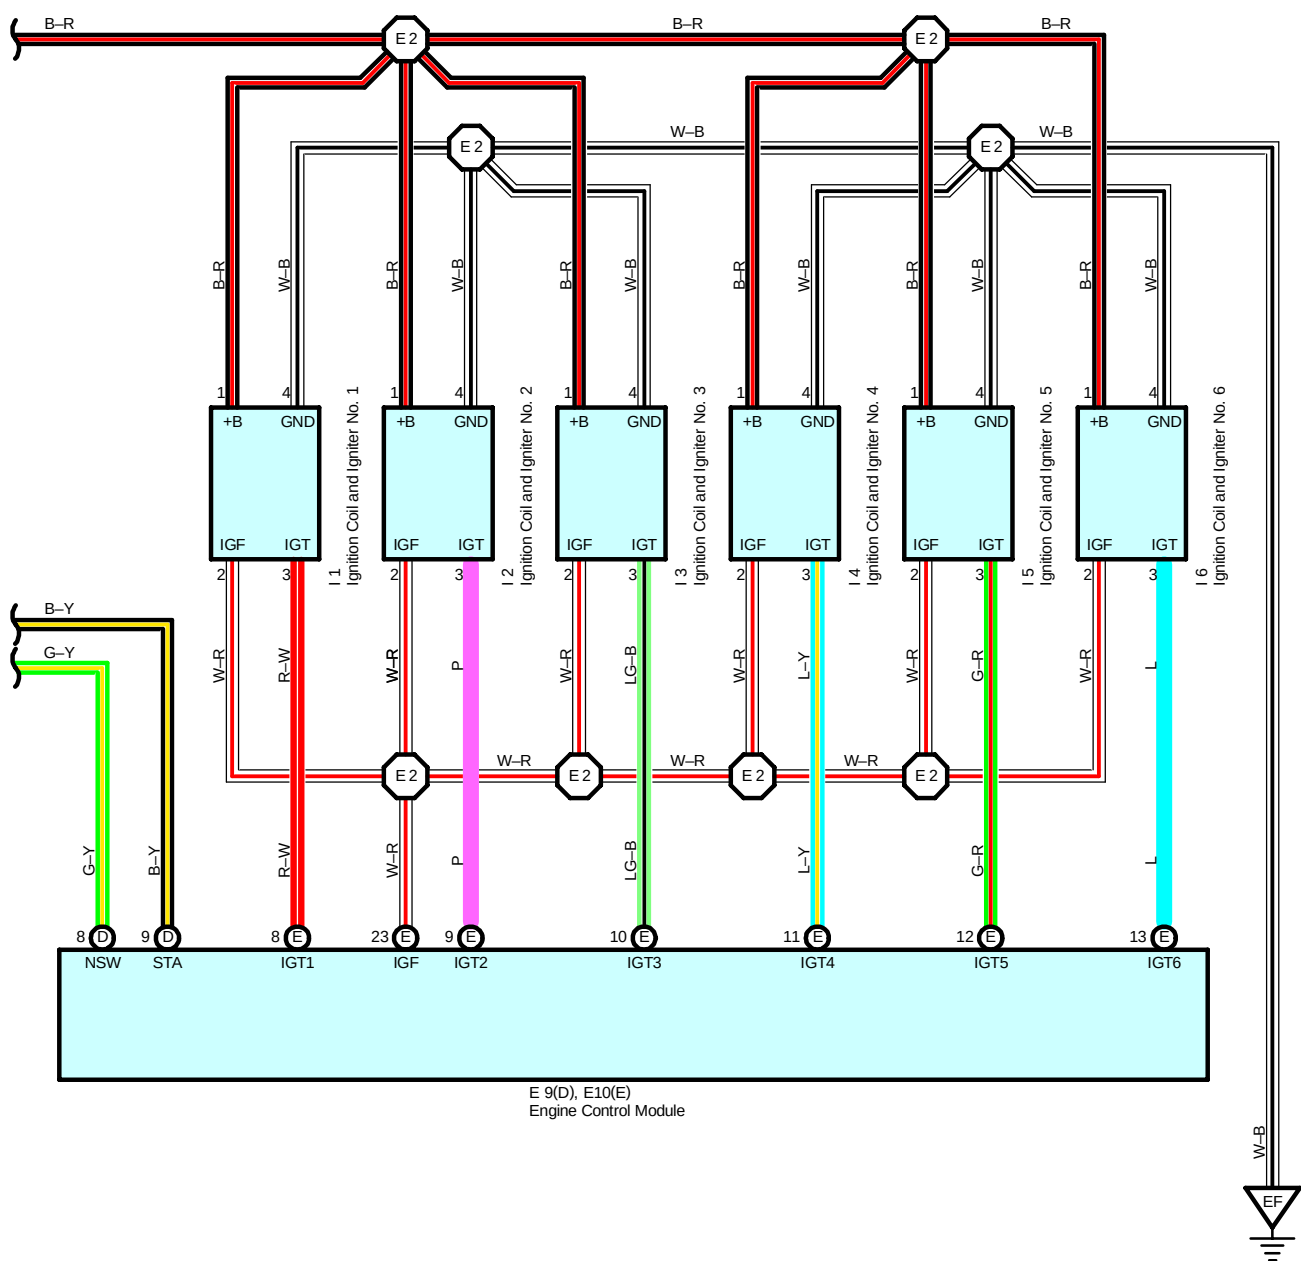

Starting and Ignition

Service Hints

I14 Ignition SW

- 2-1 : Closed with the ignition SW at ST position
- 7-6 : Closed with the ignition SW at ON or ST position
- 7-8 : Closed with the ignition SW at ST position

A4 Park/Neutral Position SW

- 9-6 : Closed with the A/T shift lever in P or N position

S2 (A), S3 (B) Starter

Point closed with the Park/Neutral position SW at P or N position and the ignition SW at ST position

: Parts Location

Code	See Page	Code	See Page	Code	See Page
A4	36	I3	37	N1	37
E9	D 38	I4	37	S2	A 37
E10	E 38	I5	37	S3	B 37
I1	37	I6	37		
I2	37	I14	39		

: Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
1	22	Engine Room R/B (Engine Compartment Left)

: Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1A	25	Engine Room Main Wire and Engine Room J/B (Engine Compartment Left)
1C		
1E		
1H		
1J		
1K	25	Engine Wire and Engine Room J/B (Engine Compartment Left)
1L		
2A	28	Instrument Panel Wire and Driver Side J/B (Lower Finish Panel)
2E	28	Engine Room Main Wire and Driver Side J/B (Lower Finish Panel)

: Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IF3	46	Engine Room Main Wire and Instrument Panel Wire (Right Side of Steering Column Tube)
IF6		

: Ground Points

Code	See Page	Ground Points Location
EC	44	Left Fender
EF	44	Intake Side of Cylinder Block

: Splice Points

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
E2	44	Engine Wire	I6	48	Engine Wire