


SEAT HEATER


1. General

- The seat heater for front seats are provided as optional equipment.
- The HI, LO, and OFF settings of the seat heater can be switched by pressing the seat heater switch (for driver or front passenger). Based on the signals from the temperature sensor that is built into the seat heater, the air conditioning ECU turns the built-in seat heater relay ON/OFF in order to regulate the temperature that suits the set mode.
- A seat heater switch with a built-in indicator light for checking the heater operation (OFF, LO or HI) is provided.

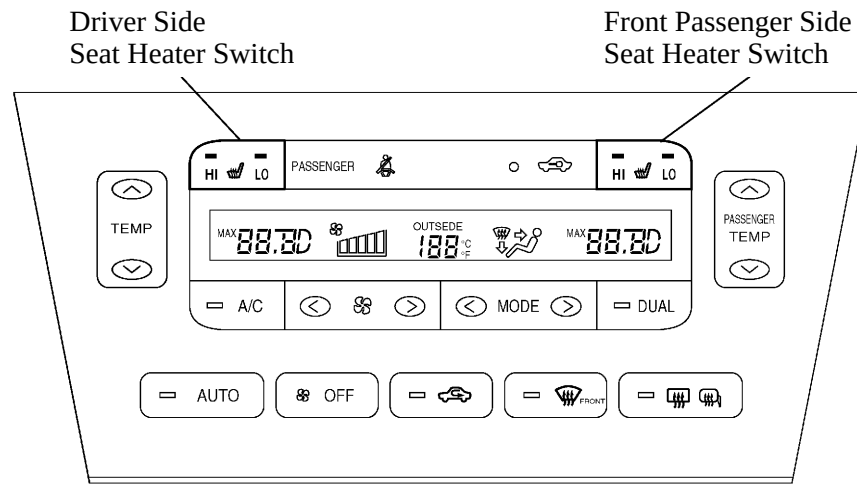

211BE59

► System Diagram ◀

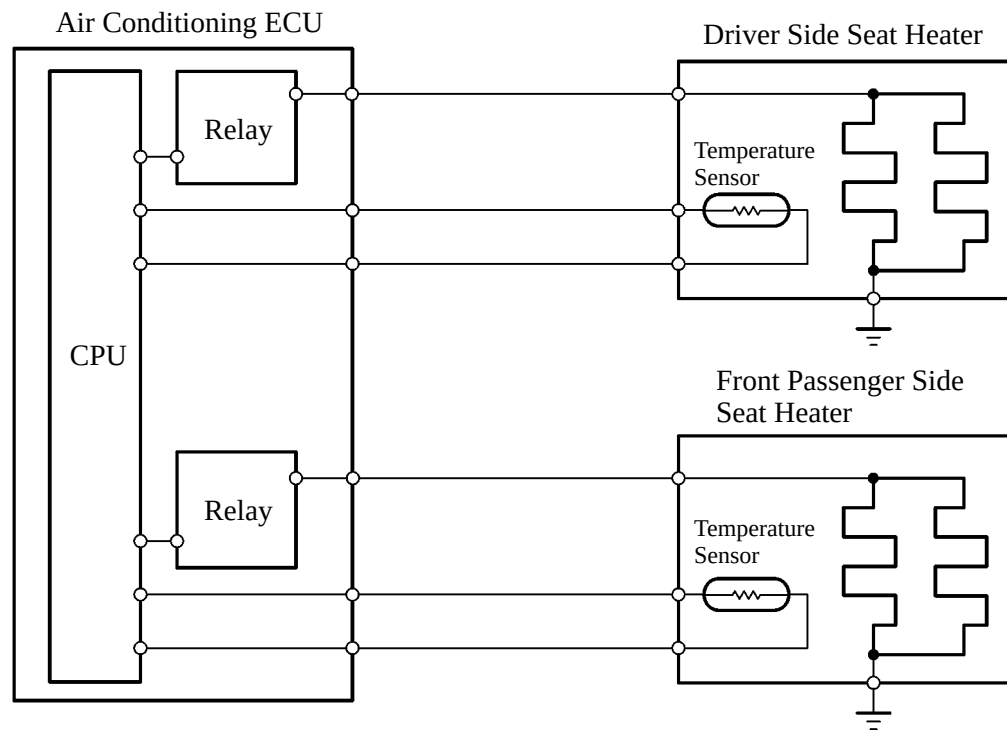


211BE60

2. Function

Based on the signals from the temperature sensor that is built into the seat heater, the air conditioning ECU turns the built-in seat heater relay ON/OFF in order to regulate the temperature to the standard temperature that is prescribed for each mode.

► Imaginary Temperature Control ◀

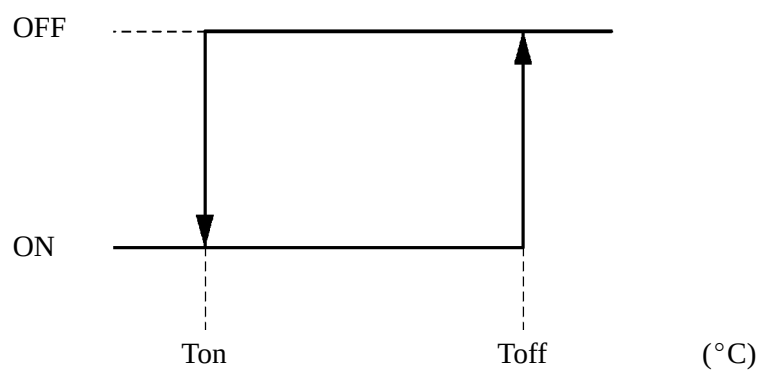

Ton, Toff = Lo Mode < Hi Mode