


■ VALVE BODY UNIT

1. General


This valve body unit has been developed for the U150E A/T application.

The valve body consists of the upper and lower valve bodies and 7 solenoid valves.


Apply orifice control, which controls the flow volume to the B₃ brake, has been adopted in this unit.

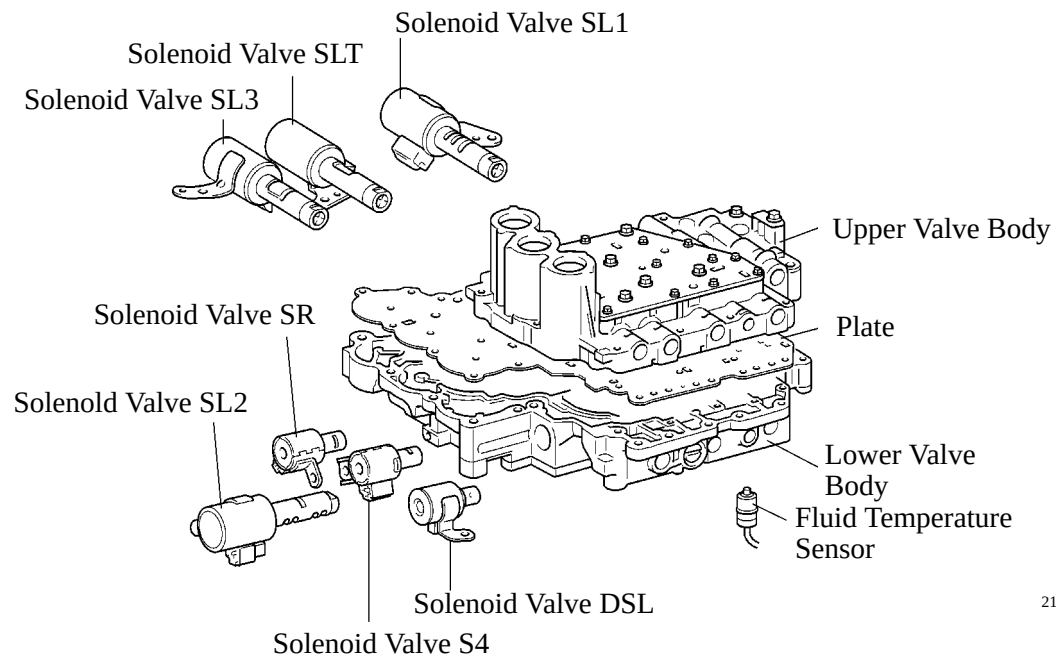

► Upper Valve Body ◀

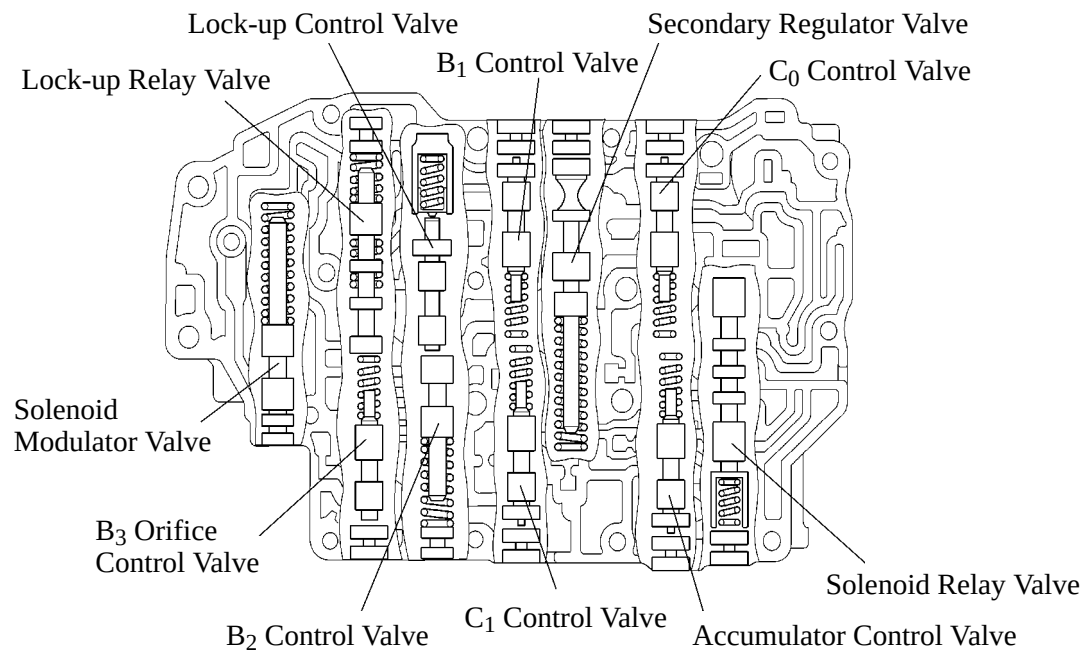

► Lower Valve Body ◀

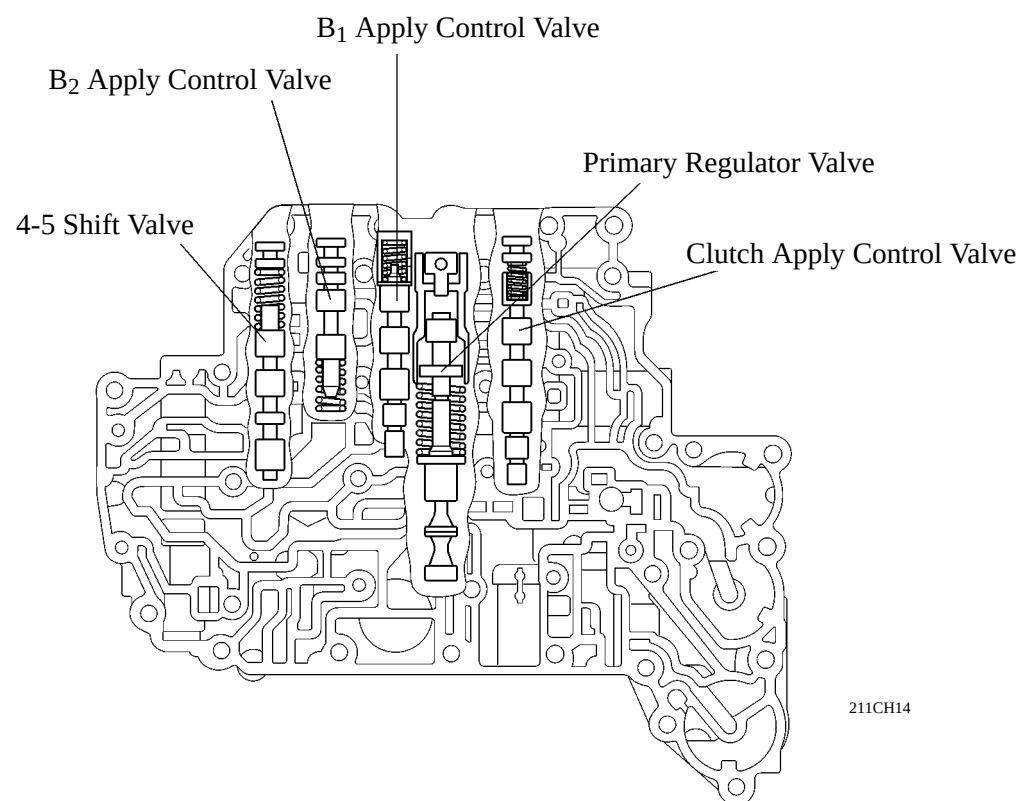

211CH14


2. Solenoid Valve

Solenoid Valves SL1, SL2, SL3 and SLT

1) General

In order to provide a hydraulic pressure that is proportion to current that flows to the solenoid coil, the solenoid valve SL1, SL2, SL3, and SLT linearly controls the line pressure and clutch and brake engagement pressure based on the signals it receives from the ECM.

The solenoid valves SL1, SL2, SL3, and SLT have the same basic structure.

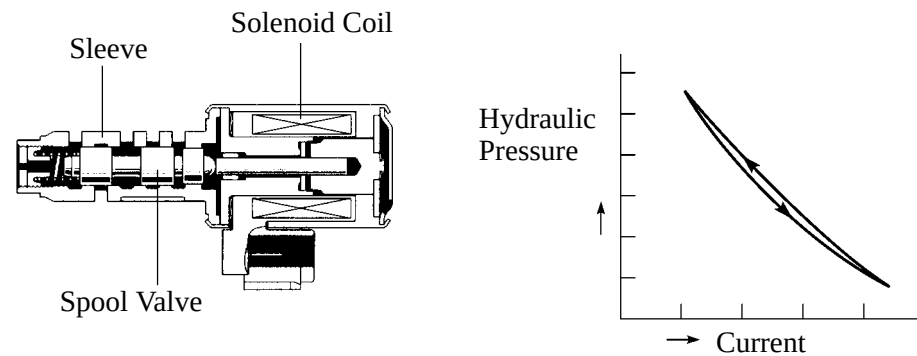

198CH31


2) Function of Solenoid Valve SL1, SL2, and SLT

Solenoid Valve	Action	Function
SL1	For clutch and brake engagement pressure control	B ₁ brake pressure control
SL2		• C₀ clutch pressure control • Lock-up clutch pressure control
SL3		C ₁ clutch pressure control
SLT	For line pressure control	• Line pressure control • Secondary pressure control

Solenoid Valves SR, S4, and DSL


1) General

The solenoid valves SR, S4, and DSL use a three-way solenoid valve.

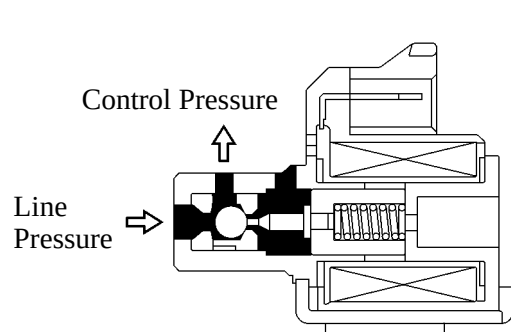

Solenoid Valve ON

161ES65

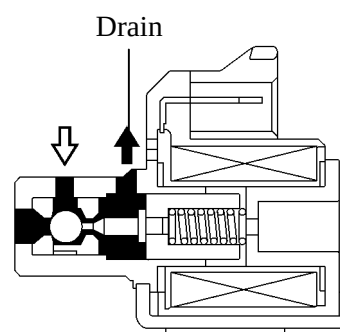


Solenoid Valve OFF

181CH12

2) Function of Solenoid Valve SR


The solenoid valve SR controls the solenoid relay valve. Accordingly, the fluid passages from the solenoid valve DSL and S4 have been changed.

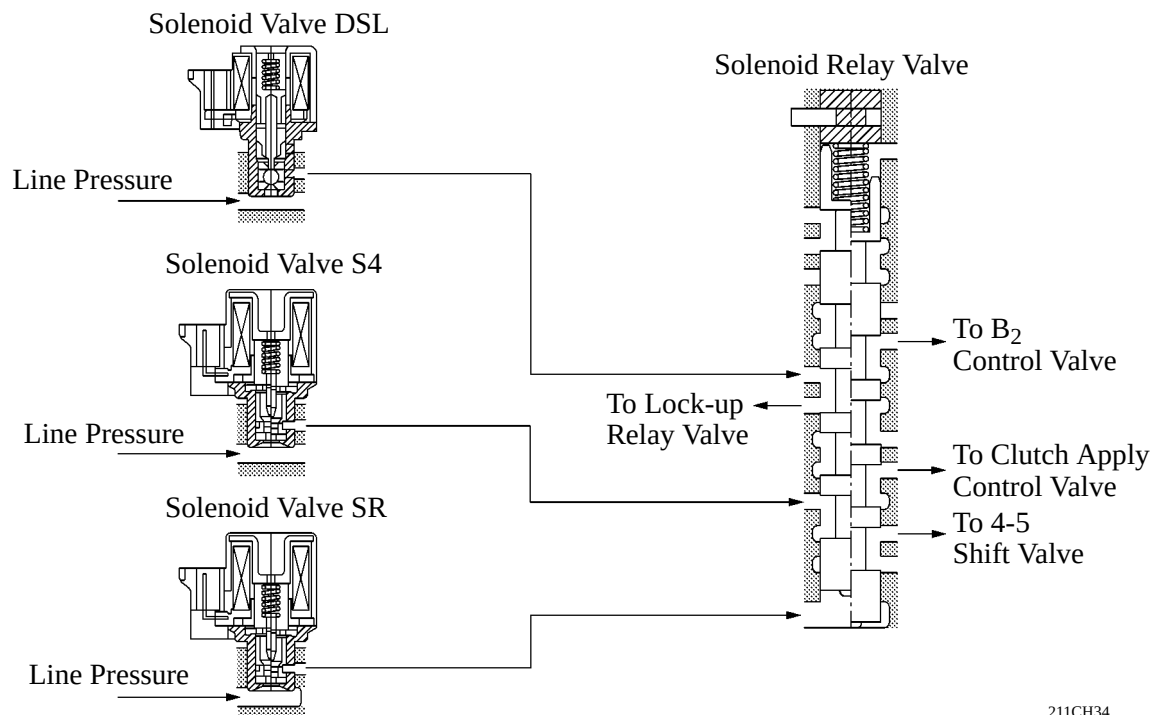

211CH34

3) Function of Solenoid Valve S4

The solenoid valves S4 when set to ON controls the 4-5 shift valve to establish the 5th by changing over the fluid pressure applied to B₃ brake and C₃ clutch.

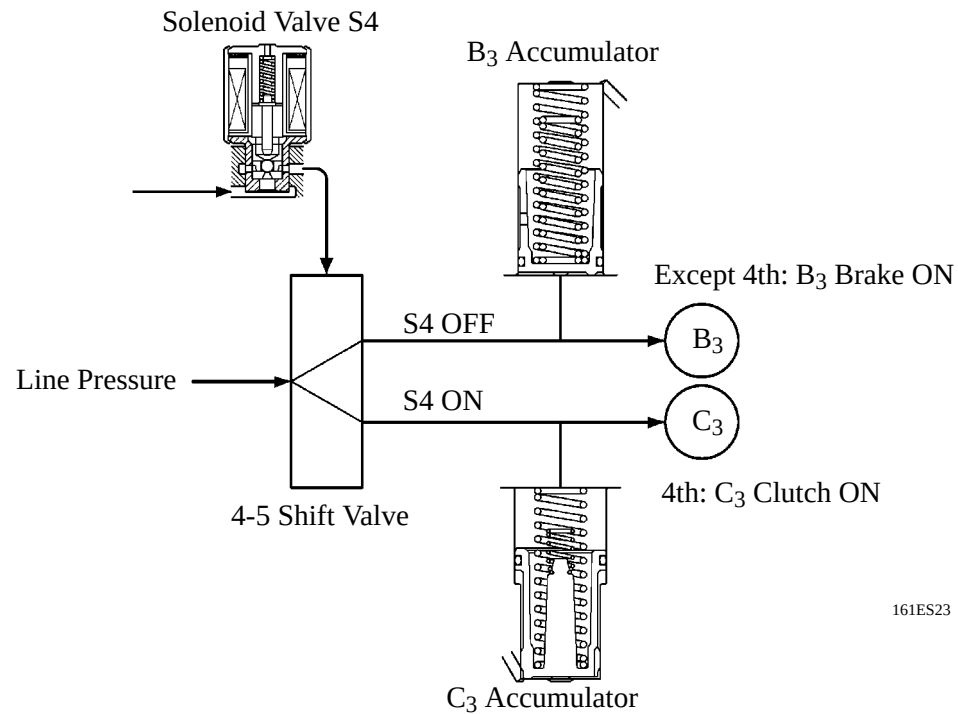


161ES23

4) Function of Solenoid Valve DSL

The solenoid valve DSL controls the B₂ control valve via the solenoid relay valve when the transaxle is shifted in the R or L position.

During lock-up, the lock-up relay valve is controlled via the solenoid relay valve.

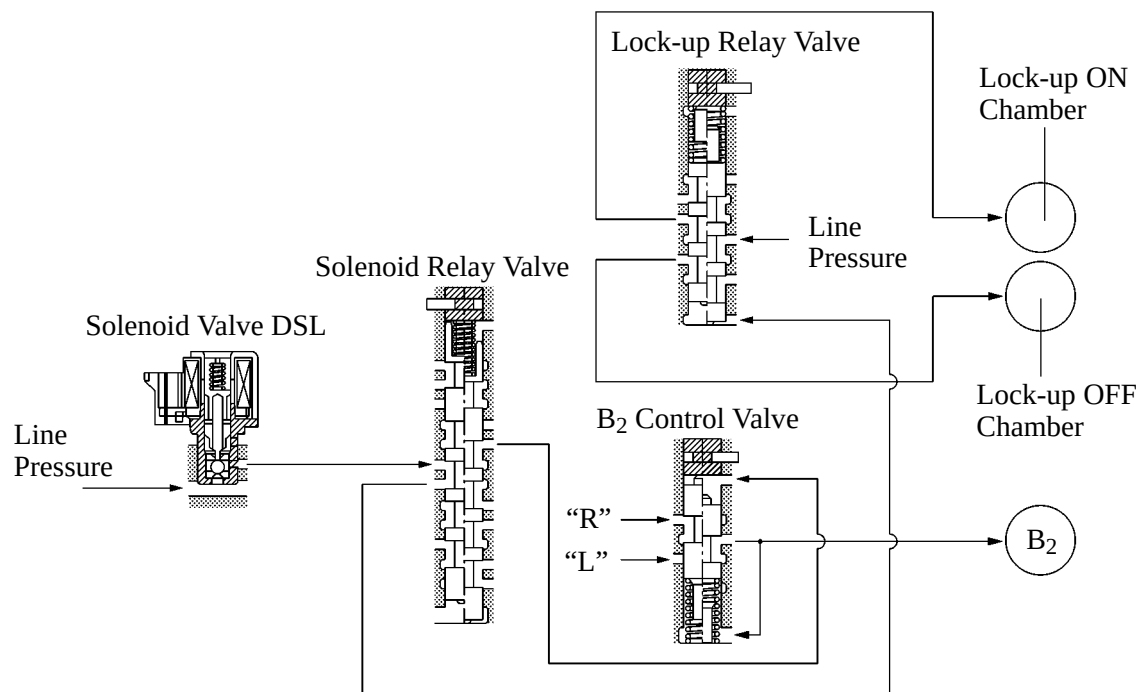

211CH33

3. Apply Orifice Control

This control is effected by the B₃ orifice control valve. The B₃ orifice control valve has been provided for the B₃ brake, which is applied when shifting from 5th to 4th. The B₃ orifice control valve is controlled by the amount of the line pressure in accordance with shifting conditions, and the flow volume of the fluid that is supplied to the B₃ brake is controlled by varying the size of the orifice in the control valve.

