


## BRAKE WARNING LIGHT CIRCUIT

### CIRCUIT DESCRIPTION

If the ECU detects trouble, it lights the brake warning light while prohibiting ABS control. At this time, the ECU records a DTC in memory.

Connect terminals Tc and CG of the DLC3 to make the brake warning light blink and output the DTC.

### WIRING DIAGRAM

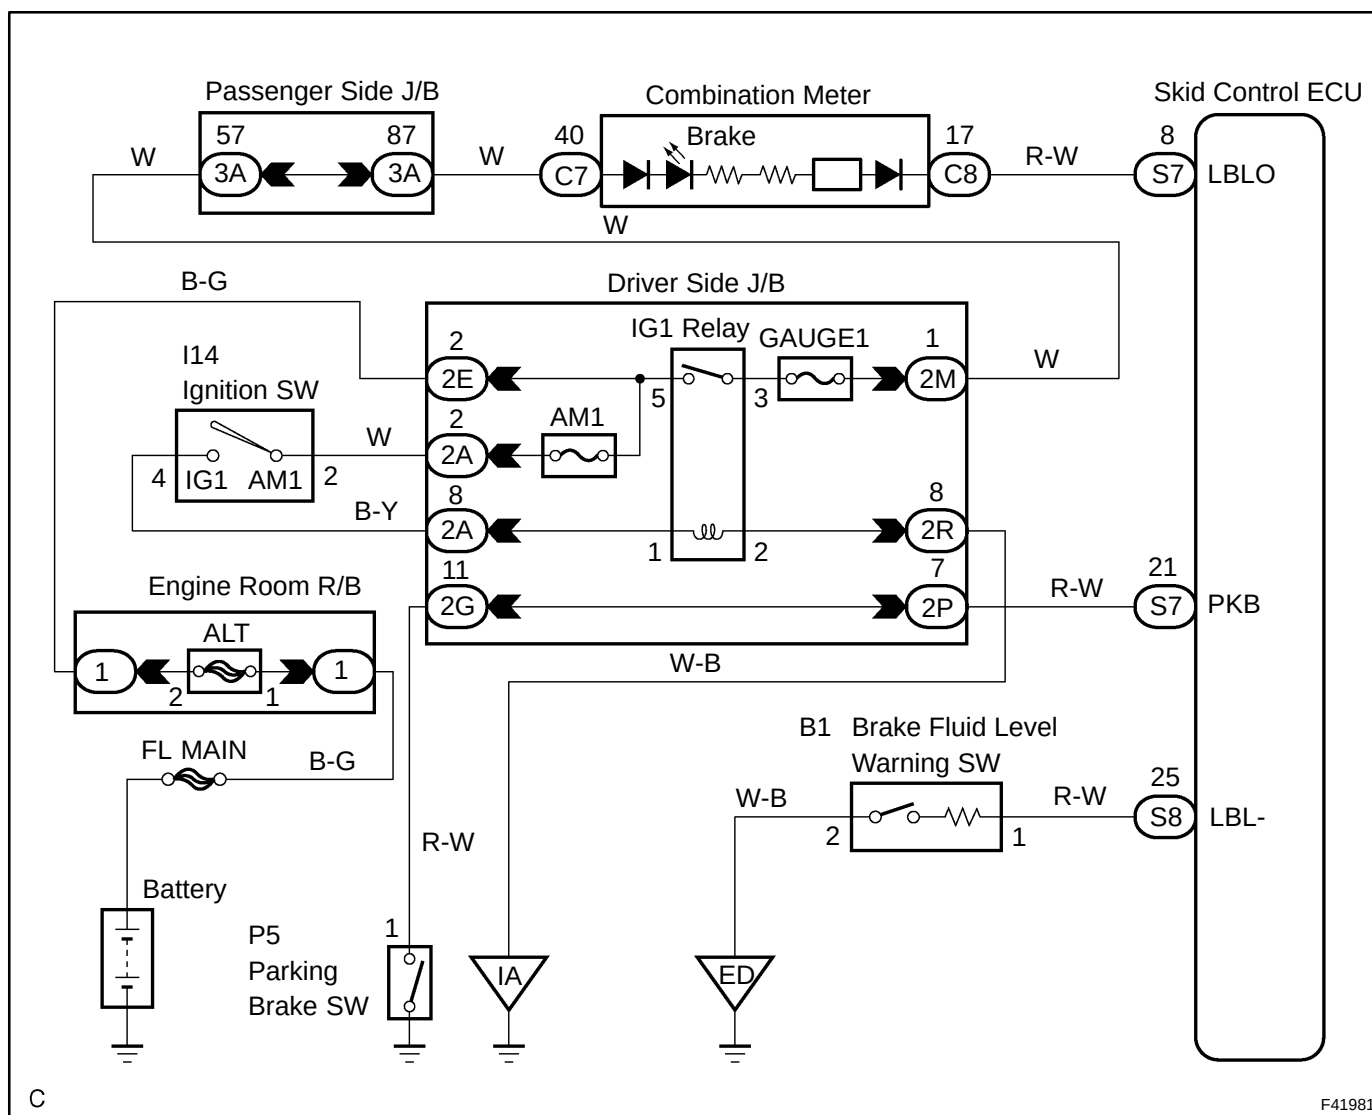

### INSPECTION PROCEDURE

#### 1 CHECK PARKING BRAKE SWITCH CIRCUIT

NG

REPAIR OR REPLACE PARKING BRAKE SWITCH CIRCUIT

OK

**2 CHECK BRAKE FLUID LEVEL WARNING SWITCH CIRCUIT****NG****REPAIR OR REPLACE BRAKE FLUID LEVEL WARNING SWITCH CIRCUIT****OK****3 RECONFIRM DTC(See page 05-288 )**

|   |                  |
|---|------------------|
| A | Normal Code      |
| B | Malfunction Code |

**B****REPAIR CIRCUIT INDICATED BY OUTPUT CODE****A****4 INSPECT COMBINATION METER ASSY(BRAKE WARNING LIGHT CIRCUIT)****NG****REPAIR OR REPLACE COMBINATION METER ASSY****OK****5 CHECK HARNESS AND CONNECTOR(COMBINATION METER - SKID CONTROL ECU ASSY)(See page 01-31 )****NG****REPAIR OR REPLACE HARNESS OR CONNECTOR****OK****CHECK AND REPLACE SKID CONTROL ECU ASSY**