


TRAC OFF INDICATOR, TRAC CUT SWITCH CIRCUIT

CIRCUIT DESCRIPTION

This is the TRAC control main switch. When the TRAC cut switch is pushed on, TRAC control goes off and the TRAC OFF indicator lights up. This indicator blinks for warnings when the trouble occurs and for displaying DTC. Turn the ignition switch OFF, TRAC control surely comes on when the ignition switch turns ON next time.


WIRING DIAGRAM

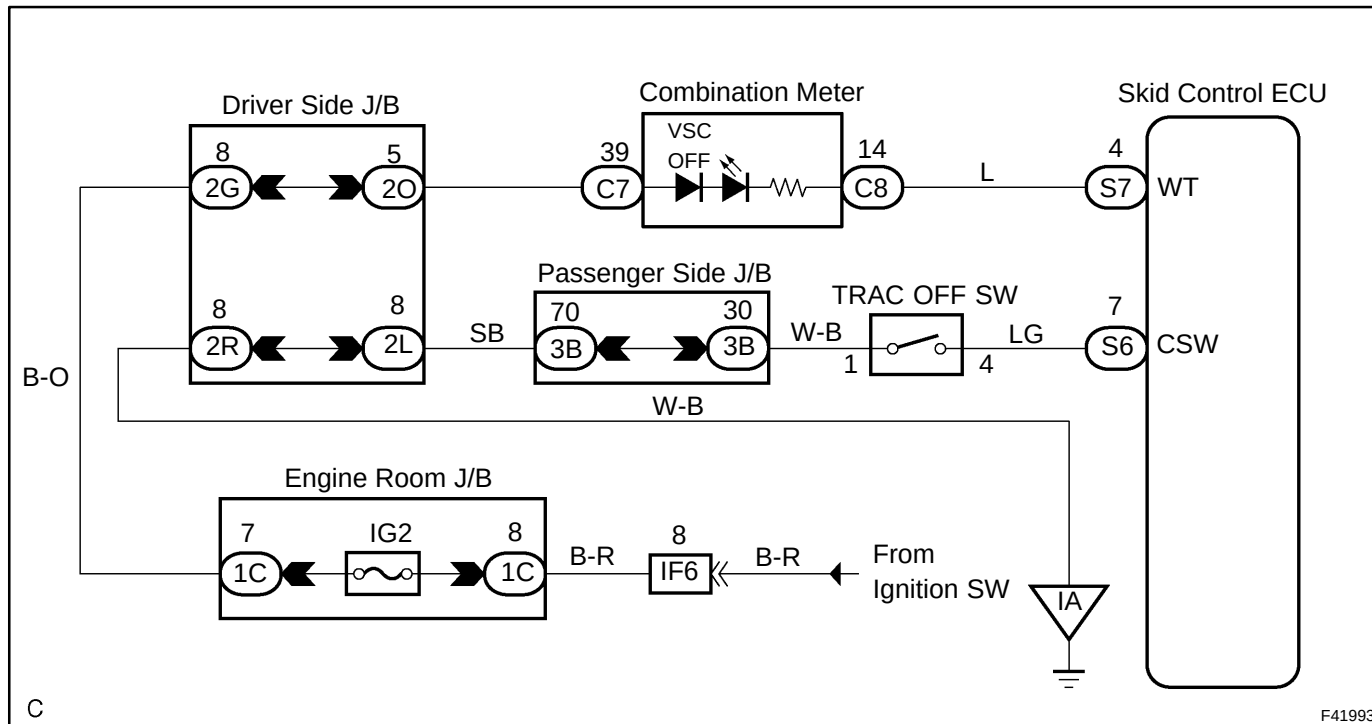

INSPECTION PROCEDURE

1	RECONFIRM DTC(See page 05-288)
A	Normal Code
B	Malfunction Code
B	REPAIR CIRCUIT INDICATED BY OUTPUT CODE

A

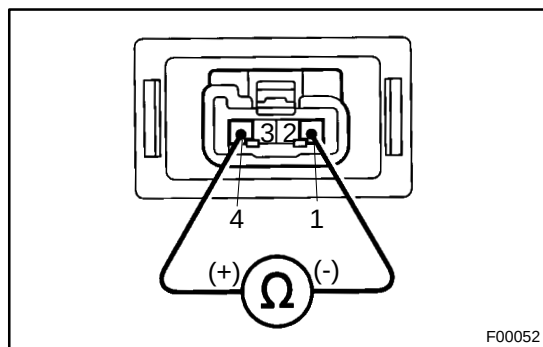2 INSPECT TRACTION CONTROL SWITCH

- (a) Remove TRAC control switch.
- (b) Disconnect TRAC control switch connector.
- (c) Measure resistance between terminals 1 and 4 of TRAC control switch when TRAC control switch is on and off.

OK:

TRAC cut switch	Resistance
Pushed in	Continuity

NG**REPLACE TRACTION CONTROL SWITCH****OK****3 CHECK HARNESS AND CONNECTOR(TRACTION CONTROL SWITCH - BODY GROUND)(See page 01-31)****NG****REPAIR OR REPLACE HARNESS OR CONNECTOR****OK****4 INSPECT COMBINATION METER ASSY(TRAC OFF INDICATOR LIGHT CIRCUIT)****NG****REPAIR OR REPLACE COMBINATION METER ASSY****OK****5 CHECK HARNESS AND CONNECTOR(COMBINATION METER - SKID CONTROL ECU ASSY)(See page 01-31)****NG****REPAIR OR REPLACE HARNESS OR CONNECTOR****OK****CHECK AND REPLACE SKID CONTROL ECU ASSY**