


TS TERMINAL CIRCUIT

CIRCUIT DESCRIPTION

In the sensor check mode, a malfunction of the speed sensor that cannot be judged when the vehicle is stopped is judged while driving.


Transition to the sensor check mode can be performed by connecting terminals Ts and CG of the DLC3 and turning the ignition switch from OFF to ON.

WIRING DIAGRAM

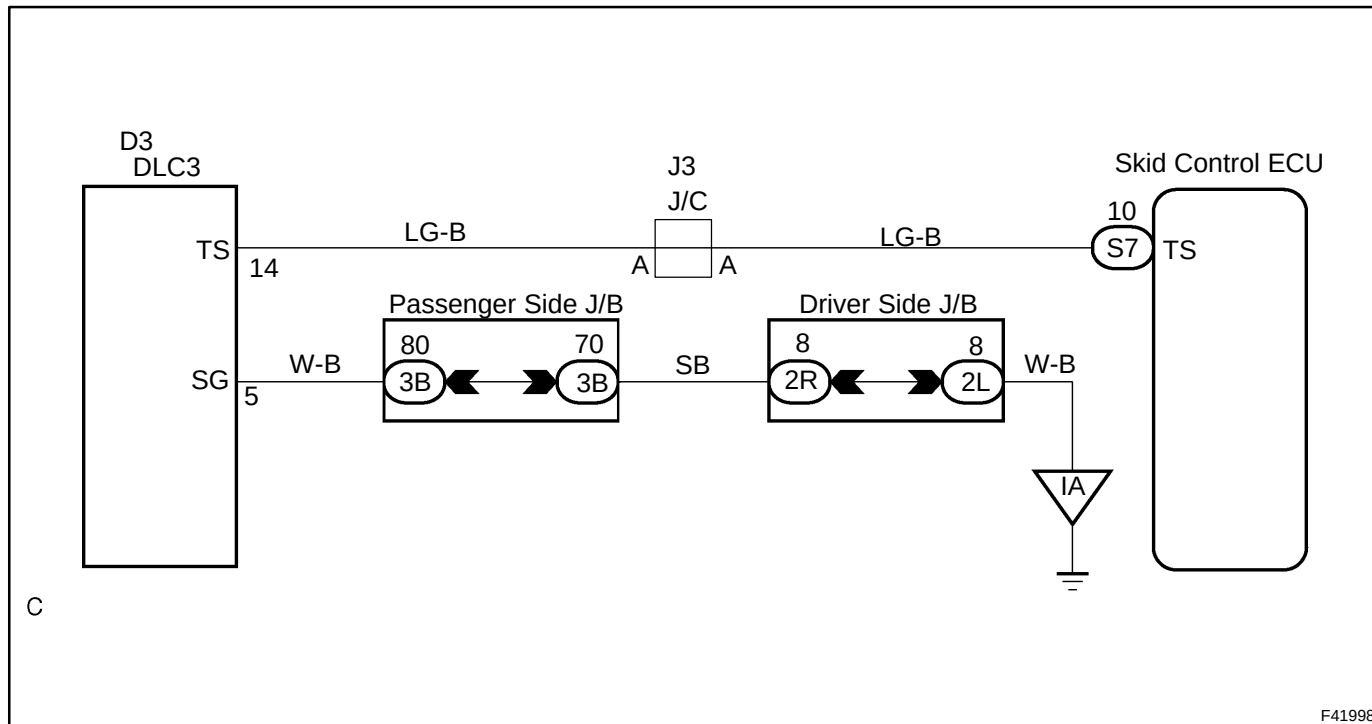

INSPECTION PROCEDURE

1 INSPECT DLC3 TERMINAL VOLTAGE(TS TERMINAL)

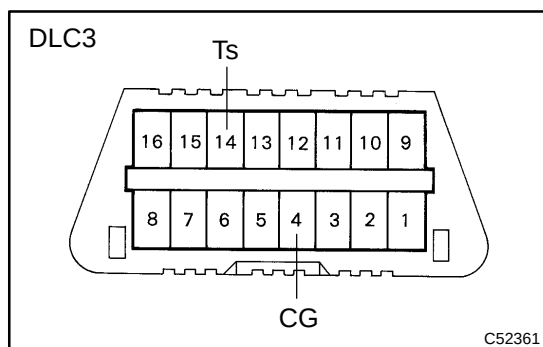

- Turn the ignition switch ON.
- Measure voltage between terminals Ts and CG of DLC3.
OK: 10 - 14 V

OK

Go to step 3

NG

2 CHECK HARNESS AND CONNECTOR(DLC3 - SKID CONTROL ECU, DLC3 - BODY GROUND)

- (a) Check for open and short circuit in harness and connector between terminal Ts of the DLC3 and skid control ECU, CG of DLC3 and body ground (See page 01-31).

NG


REPAIR OR REPLACE HARNESS OR CONNECTOR

OK

CHECK AND REPLACE SKID CONTROL ECU ASSY

3 INSPECT ABS AND VSC WARNING LIGHT

SST 09843-18040

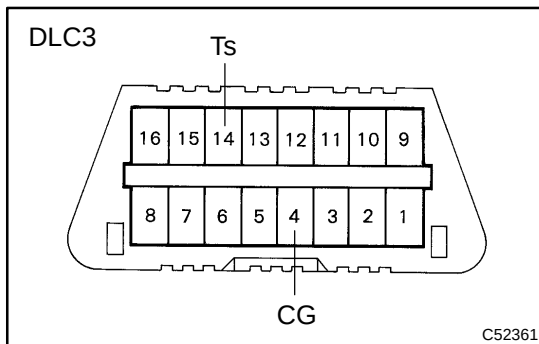

- (a) Using SST, connect the terminals Ts and CG of the DLC3.
 (b) Turn the ignition switch ON.
 (c) Check the ABS and VSC warning light.

OK: Warning light blinking

OK

END

NG

CHECK AND REPLACE SKID CONTROL ECU ASSY