


TC TERMINAL CIRCUIT

CIRCUIT DESCRIPTION


Connecting terminals Tc and CG of the DLC3 causes the ECU to display the DTC by flashing the ABS warning light.

WIRING DIAGRAM

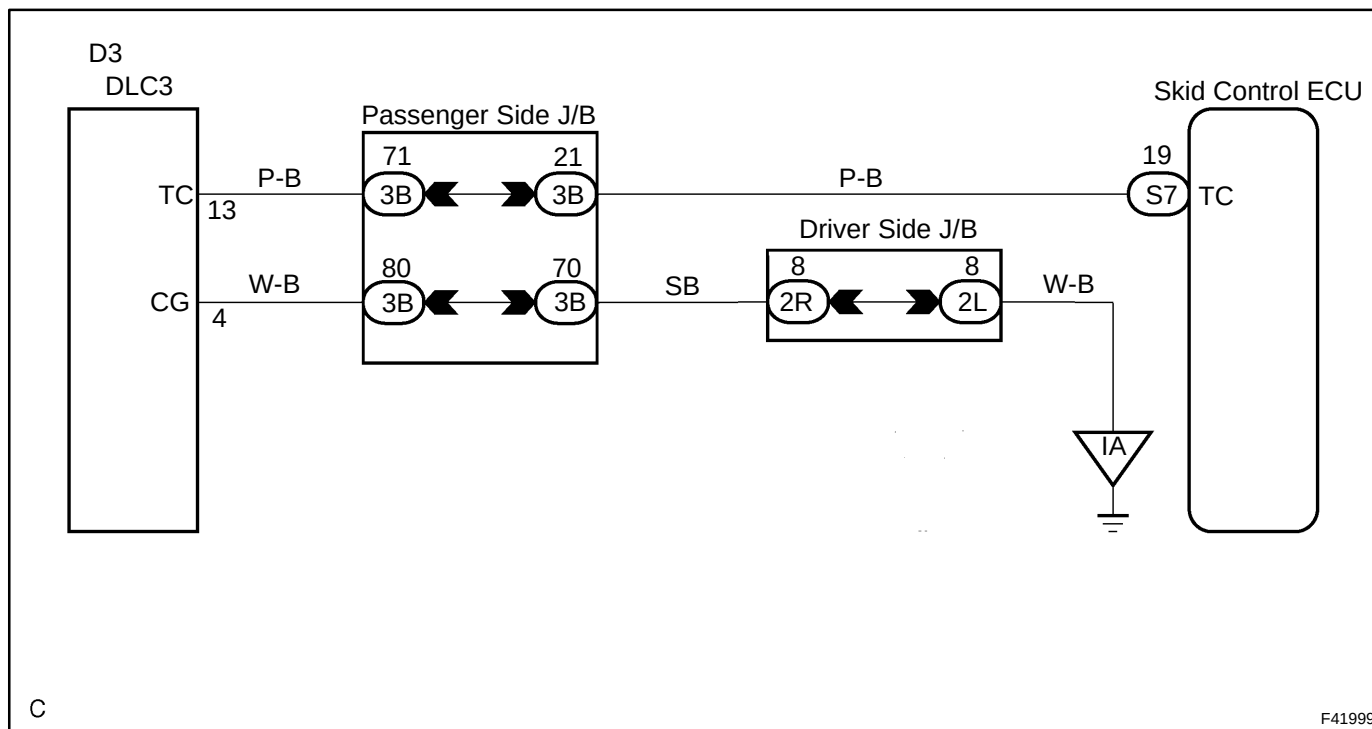

INSPECTION PROCEDURE

1 INSPECT DLC3(TC TERMINAL VOLTAGE)

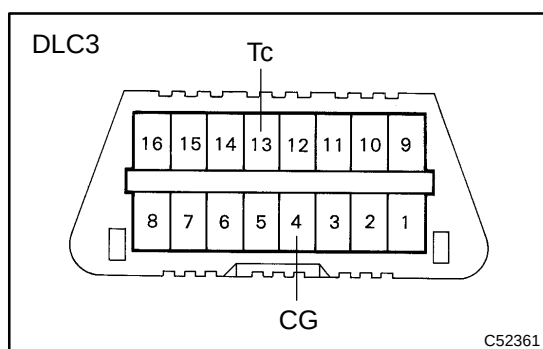

- Turn the ignition switch ON.
- Measure voltage between terminals Tc and CG of DLC3.
OK: 10 - 14 V

OK

Go to step 3

NG

2 CHECK HARNESS AND CONNECTOR(SKID CONTROL ECU ASSY - DLC3, DLC3 - BODY GROUND)

- Check for open and short circuit in harness and connector between terminal Tc of the skid control ECU and DLC3 (See page 01-31).
- Check for open circuit in harness and connector between terminal CG of the DLC3 and body ground (See page 01-31).

NG


REPAIR OR REPLACE HARNESS OR CONNECTOR

OK

CHECK AND REPLACE SKID CONTROL ECU ASSY

3 INSPECT ABS AND VSC WARNING LIGHT

SST 09843-18040

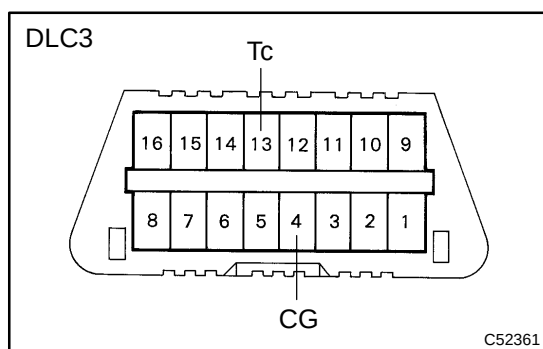

- Using SST, connect the terminals Tc and CG of the DLC3.
- Turn the ignition switch ON.
- Check the ABS and VSC warning light.

OK: Warning light blinking

OK

END

NG

CHECK AND REPLACE SKID CONTROL ECU ASSY