

## PROBLEM SYMPTOMS TABLE

If a normal code is displayed during the DTC check although the problem still occurs, check the circuits for each problem symptom in the order given in the table below and proceed to the relevant troubleshooting page.

### NOTICE:

**When replacing skid control ECU, sensor or etc., turn the ignition switch OFF.**

| Symptom                                 | Suspected Area                                                                                                                                                                                                                                                                                                                                                    | See page                                                                                                                                                |
|-----------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------|
| ABS does not operate                    | Only when 1 to 4 are all normal but problem still occurs, replace skid control ECU<br>1. Check DTC reconfirming that normal code is output<br>2. IG power source circuit and ground circuit<br>3. Speed sensor circuit<br><br>4. Check brake actuator with a hand-held tester<br>If abnormal, check hydraulic circuit for leakage                                 | <a href="#">05-239</a><br><a href="#">05-265</a><br><a href="#">05-251</a><br><a href="#">05-255</a><br><a href="#">32-43</a>                           |
| ABS does not operate efficiently        | Only when 1 to 5 are all normal but problem still occurs, replace skid control ECU<br>1. Check DTC reconfirming that normal code is output<br>2. IG power source circuit and ground circuit<br>3. Speed sensor circuit<br><br>4. Stop light switch circuit<br>5. Check brake actuator with a hand-held tester<br>If abnormal, check hydraulic circuit for leakage | <a href="#">05-239</a><br><a href="#">05-265</a><br><a href="#">05-251</a><br><a href="#">05-255</a><br><a href="#">05-268</a><br><a href="#">32-43</a> |
| ABS warning light is abnormal           | 1. ABS warning light circuit<br><br>2. Skid control ECU                                                                                                                                                                                                                                                                                                           | <a href="#">05-275</a><br><a href="#">05-277</a>                                                                                                        |
| Brake warning light is abnormal         | 1. Brake warning light circuit<br>2. Skid control ECU                                                                                                                                                                                                                                                                                                             | <a href="#">05-278</a>                                                                                                                                  |
| DTC check                               | Only when 1 and 2 are all normal and problem still occurs, replace skid control ECU<br>1. ABS warning light circuit<br><br>2. Tc terminal circuit                                                                                                                                                                                                                 | <a href="#">05-275</a><br><a href="#">05-277</a><br><a href="#">05-280</a>                                                                              |
| Speed sensor signal check is impossible | 1. Ts terminal circuit<br>2. Skid control ECU                                                                                                                                                                                                                                                                                                                     | <a href="#">05-282</a>                                                                                                                                  |