

DIAGNOSTIC TROUBLE CODE CHART

If a DTC is displayed during the DTC check, check the circuit listed in the table below and proceed to the page given.

* : - ... MIL does not light / ● ... MIL light up

DTC No. (See Page)	Detection Item	Trouble Area	MIL *	Memory
P0500 (05-114)	Vehicle Speed Sensor Malfunction	- Combination meter - Open or short in vehicle speed sensor circuit - Vehicle speed sensor - Skid control ECU - ECM	●	○
P0710 (05-410)	Transmission Fluid Temp. Sensor Malfunction (ATF Temp. Sensor)	- Open in ATF temp. sensor circuit - ATF temp. sensor - ECM	●	○
P0711 (05-410)	Transmission Fluid Temp. Sensor Rnge/Performance problem	- Open or short in ATF temp. sensor circuit - ATF temp. sensor - ECM	●	○
P0750 (05-413)	Shift Solenoid A Malfunction (Shift Solenoid Valve SL1)	- Shift solenoid valve SL1 is stuck open or closed - Valve body is blocked or stuck - Torque converter clutch - Automatic transaxle	●	○
P0753 (05-420)	Shift Solenoid A Electrical Malfunction (Shift Solenoid Valve SL1)	- Open or short in shift solenoid valve SL1 circuit - Shift solenoid valve SL1 - ECM	●	○
P0755 (05-413)	Shift Solenoid B Malfunction (Shift Solenoid Valve SL2)	- Shift solenoid valve SL2 is stuck open or closed - Valve body is blocked or stuck - Torque converter clutch - Automatic transaxle	●	○
P0758 (05-420)	Shift Solenoid B Malfunction (Shift Solenoid Valve SL2)	- Open or short in shift solenoid valve SL2 circuit - Shift solenoid valve SL2 - ECM	●	○
P0760 (05-413)	Shift Solenoid C Malfunction (Shift Solenoid Valve SL3)	- Shift solenoid valve SL3 is stuck open or closed - Valve body is blocked or stuck - Torque converter clutch - Automatic transaxle	●	○
P0763 (05-420)	Shift Solenoid C Electrical Malfunction (Shift Solenoid Valve SL3)	- Open or short in shift solenoid valve SL3 circuit - Shift solenoid valve SL3 - ECM	●	○
P0765 (05-413)	Shift Solenoid D Malfunction (Shift Solenoid Valve S4)	- Shift solenoid valve S4 is stuck open or closed - Valve body is blocked or stuck - Torque converter clutch - Automatic transaxle	●	○
P0768 (05-420)	Shift Solenoid D Electrical Malfunction (Shift Solenoid Valve S4)	- Open or short in shift solenoid valve S4 circuit - Shift solenoid valve S4 - ECM	●	○
P0770 (05-429)	Shift Solenoid E Malfunction (Shift Solenoid Valve DSL)	- Open or short in shift solenoid valve DSL circuit - Shift solenoid valve DSL - Valve body is blocked or stuck - Lock-up clutch - ECM	●	○
P0773 (05-433)	Shift Solenoid E Electrical Malfunction (Shift Solenoid Valve DSL)	- Open or short in shift solenoid valve DSL circuit - Shift solenoid valve DSL - ECM	●	○

P1520 (05-436)	Stop Light Switch Circuit Malfunction	• Open or short in stop light switch circuit • Stop lamp switch assy • ECM	●	○
P1725 (05-438)	NT Revolution Sensor Circuit Malfunction (Input Turbine Speed Sensor)	• Open or short in input turbine speed sensor circuit • Speed sensor (NT) • ECM	●	○
P1730 (05-440)	NC Revolution Sensor Circuit Malfunction (Counter Gear Speed Sensor)	• Open or short in counter gear speed sensor circuit • Speed sensor (NC) • ECM	●	○
P1760 (05-443)	Linear Solenoid for Line Pressure Control Circuit Malfunction (Shift Solenoid Valve SLT)	• Open or short in line pressure control solenoid (SLT) circuit • Line pressure control solenoid (SLT) • ECM	●	○
P1780 (05-447)	Park/Neutral Position Switch Malfunction	• Park/neutral position switch circuit • Park/neutral position switch assy • ECM	●	○
P1815 (05-413)	SR Solenoid Valve Malfunction (Shift Solenoid Valve SR)	• Shift solenoid valve SR is stuck open or closed • Valve body is blocked or stuck	●	○
P1818 (05-420)	SR Solenoid Valve Electrical Malfunction (Shift Solenoid Valve SR)	• Open or short in shift solenoid valve SR circuit • Shift solenoid valve SR • ECM	●	○