

PROBLEM SYMPTOMS TABLE

If a normal code is displayed during the DTC check but the problem still occurs, check the circuits for each problem symptom in the order given in the table below and proceed to the relevant troubleshooting page.

Symptom	Inspection Circuit	See page
Damping force control does not operate at all	1. Absorber control actuator circuit 2. Ts terminal circuit 3. Shock absorber 4. Absorber control ECU	05-210 05-232 26-8 27-4 01-31
Only anti-roll control does not operate	1. Steering angle sensor circuit 2. Right front speed sensor circuit 3. Absorber control ECU	05-219 05-217 01-31
Only anti-squat control does not operate	1. Crankshaft position sensor circuit 2. Right front speed sensor circuit 3. Absorber control ECU	05-222 05-217 01-31
Only anti-dive control does not operate	1. Stop light switch circuit 2. Right front speed sensor circuit 3. Absorber control ECU	05-224 05-217 01-31
Only semi-active control does not operate	1. Right front speed sensor circuit 2. Absorber control ECU	05-217 01-31
Only speed sensing control does not operate	1. Right front speed sensor circuit 2. Absorber control ECU	05-217 01-31
Only unsprung damping control does not operate	1. Right front speed sensor circuit 2. Absorber control ECU	05-217 01-31