

PROBLEM SYMPTOMS TABLE

Symptom	Suspect Area	See page
Engine does not crank (Does not start)	24. Starter 25. Starter relay	19-1 19-1
No initial combustion (Does not start)	1. ECM power source circuit 2. Fuel pump control circuit 3. ECM	05-178 05-173 01-31
No complete combustion (Does not start)	1. Fuel pump control circuit	05-173
Engine cranks normally (Difficult to start)	1. Starter signal circuit 2. Fuel pump control circuit 3. Compression	05-167 05-173 14-1
Cold engine (Difficult to start)	1. Starter signal circuit 2. Fuel pump control circuit	05-167 05-173
Hot engine (Difficult to start)	1. Starter signal circuit 2. Fuel pump control circuit	05-167 05-173
High engine idle speed (Poor idling)	1. A/C signal circuit (Compressor circuit) 2. ECM power source circuit	05-536 05-178
Low engine idle speed (Poor idling)	1. A/C signal circuit (Compressor circuit) 2. Fuel pump control circuit	05-536 05-173
Rough idling (Poor idling)	1. Compression 2. Fuel pump control circuit 3. Electric throttle control system	14-1 05-173 05-117
Hunting (Poor idling)	1. ECM power source circuit 2. Fuel pump control circuit	05-178 05-173
Hesitation/Poor acceleration (Poor driveability)	1. Fuel pump control circuit 2. A/T faulty 3. Electric throttle control system	05-173 05-384 05-133
Surging (Poor driveability)	1. Fuel pump control circuit	05-173
Soon after starting (Engine stall)	1. Fuel pump control circuit	05-173
During A/C operation (Engine stall)	1. A/C signal circuit (Compressor circuit) 2. ECM	05-536 01-31
Unable to refuel/Difficult to refuel	1. ORVR system	