 
 
 
 
 
 


AUTOMATIC TRANSMISSION / TRANS

 
 
PREPARATION

020X4-01

SST

	09023-12700	Union Nut Wrench 17mm	AUTOMATIC TRANSAXLE ASSY
	09223-15020	Oil Seal & Bearing Replacer	FRONT DIFFERENTIAL OIL SEAL
	09308-00010	Oil Seal Puller	FRONT DIFFERENTIAL OIL SEAL
	09316-6001 1	Transmission & Transfer Bearing Replacer	FRONT DIFFERENTIAL OIL SEAL
	(09316-0001 1)	Replacer Pipe	FRONT DIFFERENTIAL OIL SEAL
	09350-32014	TOYOTA Automatic Transmission Tool Set	TORQUE CONVERTER CLUTCH AND DRIVE PLATE AUTOMATIC TRANSAXLE ASSY
	(09351-32010)	One-way Clutch Test Tool	TORQUE CONVERTER CLUTCH AND DRIVE PLATE AUTOMATIC TRANSAXLE ASSY
	(09351-32020)	Stator Stopper	TORQUE CONVERTER CLUTCH AND DRIVE PLATE AUTOMATIC TRANSAXLE ASSY
	09950-70010	Handle Set	FRONT DIFFERENTIAL OIL SEAL
	(09951-07150)	Handle 150	FRONT DIFFERENTIAL OIL SEAL

Recommended Tools

	09040-0001 1	Hexagon Wrench Set	TRANSMISSION WIRE AUTOMATIC TRANSAXLE ASSY
	(09043-20050)	Socket Hexagon Wrench 5	TRANSMISSION WIRE AUTOMATIC TRANSAXLE ASSY

Equipment

Straight edge	Torque converter
Vernier calipers	Torque converter
Dial indicator or dial indicator with magnetic base	Drive plate
Punch	
Torque wrench	

Lubricant

Item	Capacity	Classification
U150E: Automatic transaxle fluid		
Dry fill	8.98 liters (9.5 US qts, 7.9 Imp.qts)	ATF Type T-IV
Drain and refill	3.10 liters (3.3 US qts, 2.8 Imp.qts)	