

L PART NUMBER OF CONNECTORS

Code	Part Name	Part Number	Code	Part Name	Part Number
A 1	A/C Ambient Temp. Sensor	90980-11070	B10	Back Door Lock Assembly	90980-11011
A 3	ABS Speed Sensor Front LH	90980-11002	B11	Back Door Lock Assembly	
A 4	ABS Speed Sensor Front RH		B12	Back Door Opener SW	90980-11967
A 5	Air Fuel Ratio Sensor (Bank 1 Sensor 1)	90980-11178	B13	Blower Motor (Rear)	90980-12488
A 6	Air Fuel Ratio Sensor (Bank 2 Sensor 1)		B15	Blower Motor Controller (Rear)	90980-11136
A 7	Airbag Sensor Front LH	90980-11856	B17	Buckle SW RH	90980-11019
A 8	Airbag Sensor Front RH		B18	Buckle SW LH (w/ Power Seat)	90980-12381
A 9	A/C Control Assembly	90980-12557		Buckle SW LH (w/o Power Seat)	90980-10942
A10	A/C Control Assembly	90980-12554		Seat Position Sensor (w/ Power Seat)	90980-12381
A11	A/C Control Assembly	90980-12552		Seat Position Sensor (w/o Power Seat)	90980-10942
A12	A/C Evaporator Temp. Sensor (Front)	90980-11918	C 3	Cooling Fan ECU	90980-12058
A13	A/C Room Temp. Sensor		C 4	Counter Gear Speed Sensor	90980-11156
A14	A/T Shift Lever Illumination	90980-12063	C 6	Center Speaker	90980-11013
A15	Accel Position Sensor	90980-11858	C 8	Clearance Sonar Buzzer	90980-10825
A16	Air Inlet Control Servo Motor	90980-11909	C 9	Clearance Sonar ECU	90980-12554
A17	Air Mix Control Servo Motor (Driver Side)		C10	Combination Meter	90980-12557
A18	Air Mix Control Servo Motor (Front Passenger Side)		C11	Combination SW	90980-11672
A19	Air Vent Mode Control Servo Motor (Front)		C12	Combination SW	90980-11594
A20	Airbag Sensor Assembly (w/ Side Airbag)	82824-50160	C13	Combination SW	90980-12559
	Airbag Sensor Assembly (w/o Side Airbag)	90980-11869	C14	Curtain Shield Airbag Squib Front LH	90980-12219
A21	Airbag Sensor Assembly	90980-11872	C15	Curtain Shield Airbag Squib Front RH	
A22	Airbag Sensor Assembly (w/ Side Airbag)	82824-50150	C16	Curtain Shield Airbag Squib Rear LH	
	Airbag Sensor Assembly (w/o Side Airbag)	90980-11867	C17	Curtain Shield Airbag Squib Rear RH	
A23	Airbag Squib (Front Passenger Airbag Assembly)	90980-12160	C18	VVT Sensor (Bank 1 Sensor 1)	90980-12353
A24	Airbag Squib (Steering Wheel Pad)		C19	VVT Sensor (Bank 2 Sensor 1)	
A25	Automatic Light Control Sensor	90980-12056	C20	VVT Sensor (Bank 2 Sensor 2)	
A26	A/C Evaporator Temp. Sensor (Rear)	90980-11918	C21	VVT Sensor (Bank 1 Sensor 2)	
A27	ABS Speed Sensor Rear LH	90980-10905	C22	Camshaft Position Sensor	90980-12611
A28	ABS Speed Sensor Rear RH		C23	Camshaft Timing Oil Control Valve (Bank 1 Sensor 1)	90980-11162
A29	Accessory Meter	90980-11923	C24	Camshaft Timing Oil Control Valve (Bank 2 Sensor 1)	
A30	Air Vent Mode Control Servo Motor (Rear)	90980-11909	C25	Camshaft Timing Oil Control Valve (Bank 2 Sensor 2)	
A31	A/C Compressor	90980-11016	C26	Camshaft Timing Oil Control Valve (Bank 1 Sensor 2)	
A32	A/C Compressor	90980-11156	C27	Canister Pump Module	90980-12380
A33	A/C Pressure Sensor	90980-10845	D 1	Data Link Connector 3	90980-11665
A34	ACC Cut Relay	82660-53010	D 2	Distance Control ECU	90980-12444
B 1	Brake Fluid Level Warning SW	90980-11070	D 3	Dome Cut Relay	82660-20340
B 2	Blower Motor (Front)	90980-11579	D 4	Door Lock Control Receiver	90980-11909
B 3	Blower Motor Controller (Front)	90980-10910	D 5	Door Courtesy Light Front LH	90980-12347
B 4	Blower Resistor	90980-11136	D 6	Door Courtesy Light Front RH	
B 5	Blower SW	90980-11686	D 7	Door Courtesy SW Front LH	90980-12470
B 6	Body ECU	90980-12561	D 8	Door Courtesy SW Front RH	
B 7	Body ECU	90980-12330			
B 8	Body ECU	90980-12328			
B 9	Body ECU	90980-12329			

Note: Not all of the above part numbers of the connector are established for the supply.

Code	Part Name	Part Number	Code	Part Name	Part Number
D 9	Door Lock Control SW Front LH	90980-12122	F25	Fuse Box No.2	82610-20080
	Power Window Master SW		G 1	Generator	90980-09876
D10	Door Lock Control SW Front RH	90980-12349	G 2	Generator	90980-11964
D11	Door Key Lock and Unlock SW Front LH	90980-12226	G 3	Glass Antenna Amplifier	90980-10871
	Door Lock Motor Front LH		G 4	Gateway ECU	90980-12404
	Door Unlock Detection SW Front LH		H 1	Headlight Beam Level Control Actuator LH	90980-11016
D12	Door Key Lock and Unlock SW Front RH		H 2	Headlight Beam Level Control Actuator RH	
	Door Lock Motor Front RH		H 3	Headlight Control ECU LH	90980-11003
	Door Unlock Detection SW Front RH		H 4	Headlight Control ECU RH	
D13	Diode (Rear Wiper)	90980-10962	H 5	Headlight LH (High)	90980-11659
D14	Door Courtesy Light Front LH	-	H 6	Headlight LH (Low)	90980-11660
D15	Door Courtesy Light Front LH		H 7	Headlight RH (High)	90980-11659
D16	Diode (Starter)	90980-10962	H 8	Headlight RH (Low)	90980-11660
E 1	Electronically Controlled Transmission Solenoid	90980-12326	H 9	Heated Oxygen Sensor (Bank 2 Sensor 2)	90980-11930
E 3	Engine Hood Courtesy SW	90980-11003	H10	Horn (High)	90980-10619
E 4	Engine Control Module	90980-12525	H11	Horn (Low)	
E 5	Engine Control Module	90980-12529	H12	Hazard SW	90980-10933
E 9	Engine Control Module	90980-12527		Rear Window Defogger SW	
E10	Engine Control Module	90980-12528	H13	Headlight Beam Level Control SW	90980-10996
E11	Engine Control Module	90980-12526	H14	Heated Oxygen Sensor (Bank 1 Sensor 2)	90980-11012
E12	Engine Coolant Temp. Sensor	90980-10735	H15	High Mounted Stop Light	90980-11060
F 1	Front Fog Light LH	90980-11660	I 1	Ignition Coil and Igniter No.1	90980-11885
F 2	Front Fog Light RH		I 2	Ignition Coil and Igniter No.2	
F 3	Front Washer Motor	90980-11019	I 3	Ignition Coil and Igniter No.3	
F 4	Front Window Deicer	90980-11002	I 4	Ignition Coil and Igniter No.4	
F 5	Front Wiper Motor	90980-11599	I 5	Ignition Coil and Igniter No.5	
F 6	Fusible Link Block	82675-45020	I 6	Ignition Coil and Igniter No.6	
F 7	Fusible Link Block	82675-45010	I13	Ignition Key Cylinder Light	90980-11148
F 8	Fusible Link Block	82675-45020	I14	Ignition Key Cylinder Light	90980-12092
F 9	Fusible Link Block	99141-13005		Transponder Key Amplifier	
F10	Fusible Link Block	99141-12006	I15	Ignition SW	90980-11778
F11	Fusible Link Block	90980-09877	I16	Interior Light SW	90980-10801
F12	Fusible Link Block	90980-12332	I17	Inverter Relay	82660-20340
F13	Fusible Link Block	90980-12333	I18	Inner Mirror	90980-11794
F14	Fusible Link Block	90980-12331	I19	Interior Light LH No.1	90980-10908
F15	Front Window Deicer Relay	82660-20340	I20	Interior Light LH No.2	
F16	Fuse Box	82610-20080	I21	Interior Light RH No.1	
F17	Front Door Speaker LH	90980-12347	I22	Interior Light RH No.2	
F18	Front Door Speaker RH		I23	Injector No.1	90980-11875
F19	Fuel Lid Courtesy SW	90980-12471	I24	Injector No.2	
F20	Fuel Pump	90980-11077	I25	Injector No.3	
	Fuel Sender		I26	Injector No.4	
F21	Fusible Link Block	99141-13005	I27	Injector No.5	
F22	Folding Motor LH	90980-12376	I28	Injector No.6	
F23	Folding Motor RH		J 1	Junction Connector	90980-10803
F24	Fuel Pump Resistor	90980-11156	J 2	Junction Connector	

L PART NUMBER OF CONNECTORS

Code	Part Name	Part Number	Code	Part Name	Part Number
J 3	Junction Connector	90980-12320	K 4	Key Interlock Solenoid	90980-10795
J 4	Junction Connector			Unlock Warning SW	
J 5	Junction Connector	90980-12315	K 5	Knock Sensor (Bank 2)	90980-11875
J 6	Junction Connector		K 6	Knock Sensor (Bank 1)	
J 7	Junction Connector	90980-12308	L 1	Laser Sensor	90980-12292
J 8	Junction Connector		L 2	License Plate Light LH	90980-11148
J 9	Junction Connector	90980-12318	L 3	License Plate Light RH	
J10	Junction Connector		L 4	Luggage Compartment Light	90980-12347
J11	Junction Connector	90980-12314	M 2	Main SW	90980-10933
J12	Junction Connector			Security Indicator Light	
J13	Junction Connector	90980-12311	M 3	Mirror Heater LH	90980-11922
J14	Junction Connector			Remote Control Mirror LH	
J15	Junction Connector	90980-11542	M 4	Mirror Heater RH	
J16	Junction Connector	90980-10803		Remote Control Mirror RH	
J17	Junction Connector	90980-11915	M 5	Moon Roof Control ECU	90980-10997
J18	Junction Connector	90980-12085	M 6	Mass Air Flow Meter	90980-12292
J19	Junction Connector		N 1	Noise Filter (Ignition No.2)	90980-10843
J20	Junction Connector	90980-10803	N 2	Noise Filter (Ignition No.1)	
J21	Junction Connector		O 1	Oil Pressure SW	90980-11363
J22	Junction Connector	90980-11542	O 3	Occupant Classification ECU	90980-12356
J23	Junction Connector		O 4	Occupant Classification ECU	90980-12357
J24	Junction Connector	90980-11661	O 5	Occupant Classification Sensor Front LH	90980-12353
J25	Junction Connector		O 6	Occupant Classification Sensor Front RH	90980-12354
J26	Junction Connector	90980-10803	O 7	Occupant Classification Sensor Rear LH	
J27	Junction Connector		O 8	Occupant Classification Sensor Rear RH	90980-12353
J28	Junction Connector	90980-12318	O 9	Outer Mirror Control ECU LH	90980-12150
J31	Junction Connector		O10	Outer Mirror Control ECU LH	90980-12553
J32	Junction Connector	90980-12308	O11	Outer Mirror Control ECU RH	90980-12150
J33	Junction Connector		O12	Outer Mirror Control ECU RH	90980-12553
J34	Junction Connector	90980-12320	O13	Outer Rear View Mirror LH	90980-12411
J35	Junction Connector		O14	Outer Rear View Mirror RH	
J36	Junction Connector	90980-12085	P 1	Park/Neutral Position SW	90980-12362
J37	Junction Connector		P 2	Parking Light LH	90980-11020
J38	Junction Connector	90980-10799		Turn Signal Light LH	
J39	Junction Connector	90980-10803	P 3	Parking Light RH	
J40	Junction Connector	90980-11398		Turn Signal Light RH	
J41	Junction Connector	90980-10830	P 4	Power Steering Oil Pressure SW	90980-11428
J42	Junction Connector	90980-11398	P 6	Parking Brake SW	90980-10871
J43	Junction Connector	90980-11915	P 7	Power Back Door Main SW	90980-10957
J44	Junction Connector	90980-12374	P 8	Power Outlet (Front No.2)	90980-10760
J45	Junction Connector		P 9	Power Quarter Window SW	90980-10801
J46	Junction Connector	90980-11529	P10	Power Slide Door Main SW	90980-10933
J47	Junction Connector	90980-11542	P11	Personal Light	90980-10908
J48	Junction Connector		P12	Power Back Door Drive Unit	90980-11527
J49	Junction Connector	90980-11529	P13	Power Back Door ECU	90980-12444
K 1	Keyless Buzzer	90980-11142	P14	Power Back Door ECU	90980-11362

Note: Not all of the above part numbers of the connector are established for the supply.

Code	Part Name	Part Number	Code	Part Name	Part Number
P15	Power Back Door Touch Sensor LH	90980-11967	P56	Power Seat Motor (Front Passenger's Seat Slide Control)	90980-10825
P16	Power Back Door Touch Sensor RH		P57	Power Outlet (Front No.1)	90980-10760
P17	Power Back Door Warning Buzzer	90980-11142	P58	Position Control ECU and SW	90980-10801
P18	Power Outlet (Rear)	90980-10760	P59	Position Control ECU and SW	90980-12551
P19	Power Outlet No.1 (115V)	90980-10601	P60	Power Rear No.2 Seat SW LH	90980-12221
P20	Power Outlet No.2 (115V)		P61	Power Rear No.2 Seat SW RH	
P21	Power Slide Door Control Motor and Clutch LH	90980-11537	P62	Power Rear No.2 Seat ECU LH	90980-12557
P22	Power Slide Door Control Motor and Clutch RH		P63	Power Rear No.2 Seat ECU LH	90980-10997
P23	Power Slide Door Control SW LH	90980-11909	P64	Power Rear No.2 Seat ECU RH	90980-12557
P24	Power Slide Door Control SW RH		P65	Power Rear No.2 Seat ECU RH	90980-10997
P25	Power Slide Door ECU LH	90980-12203	P66	Power Seat Motor (Rear No.2 Seat LH Reclining Control)	90980-10825
P26	Power Slide Door ECU LH	90980-11362	P67	Power Seat Motor (Rear No.2 Seat LH Reclining Control)	90980-10908
P27	Power Slide Door ECU RH	90980-12203	P68	Power Seat Motor (Rear No.2 Seat RH Reclining Control)	90980-10825
P28	Power Slide Door ECU RH	90980-11362	P69	Power Seat Motor (Rear No.2 Seat RH Reclining Control)	90980-10908
P29	Power Slide Door Lock Assembly LH	90980-10799	R 1	Rear Washer Motor	90980-11019
P30	Power Slide Door Lock Assembly RH		R 2	Radio and Player	90980-10997
P31	Power Slide Door Touch Sensor LH	90980-11917	R 3	Radio and Player	90980-10996
P32	Power Slide Door Touch Sensor RH		R 4	Radio and Player	90980-12259
P33	Power Slide Door Warning Buzzer LH	90980-11142	R 5	Radio and Player	90980-10997
P34	Power Slide Door Warning Buzzer RH		R 6	Radio and Player	90980-10996
P35	Power Vent Window Motor LH	90980-12471	R 7	Radio and Player	90980-12038
P36	Power Vent Window Motor RH		R 8	Radio and Player	90980-12183
P37	Power Window Control SW Front RH	90980-12348	R 9	Radio and Player	90980-12259
P38	Power Window Control SW Rear LH	90980-10631	R10	Radio and Player with Display	90980-12404
P39	Power Window Control SW Rear RH		R12	Radio and Player with Display	90980-11909
P40	Power Window Motor Front LH	90980-12349	R13	Radio and Player with Display	90980-12259
P41	Power Window Motor Front RH		R14	Radio and Player with Display	90980-12183
P42	Power Window Motor Rear LH	90980-11900	R15	Radio and Player with Display	90980-12038
P43	Power Window Motor Rear RH		R16	Radio and Player with Display	90980-12209
P44	Pretensioner LH	90980-12253	R17	Remote Control Mirror SW (w/ Driving Position Memory)	90980-11989
P45	Pretensioner RH			Remote Control Mirror SW (w/o Driving Position Memory)	90980-11657
P46	Power Seat Control SW (Driver's Seat)	90980-10997	R18	Rear A/C Control SW (Automatic A/C)	90980-11923
P47	Power Seat Motor (Driver's Seat Reclining Control)	90980-10825		Rear A/C Control SW (Manual A/C)	90980-11911
P49	Power Seat Control SW (Driver's Seat Lumbar Support Control)	90980-10789	R19	Rear Combination Light LH	90980-11013
P50	Power Seat Control SW (Front Passenger's Seat)	90980-10997	R20	Rear Combination Light LH	90980-10795
P51	Power Seat Motor (Driver's Seat Front Vertical Control)	90980-10825	R21	Rear Combination Light RH	90980-11013
P52	Power Seat Motor (Driver's Seat Lifter Control)		R22	Rear Combination Light RH	90980-10795
P53	Power Seat Motor (Driver's Seat Lumbar Support Control)		R23	Rear Room Temp. Sensor	90980-11918
P54	Power Seat Motor (Driver's Seat Slide Control)		R29	Rear Speaker LH	90980-12347
P55	Power Seat Motor (Front Passenger's Seat Reclining Control)		R30	Rear Speaker RH	
			R31	Rear Window Defogger	90980-10914

L PART NUMBER OF CONNECTORS

Code	Part Name	Part Number	Code	Part Name	Part Number
R32	Rear Window Defogger	90980-10913	S36	Slide Door Lock Assembly	90980-10799
R33	Rear Wiper Motor and Relay	90980-10908	S37	Slide Door Closer ECU	90980-10801
R34	Running Light Resistor	90980-10928	T 1	Theft Deterrent Horn	90980-10619
S 1	Side Marker Light LH	90980-11156	T 2	Throttle Control Motor	90980-11858
S 2	Side Marker Light RH			Throttle Position Sensor	
S 3	Skid Control ECU with Actuator (w/ VSC)	90980-12297	T 3	Turbine Speed Sensor	90980-11156
	Skid Control ECU with Actuator (w/o VSC)	90980-12020	T 4	Tire Pressure Warning Reset SW	90980-10906
S 4	Starter	90980-11400	T 5	Traction Control SW	90980-10933
S 5	Starter	90980-09463	T 6	Transponder Key Computer	90980-11911
S 6	Seat Heater SW (Driver's Seat)	90980-10957	T 7	Turn Signal Flasher	90980-10799
S 7	Seat Heater SW (Front Passenger's Seat)	90980-10933	T 8	Tweeter Front LH	90980-11013
S 8	Shift Lock Control ECU	90980-12552	T 9	Tweeter Front RH	
	Transmission Control SW		T10	Television Camera	90980-12211
S 9	Steering Sensor	90980-12162	T11	Tweeter Rear LH	90980-12472
S10	Stereo Component Amplifier	90980-10821	T12	Tweeter Rear RH	
S11	Stereo Component Amplifier	90980-12200	T13	Telephone Microphone	90980-12211
S12	Stop Light SW	90980-11118	T14	Television Display	90980-12556
S13	Satellite SW	90980-12113	T15	Tire Pressurre Warning ECU	90980-12552
S14	Side Airbag Sensor Front LH	90980-12225	T16	Tire Pressure Warning Antenna and Reciever	90980-12366
S15	Side Airbag Sensor Front RH		U 1	Ultrasonic Sensor (Front Left)	90980-11246
S16	Side Airbag Sensor Rear LH		U 2	Ultrasonic Sensor (Front Right)	
S17	Side Airbag Sensor Rear RH		U 3	Ultrasonic Sensor (Rear Left Center)	
S18	Side Airbag Squib LH	90980-11864	U 4	Ultrasonic Sensor (Rear Left)	
S19	Side Airbag Squib RH		U 5	Ultrasonic Sensor (Rear Right Center)	
S20	Slide Door Attachment Control LH	90980-10797	U 6	Ultrasonic Sensor (Rear Right)	
S21	Slide Door Attachment Control LH	90980-11019	V 2	VSV (AICV)	90980-11156
S22	Slide Door Attachment Control LH	90980-11150	V 3	VSV (Purge)	
S23	Slide Door Attachment Control RH	90980-10797	V 6	VSC Warning Buzzer	90980-10906
S24	Slide Door Attachment Control RH	90980-11019	V 7	Vanity Light LH	90980-11918
S25	Slide Door Attachment Control RH	90980-11150	V 8	Vanity Light RH	
S26	Slide Door Courtesy Light LH	90980-11148	V10	Video Terminal	90980-12551
S27	Slide Door Courtesy Light RH		V11	Voltage Inverter	90980-12475
S28	Slide Door Courtesy SW LH	90980-12470	V13	VSV (ACM)	90980-10843
S29	Slide Door Courtesy SW RH		V14	VSV (ACIS)	90980-11162
S30	Seat Heater ECU LH	82824-24040	W 1	Washer Level Sensor	90980-11068
S31	Seat Heater ECU RH		W 2	Water Valve Servo Motor	90980-11909
S32	Stereo Jack Adapter	82824-21030	W 3	Woofer	90980-10795
S33	Seat Memory SW	90980-11950	Y 1	Yaw Rate Sensor	90980-11904
S34	Short Connector	90980-12366			
S35	Short Connector	90980-12365			

Note: Not all of the above part numbers of the connector are established for the supply.

