

Buick Skylark 1994 fuse box diagram

Fuses and Circuit Breakers

The fuse panel is to the left of the steering column, near the parking brake release lever.

Position	Ampere rating [A]	Fuse	Usage
1	5	PRNDL	Electronic PRNDL Display
2	20	F/P INJ	Fuel Pump, Injectors
3	20	STOP HAZ	Stop/Hazard Lamps
4	15	CTSY	Door Lock Switches, Power Mirrors, Cigar Lighter
5	3	AIR BAG	Supplemental Inflatable Restraint, Crank Input
6	5	INST LPS	Instrument Panel, Interior Lamps Dimming
7	10	GAUGES	Gauges, Rear Defog, Warning Lights
8	15	HORN	Horn
9	15	ALARM	Interior Lamps, Chime, Auto Door Locks, Remote Keyless Entry
10	25	HTR-A/C	Heater, Air Conditioning, Antilock Brakes, Daytime Running Lamps (Canada)
11	10	RDO IUGN	Radio Power, Cruise Control
12	20	TURN	Turn Signals
13	20	DR LK	Auto Door Lock
14	20	TAIL LPS	Tail Lamps, Marker Lamps, License Lamps

15	30	WDO	Power Windows, Sunroof (Circuit Breaker
16	25	WIPER	Windshield Wipers/Washers
17	15	ERLS	Engine Controls, Back-up Lamps
18	10	DR UNLK	Auto Door Unlock (Remove to Disable)
19	20	FTP	Flash-to-Pass (U.S. Only)
20	30	ACC	Rear Window Defogger, Power Seats, Power Sunroof (Circuit Breaker)
21	15	AIR BAG	Supplemental Inflatable Restraint
22	20	IGN ECM	Ecm, Ignition System
23	20	HDLP	Headlamps (Circuit Breaker)