


LUBRICATION SYSTEM

	Page
TRUBLESHOOTING	LU-2
OIL PRESSURE CHECK	LU-2
REPLACEMENT OF ENGINE OIL AND OIL FILTER....	LU-3
OIL PUMP	LU-4
OIL PRESSURE REGULATOR	
(For Lash Adjuster Valve).....	LU-9

TROUBLESHOOTING

Problem	Possible cause	Remedy	Page
Oil leakage	Cylinder head cylinder block or oil pump body damaged or cracked Oil seal faulty Gasket faulty	Replace as necessary Replace oil seal Replace gasket	LU-4
Low oil pressure	Oil leakage Relief valve faulty Oil pump faulty Engine oil poor quality Crankshaft bearing faulty Connecting rod bearing faulty	Replace as necessary Replace relief valve Replace oil pump Replace engine oil Replace bearing Replace bearing	LU-4 LU-4 LU-3
High oil pressure	Oil filter clogged Relief valve faulty	Replace oil filter Replace relief valve	LU-3 LU-4

Recommended Viscosity (SAE)

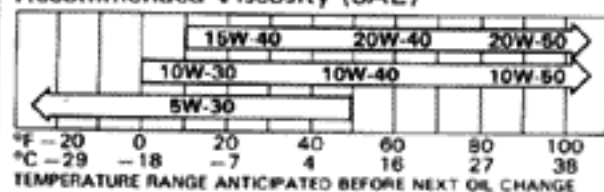

LU0311

OIL PRESSURE CHECK

1. CHECK OIL QUALITY

Check the oil for deterioration, entry of water, discoloring or thinning.

If the quality is poor, change the oil.

Use API grade SF or SF/CC multigrade, fuel-efficient and recommended viscosity oil.

2. CHECK OIL LEVEL

The oil level should be between the L and F marks on the level gauge. If low, check for leakage and add oil up to the F mark.

3. REMOVE OIL PRESSURE SWITCH OR SENDER GAUGE

4. INSTALL OIL PRESSURE GAUGE

5. START ENGINE

Start engine and warm it up to normal operating temperature.

6. MEASURE OIL PRESSURE

Oil pressure:

At idle speed More than 0.3 kg/cm²
(4.3 psi, 29 kPa)

At 3,000 rpm 2.5 — 5.0 kg/cm²
(36 — 71 psi, 245 — 490 kPa)

NOTE: Check for oil leakage after reinstalling the oil pressure switch or sender gauge.

LU0051

REPLACEMENT OF ENGINE OIL AND OIL FILTER

1. DRAIN ENGINE OIL

Remove the oil drain plug and drain the oil into a container.


2. REPLACE OIL FILTER

(a) Using SST, remove the oil filter (located on right side of the engine block).


SST 09228-44010

(b) Inspect and clean the oil filter installation surface.

(c) Apply clean engine oil to the gasket of the new oil filter.

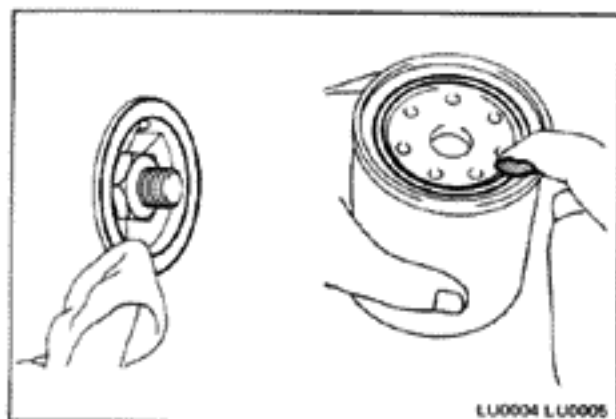

LU0004 LU0005

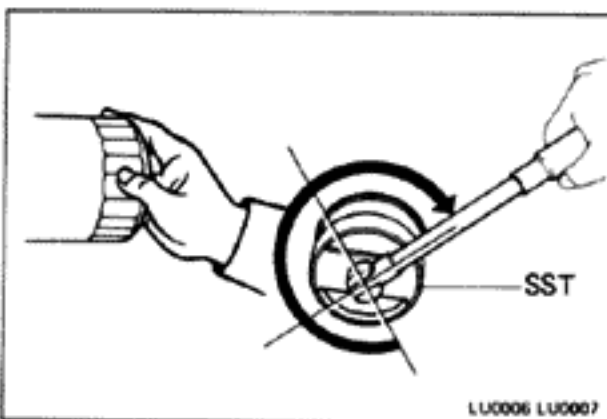

LU0006 LU0007

(d) Lightly screw in the oil filter to where you feel resistance.

(e) Then, using SST, tighten the oil filter an extra 3/4 turn.

SST 09228-44010

3. FILL WITH ENGINE OIL

(a) Clean and install the oil drain plug with a new gasket.

(b) Fill the engine with new oil API grade SF or SF/CC, multigrade, fuel efficient and recommended viscosity oil.

Oil capacity:

Dry fill	5.7 liters (6.0 US qts, 5.0 Imp. qts)
-----------------	---

Drain and refill	
w/o Oil filter change	4.6 liters (4.9 US qts, 4.0 Imp. qts)


w/ Oil filter change	5.1 liters (5.4 US qts, 4.5 Imp. qts)
----------------------	---

4. START ENGINE AND CHECK FOR LEAKS

5. RECHECK ENGINE OIL LEVEL




Recheck the engine oil level and refill as necessary.

NOTE: Insert the oil level gauge with the curved tip pointed toward the engine.

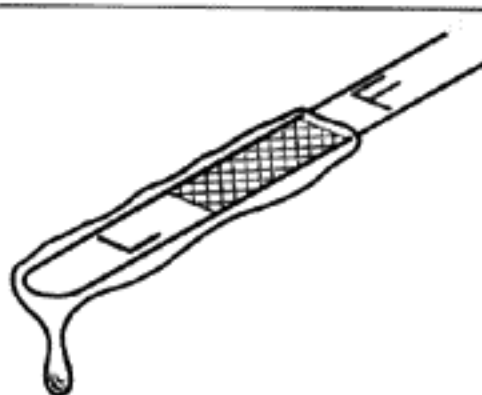


EM1759

OIL PUMP COMPONENTS

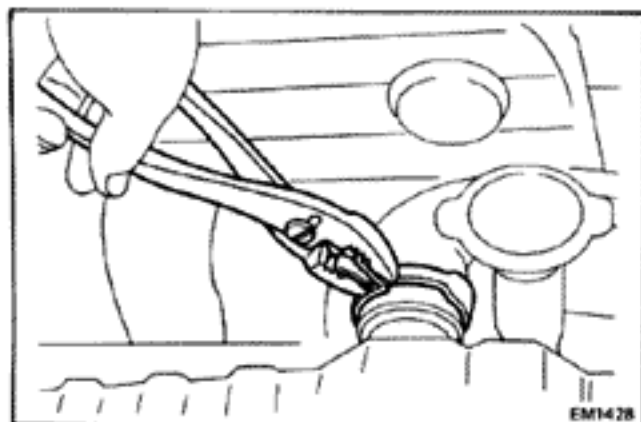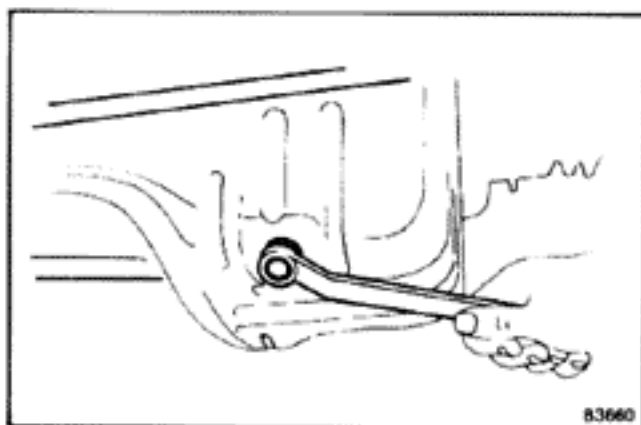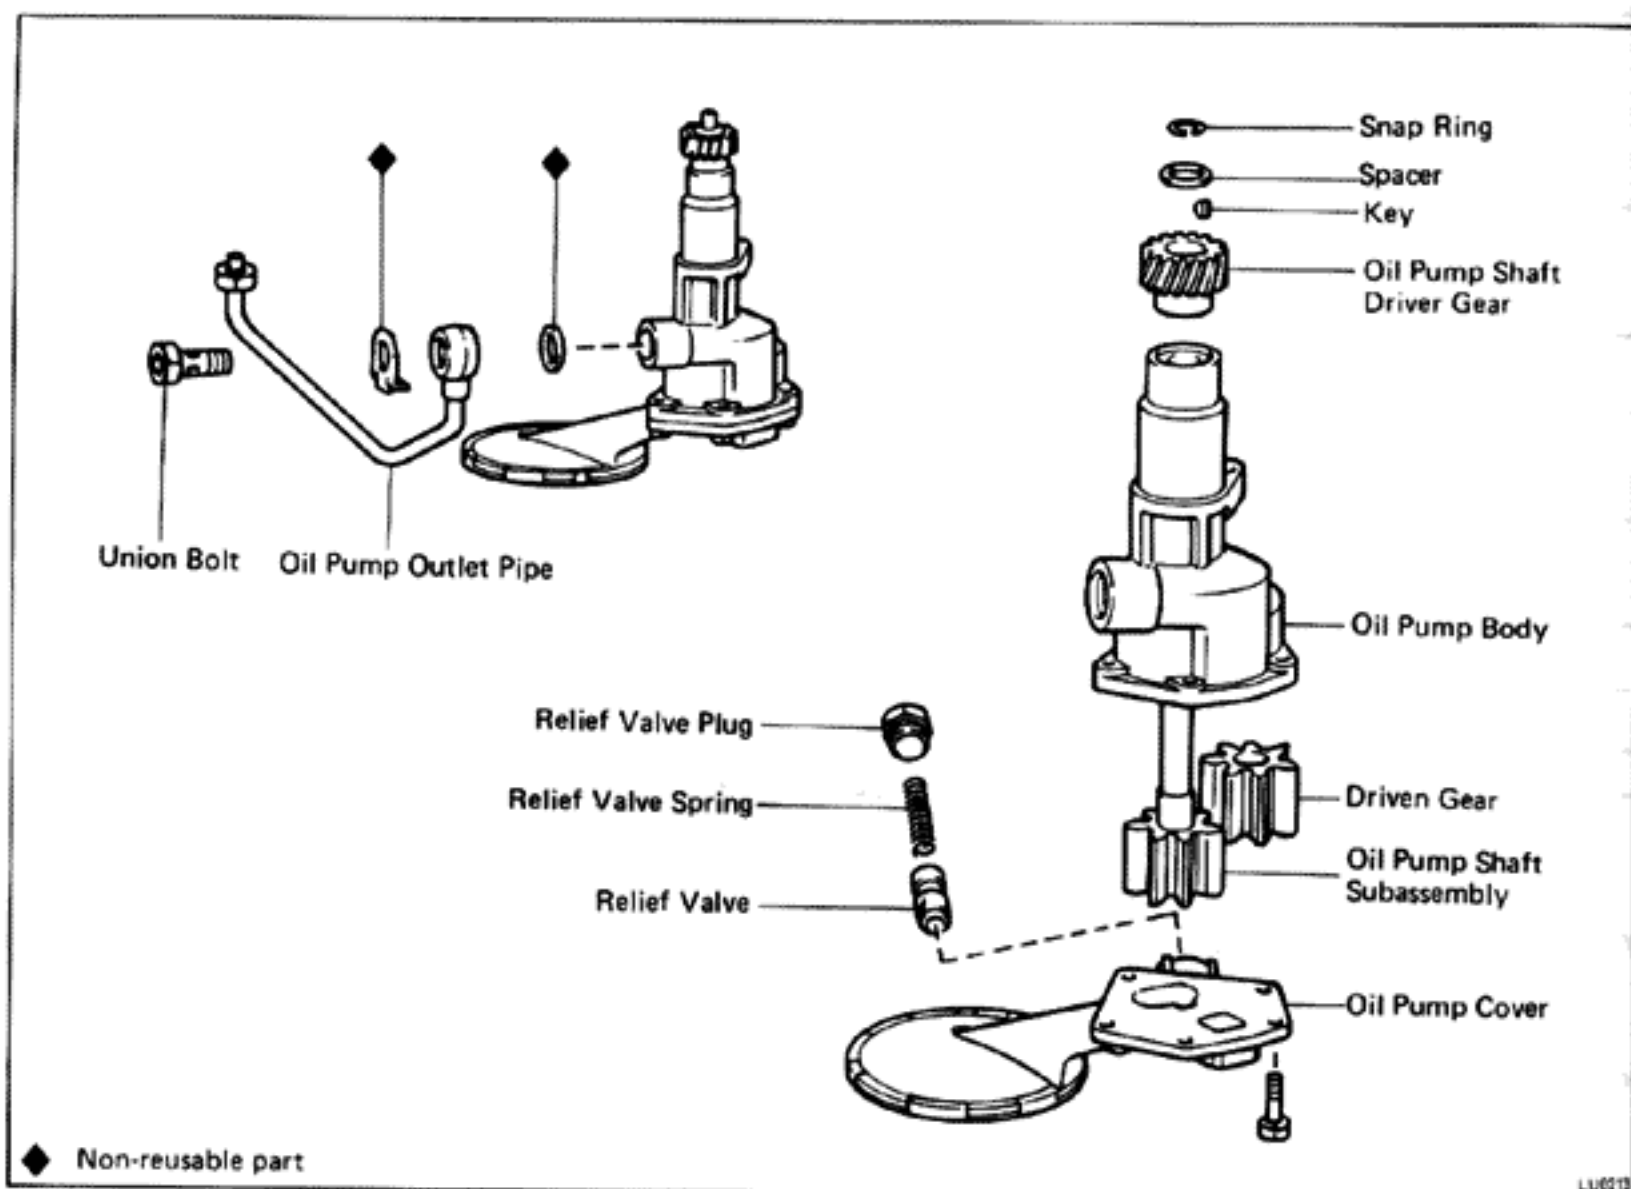

REMOVAL AND DISASSEMBLY OF OIL PUMP

1. DRAIN ENGINE OIL
2. DRAIN COOLANT
3. REMOVE AIR CLEANER CASE
4. REMOVE AIR CONNECTOR PIPE WITH NO.1 AND NO.2 AIR CLEANER HOSES
5. REMOVE OIL LEVEL GAUGE
6. DISCONNECT UPPER RADIATOR HOSE
7. LOOSEN FAN BELTS
Loosen the belt adjusting bolts and nut of the PS pump and alternator.
8. REMOVE FOUR FAN SHROUD BOLTS

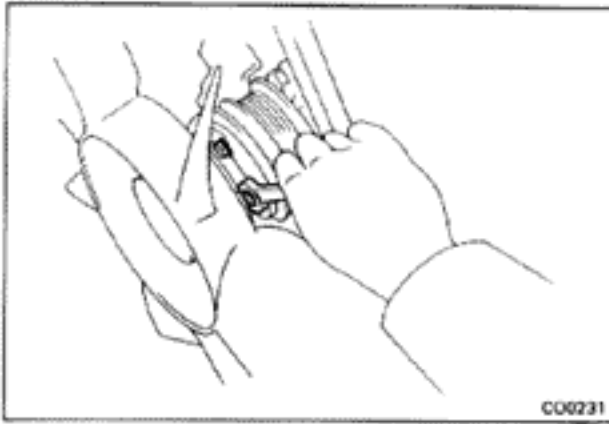


9. REMOVE FLUID COUPLING WITH FAN AND FAN SHROUD

- (a) Remove the four nuts from the fluid coupling flange.
- (b) Remove the fluid coupling with the fan shroud.

10. RAISE VEHICLE

CAUTION: Be sure the vehicle is securely supported.

11. REMOVE ENGINE UNDERCOVER

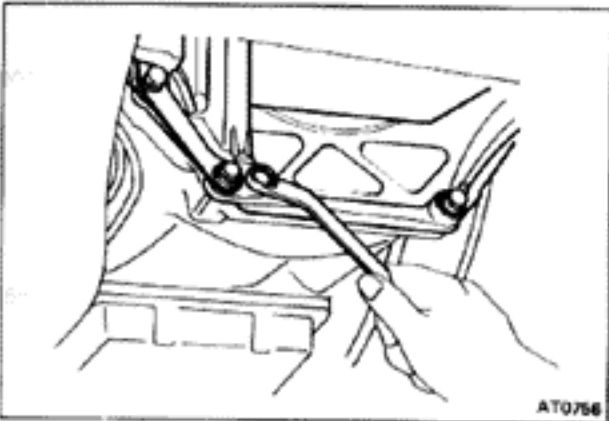


12. REMOVE EXHAUST PIPE CLAMP BOLT FROM PIPE STAY

13. REMOVE TWO STIFFENER PLATES

14. REMOVE FLYWHEEL HOUSING UNDERCOVER

15. REMOVE FOUR ENGINE MOUNT BOLTS

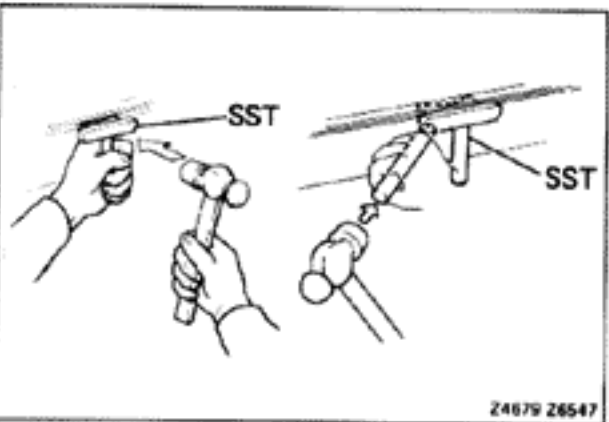


16. REMOVE OIL PAN

- (a) Remove the twenty six bolts, and remove the oil pan.
- (b) Using SST and a brass bar, separate the oil pan from the cylinder block.


SST 09032-00100

NOTE: When removing the oil pan, be careful not to damage the oil pan flange.

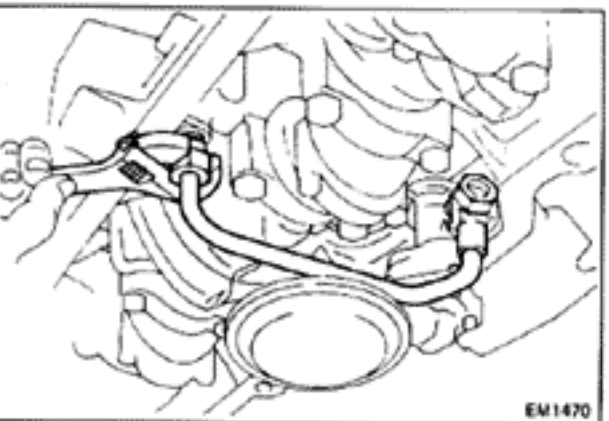


17. REMOVE OIL PUMP ASSEMBLY

- (a) Remove the union bolt and nut and disconnect the oil pump outlet pipe.
- (b) Remove the oil pump mounting bolt and remove the oil pump.

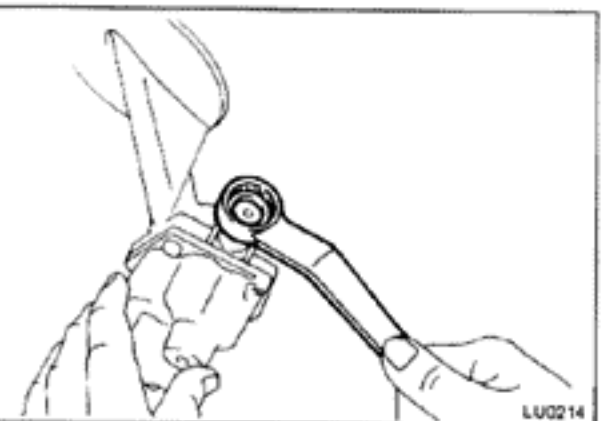

18. DISASSEMBLE OIL PUMP ASSEMBLY

- (a) Unscrew the relief valve plug, and remove spring and relief valve.
- (b) Remove the five bolts, and remove oil pump cover and driven gear.
- (c) Remove the snap ring, spacer, drive shaft gear, key and shaft subassembly.

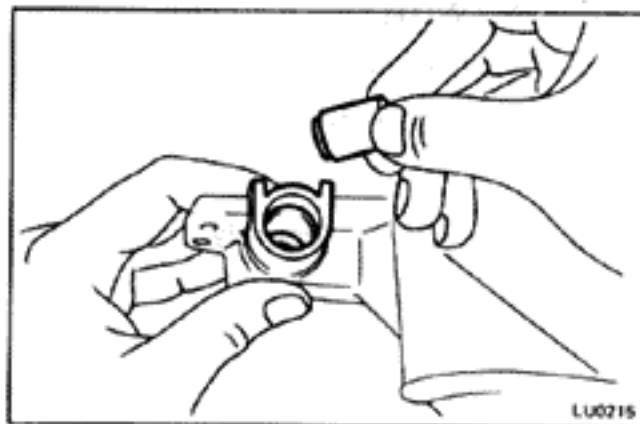


LU0215

INSPECTION OF OIL PUMP

1. INSPECT RELIEF VALVE

Check the relief valve for scoring or wear.

If damaged, replace the valve or pump assembly.

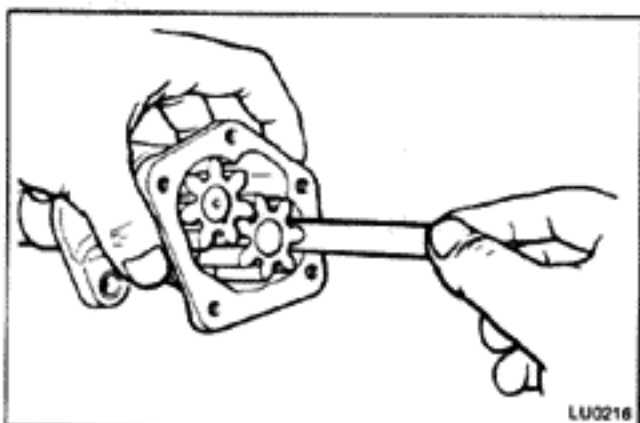

LU0216


2. MEASURE BODY CLEARANCE

Using a feeler gauge, measure the clearance between the driven gear and body.

Standard clearance: 0.03 — 0.06 mm
(0.0012 — 0.0024 in.)

Maximum clearance: 0.2 mm (0.008 in.)

If the clearance is greater than maximum, replace the gear and/or body.

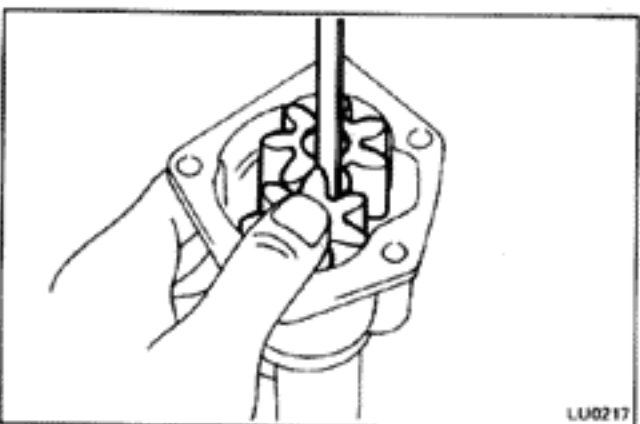

LU0217


3. MEASURE GEAR BACKLASH

Using a feeler gauge, measure the backlash as shown.

Standard clearance: 0.5 — 0.6 mm
(0.020 — 0.024 in.)

Maximum backlash: 0.9 mm (0.035 in.)

If the backlash is greater than maximum, replace the shaft subassembly and/or driven gear.

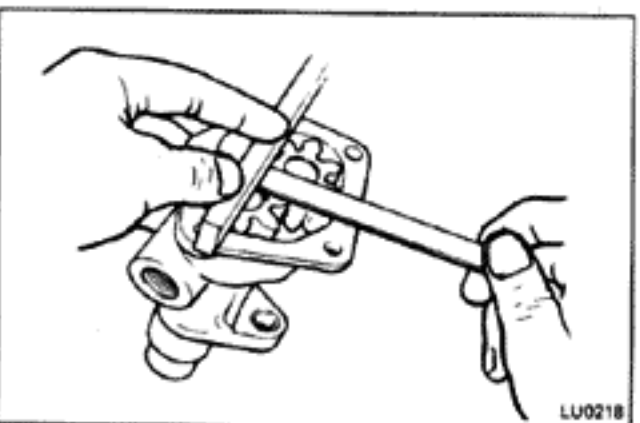

LU0218


4. MEASURE SIDE CLEARANCE

Using a feeler gauge and flat block, measure the side clearance as shown.

Standard clearance: 0.03 — 0.09 mm
(0.0012 — 0.0035 in.)

Maximum clearance: 0.15 mm (0.0059 in.)

If the clearance is greater than maximum, replace the gears and/or body.

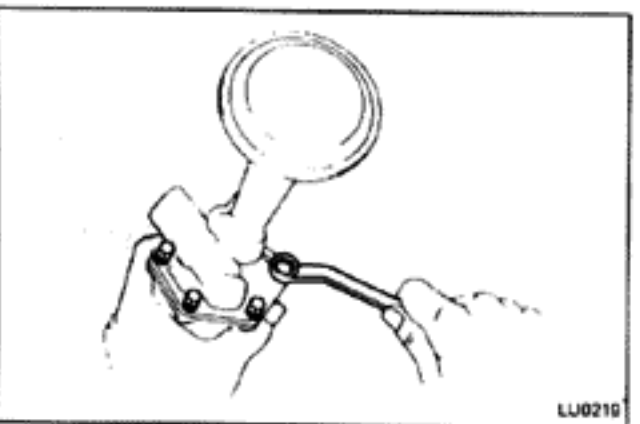


LU0219

ASSEMBLY OF OIL PUMP

(See page LU-4)

ASSEMBLE OIL PUMP ASSEMBLY



- Install the shaft subassembly, key, drive shaft gear, spacer and snap ring.
- Install the driven gear and pump cover with five bolts.
- Install the relief valve and spring in the cover and screw on the relief valve plug.

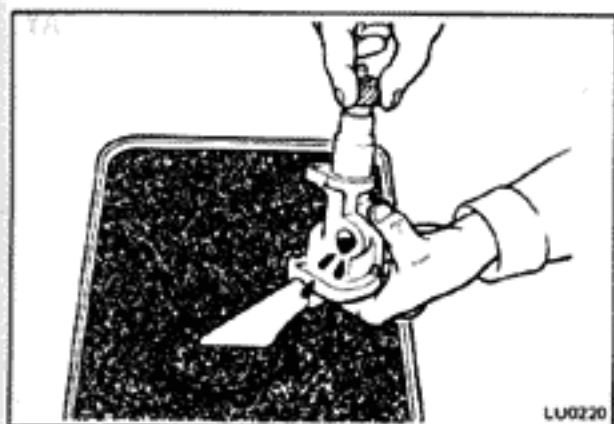

OPERATION CHECK OF OIL PUMP

CHECK PUMP OPERATION

- (a) Immerse the suction end of the pump into clean engine oil and turn the shaft counterclockwise with your hand. Oil should come out of the discharge hole.
- (b) Close the discharge hole with your thumb, and turn the shaft as before. The shaft should be difficult to turn.

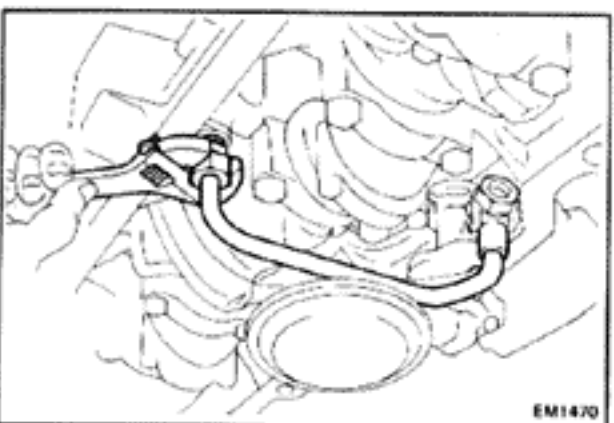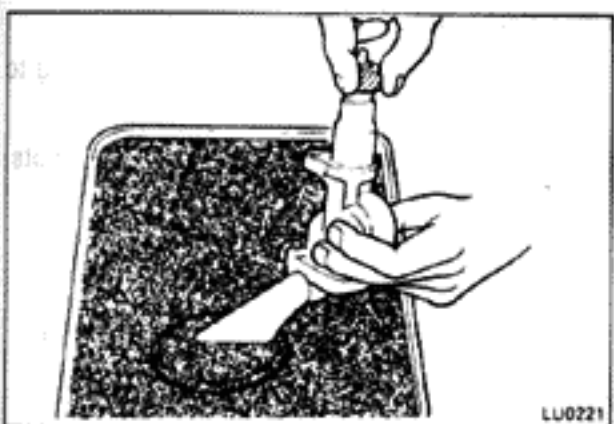

INSTALLATION OF OIL PUMP ASSEMBLY

1. INSTALL OIL PUMP ASSEMBLY

- (a) Install the oil pump and mounting bolt. Torque the bolt.

Torque: 220 kg-cm (16 ft-lb, 22 N·m)

- (b) Install the oil pipe with gasket lock washer and union bolt. Tighten the oil pipe union bolt and nut.

Torque: 350 kg-cm (25 ft-lb, 34 N·m)

2. INSTALL OIL PAN

- (a) Remove any packing material and be careful not to drop the oil on the contacting surfaces of the oil pan and cylinder block.

- Using a razor blade and gasket scraper, remove all the packing (FIPG) material from the gasket surfaces.
- Thoroughly clean all components to remove all the loose material.
- Clean both sealing surface with a non-residue solvent.

CAUTION: Do not use a solvent which will affect the painted surfaces.

- (b) Apply seal packing to the cylinder block installing surface of the oil pan.


Seal packing: Part No. 08826-00080 or equivalent


- (c) Install the oil pan over the studs on the block with the twenty four bolts and two nuts.

Torque the bolts and nuts.


Torque: 80 kg-cm (69 in.-lb, 7.8 N·m)

3. INSTALL FLYWHEEL HOUSING UNDER COVER

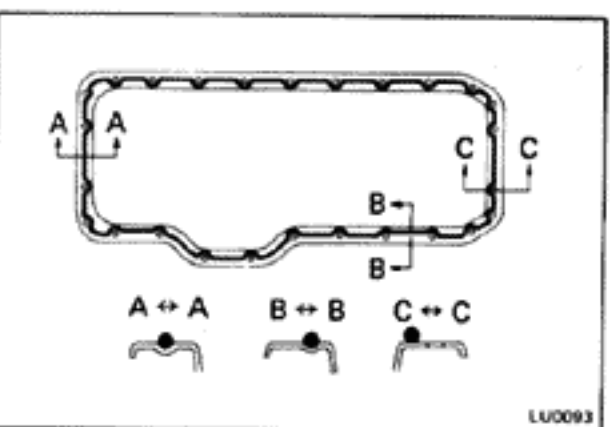

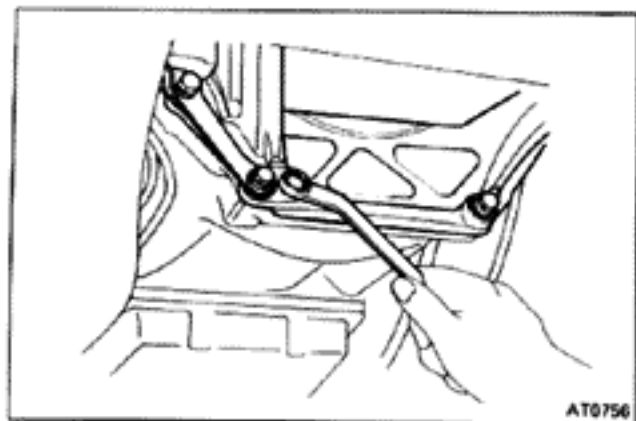


4. INSTALL EXHAUST PIPE CLAMP BOLT TO PIPE STAY
5. INSTALL TWO STIFFENER PLATES
6. INSTALL ENGINE UNDER COVER

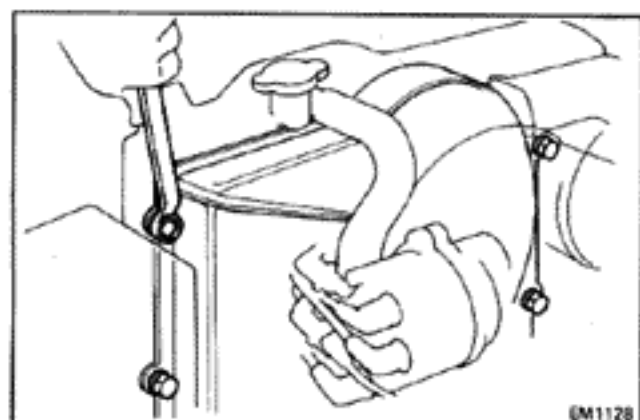

7. INSTALL FAN AND FAN SHROUD
 - (a) Put on the fan shroud together the fluid coupling to the engine compartment.
 - (b) Install the fluid coupling on the pulley with four nuts.
 - (c) Install the four fan shroud bolts.

8. ADJUST FAN BELT TENSION
(See page MA-4)
9. CONNECT UPPER RADIATOR HOSE
10. INSTALL AIR CONNECTOR PIPE WITH NO.1 AND NO.2 AIR CLEANER HOSES
11. INSTALL AIR CLEANER CASE
12. FILL WITH COOLANT
13. FILL WITH ENGINE OIL
14. START ENGINE AND CHECK FOR LEAKS

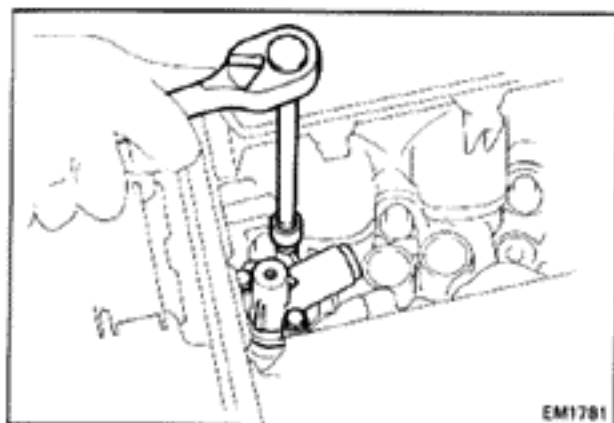


EM1781


OIL PRESSURE REGULATOR (For Lash Adjuster Valve)

REMOVAL AND DISASSEMBLY OF OIL PRESSURE REGULATOR

1. REMOVE NO. 3 TIMING BELT COVER
2. REMOVE TIMING BELT COVER STAY
3. REMOVE OIL PRESSURE REGULATOR AND GASKET
4. DISASSEMBLE OIL PRESSURE REGULATOR ASSEMBLY
Unscrew the relief valve plug, and remove the spring and relief valve.

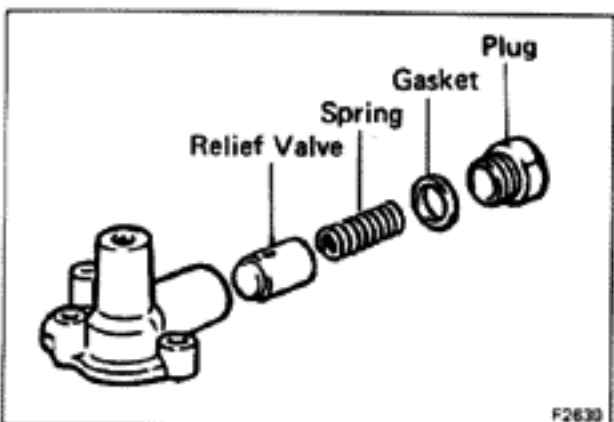


F2639

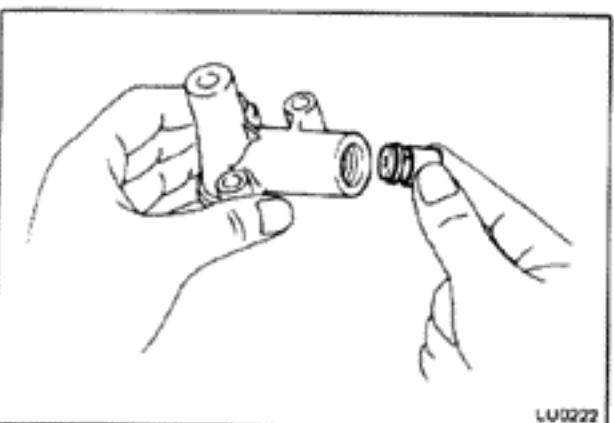

LU0222

INSPECTION OF OIL PRESSURE REGULATOR

Check the relief valve for scoring or wear.
If damaged, replace the valve or regulator assembly.

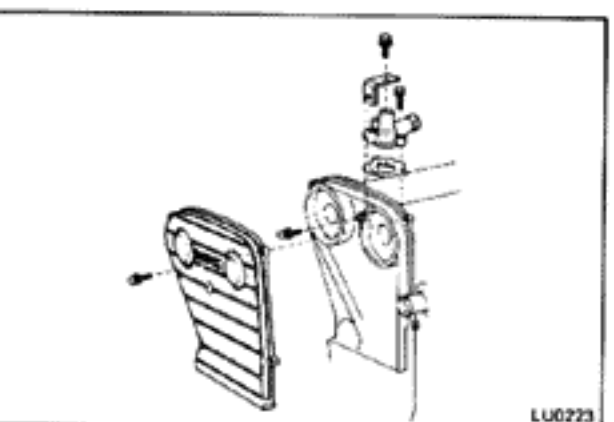

LU0223

ASSEMBLY AND INSTALLATION OF OIL PRESSURE REGULATOR

1. ASSEMBLE OIL PRESSURE REGULATOR ASSEMBLY
Install the relief valve and spring in the body, and screw on the relief valve plug.
2. INSTALL OIL PRESSURE REGULATOR OVER NEW GASKET
3. INSTALL TIMING BELT COVER STAY
4. INSTALL NO. 3 TIMING BELT COVER
5. START ENGINE AND CHECK FOR LEAKS