

CHG

SECTION CHARGING SYSTEM

CONTENTS

PRECAUTION	3	POWER GENERATION VOLTAGE VARIABLE CONTROL SYSTEM : System Diagram	8
PRECAUTIONS	3	POWER GENERATION VOLTAGE VARIABLE CONTROL SYSTEM : System Description	8
Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TEN- SIONER"	3	WIRING DIAGRAM	10
Precaution for Battery Service	3	CHARGING SYSTEM	10
Service Procedure Precautions for Models with a Pop-up Roll Bar	3	Wiring Diagram	10
Precaution for Power Generation Voltage Variable Control System	3	BASIC INSPECTION	14
PREPARATION	5	DIAGNOSIS AND REPAIR WORKFLOW	14
PREPARATION	5	Work Flow	14
Special Service Tools	5	CHARGING SYSTEM PRELIMINARY IN- SPECTION	17
Commercial Service Tools	5	Inspection Procedure	17
SYSTEM DESCRIPTION	6	POWER GENERATION VOLTAGE VARI- ABLE CONTROL SYSTEM OPERATION IN- SPECTION	18
COMPONENT PARTS	6	Inspection Procedure	18
CHARGING SYSTEM	6	DTC/CIRCUIT DIAGNOSIS	20
CHARGING SYSTEM : Component Parts Loca- tion	6	B TERMINAL CIRCUIT	20
CHARGING SYSTEM : Component Description.....	6	Description	20
POWER GENERATION VOLTAGE VARIABLE CONTROL SYSTEM	6	Diagnosis Procedure	20
POWER GENERATION VOLTAGE VARIABLE CONTROL SYSTEM : Component Parts Location.....	6	L TERMINAL CIRCUIT (OPEN)	21
POWER GENERATION VOLTAGE VARIABLE CONTROL SYSTEM : Component Description	7	Description	21
SYSTEM	8	Diagnosis Procedure	21
CHARGING SYSTEM	8	L TERMINAL CIRCUIT (SHORT)	23
CHARGING SYSTEM : System Diagram	8	Description	23
CHARGING SYSTEM : System Description	8	Diagnosis Procedure	23
POWER GENERATION VOLTAGE VARIABLE CONTROL SYSTEM	8	S TERMINAL CIRCUIT	24
		Description	24
		Diagnosis Procedure	24
		SYMPTOM DIAGNOSIS	25

A

B

C

D

E

F

G

H

I

J

K

L

CHG

N

O

P

CHARGING SYSTEM	25	SERVICE DATA AND SPECIFICATIONS	
Symptom Table	25	(SDS)	29
REMOVAL AND INSTALLATION	26	SERVICE DATA AND SPECIFICATIONS	
ALTERNATOR	26	(SDS)	29
Exploded View	26	Alternator	29
Removal and Installation	27		
Inspection	28		

PRECAUTIONS

< PRECAUTION >

PRECAUTION

PRECAUTIONS

Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

INFOID:000000007258389

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER", used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. This system includes seat belt switch inputs and dual stage front air bag modules. The SRS system uses the seat belt switches to determine the front air bag deployment, and may only deploy one front air bag, depending on the severity of a collision and whether the front occupants are belted or unbelted. Information necessary to service the system safely is included in the "SRS AIR BAG" and "SEAT BELT" of this Service Manual.

WARNING:

Always observe the following items for preventing accidental activation.

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision that would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see "SRS AIR BAG".
- Never use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

PRECAUTIONS WHEN USING POWER TOOLS (AIR OR ELECTRIC) AND HAMMERS

WARNING:

Always observe the following items for preventing accidental activation.

- When working near the Air Bag Diagnosis Sensor Unit or other Air Bag System sensors with the ignition ON or engine running, never use air or electric power tools or strike near the sensor(s) with a hammer. Heavy vibration could activate the sensor(s) and deploy the air bag(s), possibly causing serious injury.
- When using air or electric power tools or hammers, always switch the ignition OFF, disconnect the battery, and wait at least 3 minutes before performing any service.

Precaution for Battery Service

INFOID:000000007258390

Before disconnecting the battery, lower both the driver and passenger windows. This will prevent any interference between the window edge and the vehicle when the door is opened/closed. During normal operation, the window slightly raises and lowers automatically to prevent any window to vehicle interference. The automatic window function will not work with the battery disconnected.

Service Procedure Precautions for Models with a Pop-up Roll Bar

INFOID:000000007258391

WARNING:

Always observe the following items for preventing accidental activation.

- Risk of passenger injury or death may increase if the pop-up roll bar does not deploy during a roll over collision. In order to reduce the chance of an incident where the pop-up roll bar is inoperative, all maintenance must be performed by a NISSAN or INFINITI dealer.
- Before removing and installing the pop-up roll bar component parts and harness, always turn the ignition switch OFF, disconnect the battery negative terminal, and wait for 3 minutes or more. (The purpose of this operation is to discharge electricity that is accumulated in the auxiliary power supply circuit in the air bag diagnosis sensor unit.)
- When repairing, removing, and installing a pop-up roll bar, always refer to SRS AIR BAG and SRS AIR BAG CONTROL warnings in the Service Manual.

Precaution for Power Generation Voltage Variable Control System

INFOID:000000007258392

CAUTION:

A

B

C

D

E

F

G

H

I

J

K

L

CHG

N

O

P

PRECAUTIONS

< PRECAUTION >

For this model, the battery current sensor that is installed to the battery cable at the negative terminal measures the charging/discharging current of the battery, and performs various controls. If the electrical component or the ground wire is connected directly to the battery terminal, the current other than that being measured with the battery current sensor is charging to or discharging from the battery. This condition causes the malfunction of the control, and then the battery discharge may occur. Do not connect the electrical component or the ground wire directly to the battery terminal.

PREPARATION

< PREPARATION >


PREPARATION

PREPARATION

Special Service Tools

INFOID:000000006938948

Tool number (Kent-Moore No.) Tool name	Description
— (J-44373 Model MCR620) Starting/Charging System Tester	Tests starting and charging systems. For operating instructions, refer to Technical Service Bulletin.

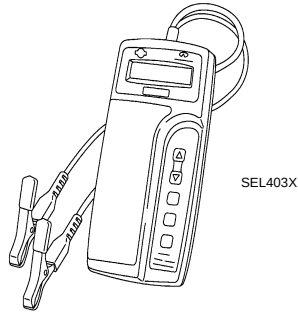

Commercial Service Tools

INFOID:000000006938949

Tool name	Description
Power tool	Loosening bolts, nuts and screws



CHG

COMPONENT PARTS

< SYSTEM DESCRIPTION >


SYSTEM DESCRIPTION

COMPONENT PARTS

CHARGING SYSTEM

CHARGING SYSTEM : Component Parts Location

INFOID:000000006938928

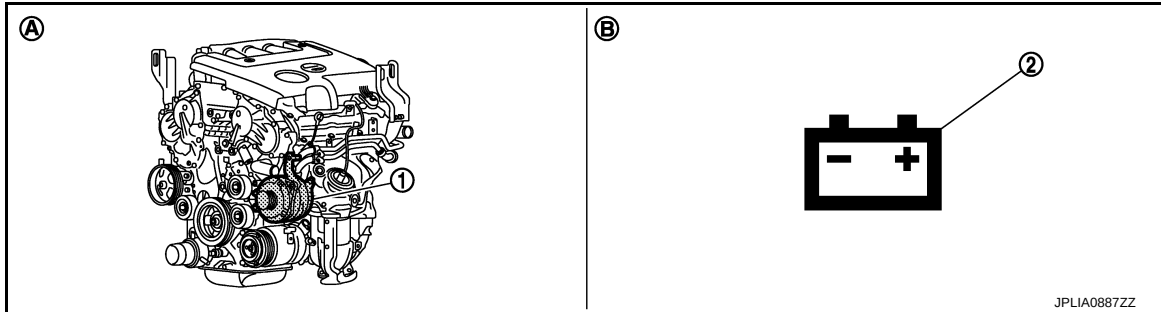

- | | |
|-----------------------------|------------------------|
| 1. Alternator | 2. Charge warning lamp |
| A. Cylinder block left side | B. Combination meter |

CHARGING SYSTEM : Component Description


INFOID:000000006938929

Component part	Description
Alternator	The alternator provides DC voltage to operate the vehicle's electrical system and to keep the battery charged.
Combination meter (Charge warning lamp)	The IC voltage regulator warning function activates to illuminate the charge warning lamp, if any of the following symptoms occurs while alternator is operating: • Excessive voltage is produced. • No voltage is produced.

POWER GENERATION VOLTAGE VARIABLE CONTROL SYSTEM

POWER GENERATION VOLTAGE VARIABLE CONTROL SYSTEM : Component Parts Location

INFOID:000000006938932

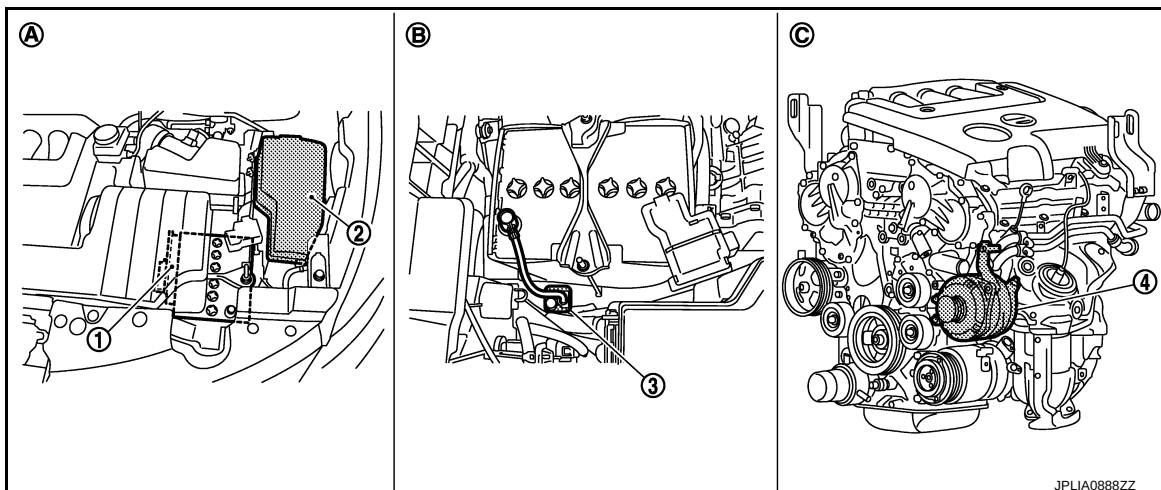

COMPONENT PARTS

< SYSTEM DESCRIPTION >

1. ECM
Refer to [EC-15, "ENGINE CONTROL SYSTEM : Component Parts Location"](#)
2. IPDM E/R
Refer to [PCS-4, "Component Parts Location"](#)
3. Battery current sensor
4. Alternator
- A. Engine room dash panel (LH)
- B. Battery
- C. Cylinder block left side

POWER GENERATION VOLTAGE VARIABLE CONTROL SYSTEM : Component Description

INFOID:000000006938933

Component part	Description
Battery current sensor	Battery current sensor is installed to the battery cable at the negative terminal, and it detects the charging/discharging current of the battery and sends the voltage signal to ECM according to the current value.
ECM	Battery current sensor detects the charging/discharging current of the battery. ECM judges the battery condition based on this signal. ECM judges whether to perform the power generation voltage variable control according to the battery condition. When performing the power generation voltage variable control, ECM calculates the target power generation voltage according to the battery condition and sends the calculated value as the power generation command value to IPDM E/R.
IPDM E/R	IPDM E/R converts the received power generation command value into the power generation command signal (PWM signal) and sends it to the IC voltage regulator.
Alternator (IC voltage regulator)	IC voltage regulator controls the power generation voltage by the target power generation voltage based on the received power generation command signal. When there is no power generation command signal, the alternator performs the normal power generation according to the characteristic of the IC voltage regulator.

CHG

SYSTEM


< SYSTEM DESCRIPTION >

SYSTEM

CHARGING SYSTEM

CHARGING SYSTEM : System Diagram

INFOID:000000006938926

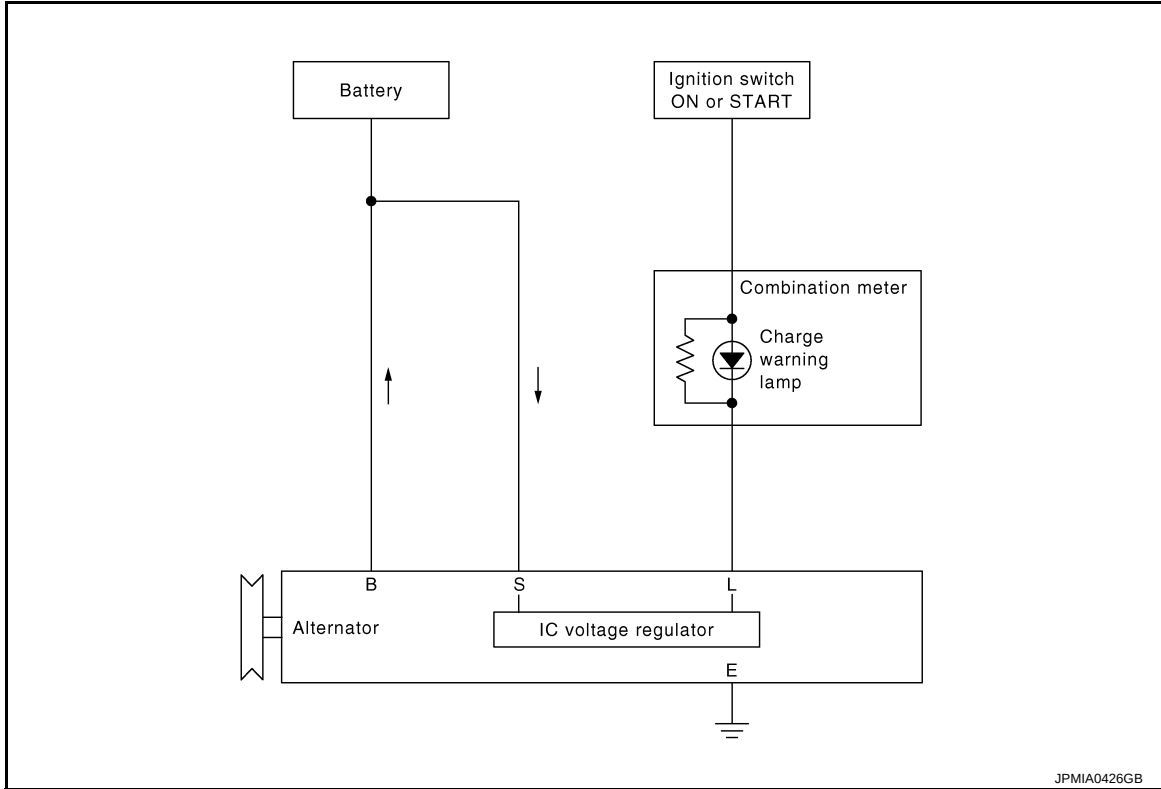

CHARGING SYSTEM : System Description


INFOID:000000006938927

The voltage output is controlled by the IC voltage regulator.

POWER GENERATION VOLTAGE VARIABLE CONTROL SYSTEM

POWER GENERATION VOLTAGE VARIABLE CONTROL SYSTEM : System Diagram

INFOID:000000006938930

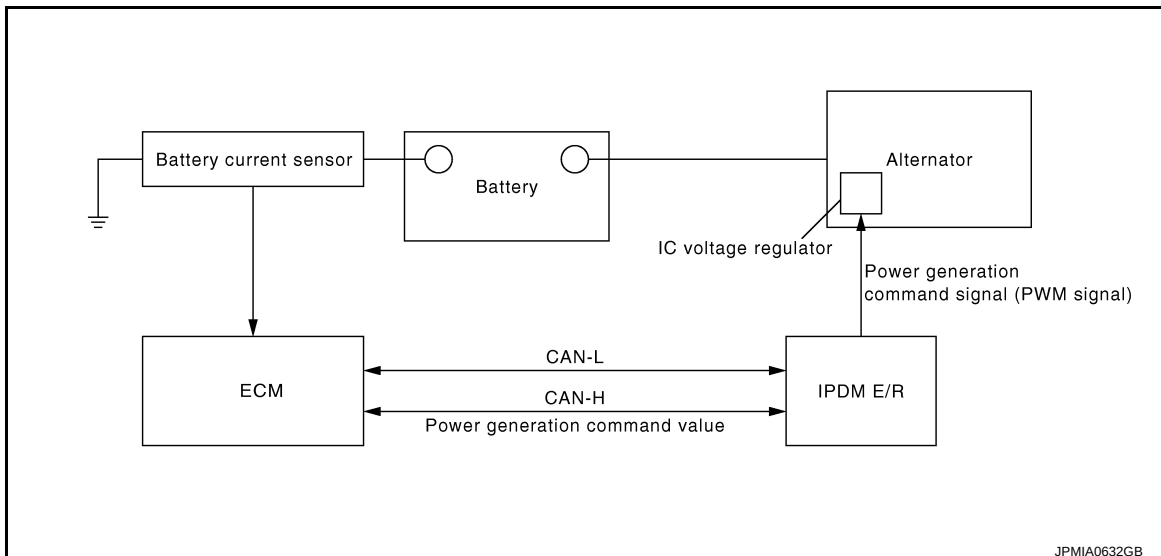

POWER GENERATION VOLTAGE VARIABLE CONTROL SYSTEM : System De-

< SYSTEM DESCRIPTION >

scription

INFOID:000000006938931

By performing the power generation voltage variable control, the engine load due to the power generation of the alternator is reduced and fuel consumption is decreased.

NOTE:

When any malfunction is detected in the power generation voltage variable control system, the power generation is performed according to the characteristic of the IC voltage regulator of the alternator.

- A
- B
- C
- D
- E
- F
- G
- H
- I
- J
- K
- L
- N
- O
- P

CHG

CHARGING SYSTEM


< WIRING DIAGRAM >

WIRING DIAGRAM

CHARGING SYSTEM

Wiring Diagram

INFOID:000000006938942

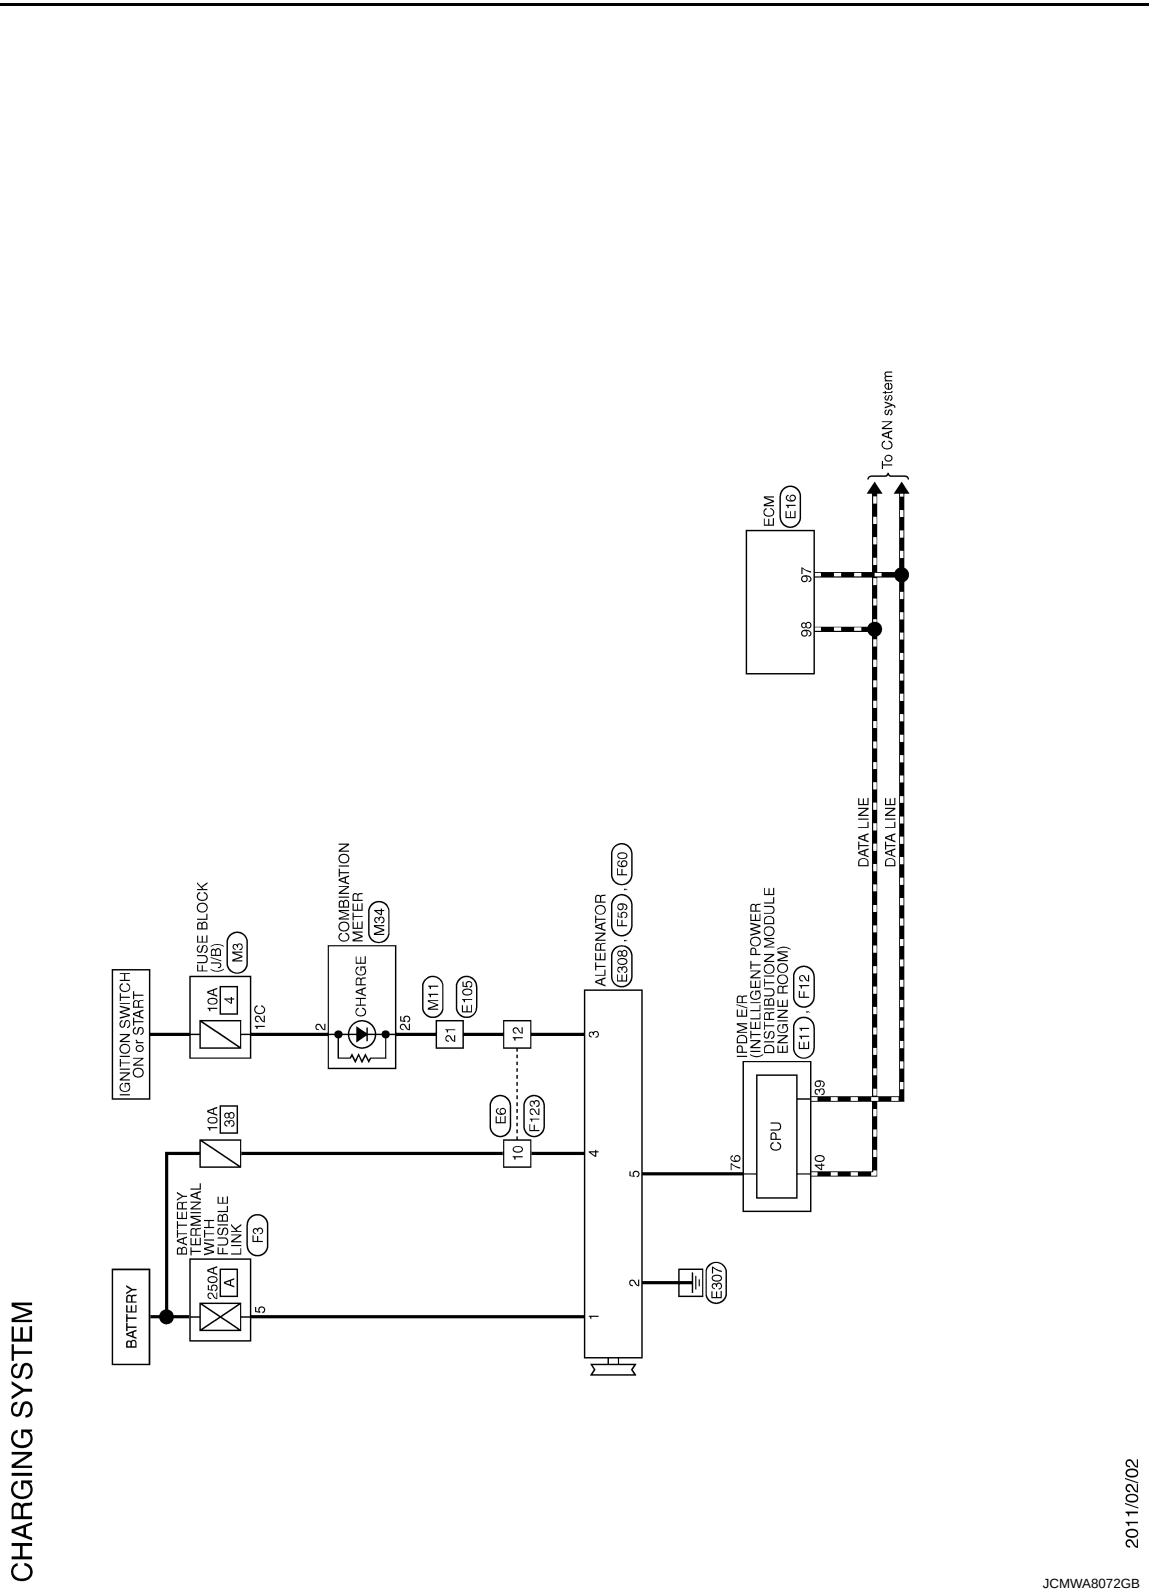

CHARGING SYSTEM

< WIRING DIAGRAM >

CHARGING SYSTEM

Connector No.	E6
Connector Name	WIRE TO WIRE
Connector Type	TK16MGY-IV



1	2	3	4	5	6	7
8	9	10	11	12	13	14
15	16					

Terminal No.	Color of Wire	Signal Name [Specification]
1	L	-
3	Y	-
4	R	-
5	GR	-
6	V	-
8	P	-
10	W	-
11	G	-
12	BR	-
13	SB	-
14	B	-

Connector No.	E11
Connector Name	FROM E-FC INTELLIGENT POWER DISTRIBUTION MODULE (ENGINE ROOM)
Connector Type	TH08FW-NH



42	41	40	39
46	45	44	43

Terminal No.	Color of Wire	Signal Name [Specification]
39	P	-
40	L	-
41	B	-
42	SB	-
43	Y	-
44	W	-
45	O	-
46	BR	-

Connector No.	E16
Connector Name	ECM
Connector Type	RH24FB-R28-L-L4



81	80	79	78	77	76	75
82	81	80	79	78	77	76
83	82	81	80	79	78	77
84	83	82	81	80	79	78

Terminal No.	Color of Wire	Signal Name [Specification]
81	W	ACCELERATOR PEDAL POSITION SENSOR 1
82	O	ACCELERATOR PEDAL POSITION SENSOR 2
83	BR	SENSOR POWER SUPPLY
84	B	SENSOR GROUND
85	Y	ASC/D STEERING SWITCH
86	SB	EVAP CONTROL SYSTEM PRESSURE SENSOR
87	GR	SENSOR POWER SUPPLY
88	O	DATA LINK CONNECTOR
91	L	SENSOR POWER SUPPLY
92	BR	SENSOR GROUND
93	BR	IGNITION SWITCH
94	GR	ENGINE SPEED OUTPUT SIGNAL
95	Y	FUEL TANK TEMPERATURE SENSOR
96	GR	SENSOR GROUND
97	P	CAN COMMUNICATION LINE(CAN-L)
98	L	CAN COMMUNICATION LINE(CAN-H)
100	G	SENSOR GROUND
102	R	PNP SIGNAL
104	SB	SENSOR GROUND
105	V	POWER SUPPLY FOR ECM
106	SB	STOP LAMP SWITCH
107	B	ECM GROUND
108	B	ECM GROUND
109	W	EVAP CANISTER VENT CONTROL VALVE
110	G	ASC/D BRAKE SWITCH
111	B	ECM GROUND
112	B	ECM GROUND

Connector No.	E105
Connector Name	WIRE TO WIRE
Connector Type	TH10MM-CS10-M3



1	2	3	4	5	6	7
8	9	10	11	12	13	14
15	16	17	18	19	20	21

Terminal No.	Color of Wire	Signal Name [Specification]
3	Y	-
5	LG	-
8	G	-
11	P	-
12	L	-
13	Y	-
14	O	-
15	BR	-
19	L	-
20	Y	-
21	BR	-
22	P	-
24	L	-
25	O	-
28	SB	-
29	W	-
30	Y	-
49	SB	-
50	GR	-
51	LG	-
52	V	-
53	GR	-
54	BR	-
55	Y	-
56	O	-
60	V	-
61	BR	-
62	O	-
63	W	-
64	SHIELD	-
66	W	-
67	BR	-
68	Y	-
69	SB	-
70	GR	-
71	SB	-
72	Y	-
75	BR	-

76	GR	-
77	O	-
78	Y	-
79	Y	-
80	Y	-
81	Y	-
82	LG	-
83	GR	-

Connector No.	E308
Connector Name	ALTERNATOR
Connector Type	-



Terminal No.	Color of Wire	Signal Name [Specification]
2	B	-

Connector No.	F3
Connector Name	BATTERY TERMINAL WITH FUSEBLE LINK
Connector Type	-



Terminal No.	Color of Wire	Signal Name [Specification]
5	B/R	-

JCMWA8073GB

A
B
C
D
E
F
G
H
I
J
K
L
CHG
N
O
P

CHARGING SYSTEM

< WIRING DIAGRAM >

CHARGING SYSTEM

Connector No.	M34
Connector Name	COMBINATION METER
Connector Type	TH4CFV-NH



1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36
---	---	---	---	---	---	---	---	---	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----	----

Terminal No.	Color of Wire	Signal Name [Specification]
1	Y	BATTERY POWER SUPPLY
2	O	IGNITION SIGNAL
3	B	GROUND
4	B	GROUND
5	SB	ILLUMINATION CONTROL SIGNAL
8	SB	TRIP RESET SIGNAL
9	W	ILLUMINATION CONTROL SIGNAL (2-PULSE)
10	O	METER CONTROL SWITCH GROUND
11	L	ENTER SWITCH SIGNAL
12	R	SELECT SWITCH SIGNAL
13	V	ILLUMINATION CONTROL SWITCH SIGNAL (2)
14	GR	ILLUMINATION CONTROL SWITCH SIGNAL (2)
15	BR	AIR BAG SIGNAL
18	L	AMBIENT SENSOR SIGNAL
19	P	A/C AUTO AMP. CONNECTION RECOGNITION SIGNAL
20	Y	AMBIENT SENSOR GROUND
21	L	CAN-H
22	P	CAN-L
23	B	GROUND
24	W	FUEL LEVEL SENSOR GROUND
25	BR	ALTERNATOR SIGNAL
26	G	PARKING BRAKE SWITCH SIGNAL
27	V	BRAKE FLUID LEVEL SWITCH SIGNAL
28	R	ROOF STATUS SIGNAL
29	R	WASHER LEVEL SWITCH SIGNAL
30	P	VEHICLE SPEED SIGNAL (2-PULSE)
31	V	VEHICLE SPEED SIGNAL (8-PULSE)
32	LG	OVERDRIVE CONTROL SWITCH SIGNAL
34	G	FUEL LEVEL SENSOR SIGNAL
35	SB	SEAT BELT BUCKLE SWITCH SIGNAL (DRIVER SIDE)
36	R	SEAT BELT BUCKLE SWITCH SIGNAL (PASSENGER SIDE)

JCMWA8075GB

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

CHG

DIAGNOSIS AND REPAIR WORKFLOW

< BASIC INSPECTION >


BASIC INSPECTION

DIAGNOSIS AND REPAIR WORKFLOW

Work Flow

INFOID:000000006938925

OVERALL SEQUENCE

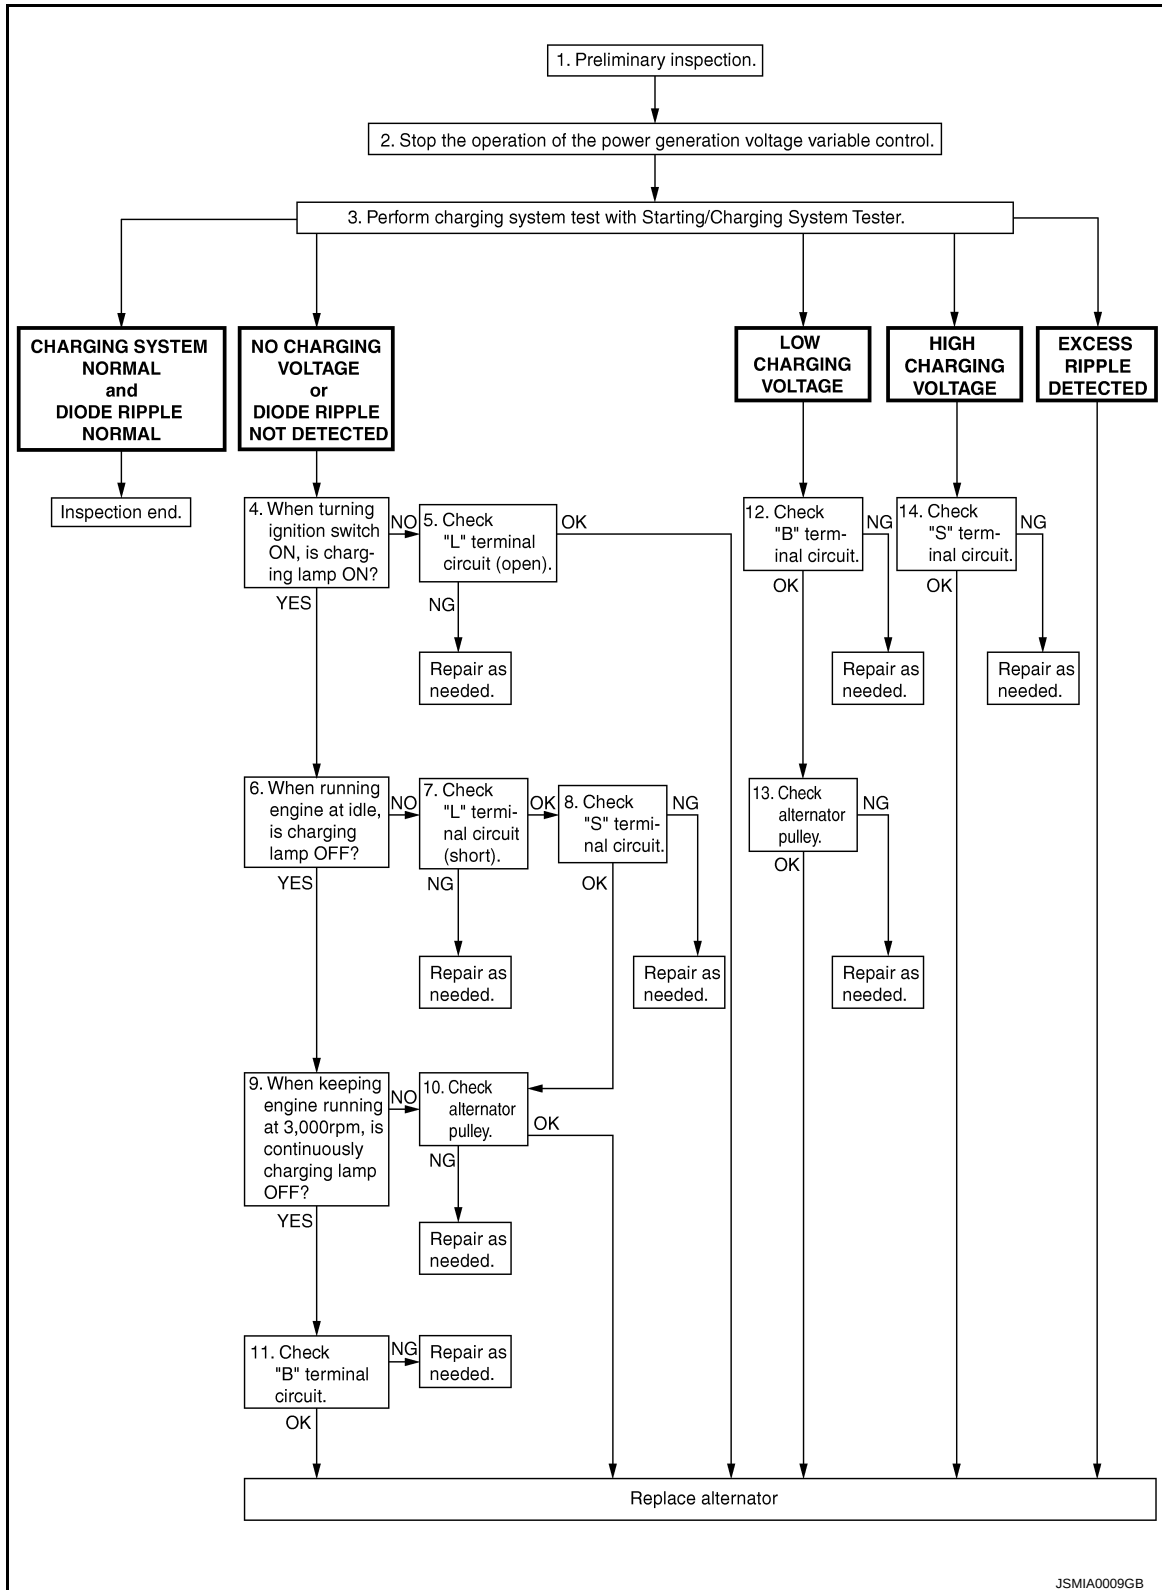

DETAILED FLOW

DIAGNOSIS AND REPAIR WORKFLOW

< BASIC INSPECTION >

NOTE:

To ensure a complete and thorough diagnosis, the battery, starter and alternator test segments must be done as a set from start to finish.

1. PRELIMINARY INSPECTION

Perform the preliminary inspection. Refer to [CHG-17. "Inspection Procedure"](#).

>> GO TO 2.

2. STOP POWER GENERATION VOLTAGE VARIABLE CONTROL SYSTEM

Stop the operation of the power generation voltage variable control in either of the following procedures.

- After selecting "ENGINE" of "SELECT SYSTEM" using CONSULT, set the DUTY value of "ALTERNATOR DUTY" to 0 % by selecting "ALTERNATOR DUTY" of "Active Test". Continue "Active Test" until the end of inspection. (When the DUTY value is 0 or 100 %, the normal power generation is performed according to the characteristic of the IC voltage regulator of the alternator.)
- Turn the ignition switch OFF, and disconnect the battery current sensor connector. [However, DTC (P1550 - P1554) of the engine might remain. After finishing the inspection, connect the battery current sensor connector and erase the self-diagnostic results history of the engine using CONSULT.]

>> GO TO 3.

3. DIAGNOSIS WITH STARTING/CHARGING SYSTEM TESTER

Perform the charging system test using Starting/Charging System Tester (SST: J-44373). For details and operating instructions, refer to Technical Service Bulletin.

Test result

CHARGING SYSTEM NORMAL>>Charging system is normal and will also show "DIODE RIPPLE" test result.

NO CHARGING VOLTAGE>>GO TO 4.

LOW CHARGING VOLTAGE>>GO TO 12.

HIGH CHARGING VOLTAGE>>GO TO 14.

DIODE RIPPLE NORMAL>>Diode ripple is OK and will also show "CHARGING VOLTAGE" test result.

EXCESS RIPPLE DETECTED>>Replace the alternator. Perform "DIODE RIPPLE" test again using Starting/Charging System Tester (SST: J-44373) to confirm repair.

DIODE RIPPLE NOT DETECTED>>GO TO 4.

4. INSPECTION WITH CHARGE WARNING LAMP (IGNITION SWITCH IS ON)

Turn the ignition switch ON.

Does the charge warning lamp illuminate?

YES >> GO TO 6.

NO >> GO TO 5.

5. "L" TERMINAL CIRCUIT (OPEN) INSPECTION

Check "L" terminal circuit (open). Refer to [CHG-21. "Diagnosis Procedure"](#).

Is the "L" terminal circuit normal?

YES >> Replace alternator.

NO >> Repair as needed.

6. INSPECTION WITH CHARGE WARNING LAMP (IDLING)

Start the engine and run it at idle.

Does the charge warning lamp turn OFF?

YES >> GO TO 9.

NO >> GO TO 7.

7. "L" TERMINAL CIRCUIT (SHORT) INSPECTION

Check "L" terminal circuit (short). Refer to [CHG-23. "Diagnosis Procedure"](#).

Is the "L" terminal circuit normal?

YES >> GO TO 8.

NO >> Repair as needed.

DIAGNOSIS AND REPAIR WORKFLOW

< BASIC INSPECTION >

8. "S" TERMINAL CIRCUIT INSPECTION

Check "S" terminal circuit. Refer to [CHG-24, "Diagnosis Procedure"](#).

Is the "S" terminal circuit normal?

YES >> GO TO 10.

NO >> Repair as needed.

9. INSPECTION WITH CHARGE WARNING LAMP (ENGINE AT 3,000 RPM)

Increase and maintain the engine speed at 3,000 rpm.

Does the charge warning lamp remain off?

YES >> GO TO 11.

NO >> GO TO 10.

10. INSPECTION OF ALTERNATOR PULLEY

Check alternator pulley. Refer to [CHG-28, "Inspection"](#).

Is alternator pulley normal?

YES >> Replace alternator.

NO >> Repair as needed.

11. "B" TERMINAL CIRCUIT INSPECTION

Check "B" terminal circuit. Refer to [CHG-20, "Diagnosis Procedure"](#).

Is "B" terminal circuit normal?

YES >> Replace alternator.

NO >> Repair as needed.

12. "B" TERMINAL CIRCUIT INSPECTION

Check "B" terminal circuit. Refer to [CHG-20, "Diagnosis Procedure"](#).

Is "B" terminal circuit normal?

YES >> GO TO 13.

NO >> Repair as needed.

13. INSPECTION OF ALTERNATOR PULLEY

Check alternator pulley. Refer to [CHG-28, "Inspection"](#).

Is alternator pulley normal?

YES >> Replace alternator.

NO >> Repair as needed.

14. "S" TERMINAL CIRCUIT INSPECTION

Check "S" terminal circuit. Refer to [CHG-24, "Diagnosis Procedure"](#).

Is the "S" terminal circuit normal?

YES >> Replace alternator.

NO >> Repair as needed.

CHARGING SYSTEM PRELIMINARY INSPECTION

< BASIC INSPECTION >

CHARGING SYSTEM PRELIMINARY INSPECTION

Inspection Procedure

INFOID:000000007258551

1.CHECK BATTERY TERMINALS CONNECTION

Check if battery terminals are clean and tight.

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair battery terminals connection.

2.CHECK FUSE

Check for blown fuse.

Unit	Power source (Power supply terminals)	Fuse No.
Alternator	Battery ("S" terminal)	38
Combination meter	Ignition switch ON ("L" terminal)	4

Is the inspection result normal?

YES >> GO TO 3.

NO >> Be sure to eliminate the cause of malfunction before installing new fuse.

3.CHECK "E" TERMINAL CONNECTION

Check if "E" terminal (alternator ground harness) is clean and tight.

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair "E" terminal connection.

4.CHECK DRIVE BELT TENSION

Check drive belt tension. Refer to [EM-14, "Checking"](#).

Is the inspection result normal?

YES >> INSPECTION END

NO >> Repair as needed.

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

CHG

POWER GENERATION VOLTAGE VARIABLE CONTROL SYSTEM OPERATION INSPECTION

< BASIC INSPECTION >

POWER GENERATION VOLTAGE VARIABLE CONTROL SYSTEM OPERATION INSPECTION

Inspection Procedure

INFOID:000000007258552

CAUTION:

When performing this inspection, always use a charged battery that has completed the battery inspection. (When the charging rate of the battery is low, the response speed of the voltage change will become slow. This can cause an incorrect inspection.)

1.CHECK ECM (CONSULT)

Perform ECM self-diagnosis with CONSULT. Refer to [EC-64. "CONSULT Function"](#).

Self-diagnostic results content

No malfunction detected>> GO TO 2.

Malfunction detected>> Check applicable parts, and repair or replace corresponding parts.

2.CHECK OPERATION OF POWER GENERATION VOLTAGE VARIABLE CONTROL SYSTEM

1. Connect CONSULT and start the engine.
2. The selector lever is in "P" or "N" position and all of the electric loads and A/C, etc. are turned OFF.
3. Select "ALTERNATOR DUTY" at "Active Test" of "ENGINE", and then check the value of "BATTERY VOLT" monitor when DUTY value of "ALTERNATOR DUTY" is set to 40.0 %.

"BATTERY VOLT"

2 seconds after setting the
DUTY value of "ALTERNA-
TOR DUTY" to 40.0 % : 12 - 13.6 V

4. Check the value of "BATTERY VOLT" monitor when DUTY value of "ALTERNATOR DUTY" is set to 80.0%.

"BATTERY VOLT"

20 seconds after setting
the DUTY value of "ALTER-
NATOR DUTY" to 80.0 % : +0.5 V or more against
the value of "BATTERY
VOLT" monitor when
DUTY value is 40.0 %

Is the measurement value within the specification?

YES >> INSPECTION END

NO >> GO TO 3.

3.CHECK IPDM E/R (CONSULT)

Perform IPDM E/R self-diagnosis with CONSULT. Refer to [PCS-12. "CONSULT Function \(IPDM E/R\)"](#).

Self-diagnostic results content

No malfunction detected>> GO TO 4.

Malfunction detected>> Check applicable parts, and repair or replace corresponding parts.

4.CHECK HARNESS BETWEEN ALTERNATOR AND IPDM E/R

1. Turn ignition switch OFF.
2. Disconnect alternator connector and IPDM E/R connector.
3. Check continuity between alternator harness connector and IPDM E/R harness connector.

Alternator harness connector		IPDM E/R harness connector		Continuity
Connector	Terminal	Connector	Terminal	
F60	5	F12	76	Existed

4. Check continuity between alternator harness connector and ground.

POWER GENERATION VOLTAGE VARIABLE CONTROL SYSTEM OPERATION
INSPECTION

< BASIC INSPECTION >

Alternator harness connector		Ground	Continuity
Connector	Terminal		
F60	5		Not existed

Is the inspection result normal?

- YES >> Replace IPDM E/R.
- NO >> Repair harness or connector between IPDM E/R and alternator.

A

B

C

D

E

F

G

H

I

J

K

L

N

O

P

CHG

B TERMINAL CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

DTC/CIRCUIT DIAGNOSIS

B TERMINAL CIRCUIT

Description

INFOID:000000006938934

"B" terminal circuit supplies power to charge the battery and to operate the vehicle's electrical system.

Diagnosis Procedure

INFOID:000000006938935

1.CHECK "B" TERMINAL CONNECTION

1. Turn ignition switch OFF.
2. Check if "B" terminal is clean and tight.

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair "B" terminal connection. Confirm repair by performing complete Starting/Charging system test. Refer to Technical Service Bulletin.

2.CHECK "B" TERMINAL CIRCUIT

Check voltage between alternator "B" terminal and ground.

Terminals			Voltage (Approx.)
(+) Alternator "B" terminal		(-) Ground	
F59	Terminal 1		

Is the inspection result normal?

YES >> GO TO 3.

NO >> Check harness for open between alternator and fusible link.

3.CHECK "B" TERMINAL CONNECTION (VOLTAGE DROP TEST)

1. Start engine, then engine running at idle and warm.
2. Check voltage between battery positive terminal and alternator "B" terminal.

Terminals			Voltage (Approx.)
(+)	(-)		
	Alternator "B" terminal	Terminal	
Battery positive terminal	F59	1	Less than 0.2 V

Is the inspection result normal?

YES >> "B" terminal circuit is normal. Refer to [CHG-14, "Work Flow"](#).

NO >> Check harness between battery and alternator for poor continuity.

L TERMINAL CIRCUIT (OPEN)

< DTC/CIRCUIT DIAGNOSIS >

L TERMINAL CIRCUIT (OPEN)

Description

INFOID:000000006938936

The "L" terminal circuit controls the charge warning lamp. The charge warning lamp illuminates when the ignition switch is set to ON or START. When the alternator is providing sufficient voltage with the engine running, the charge warning lamp will go off. If the charge warning lamp illuminates with the engine running, a malfunction is indicated.

Diagnosis Procedure

INFOID:000000006938937

1.CHECK "L" TERMINAL CONNECTION

1. Turn ignition switch OFF.
2. Check if "L" terminal is clean and tight.

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair "L" terminal connection. Confirm repair by performing complete Starting/Charging system test. Refer to Technical Service Bulletin.

2.CHECK "L" TERMINAL CIRCUIT (OPEN)

1. Disconnect alternator connector.
2. Apply ground to alternator harness connector terminal.
3. Check condition of the charge warning lamp with the ignition switch in the ON position.

Alternator harness connector	Terminal	Ground	Condition	
			Ignition switch position	Charge warning lamp
F60	3		ON	illuminates

Does it illuminate?

YES >> "L" terminal circuit is normal. Refer to [CHG-14, "Work Flow"](#).

NO >> GO TO 3.

3.CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

1. Disconnect the battery cable from the negative terminal.
2. Disconnect the combination meter connector.
3. Check continuity between alternator harness connector and combination meter harness connector.

Alternator harness connector		Combination meter harness connector		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
F60	3	M34	25	Existed

Is the inspection result normal?

YES >> GO TO 4.

NO >> Repair the harness or connector.

4.CHECK HARNESS CONTINUITY (OPEN CIRCUIT)

Check continuity between combination meter harness connector and fuse block.

Combination meter harness connector		Fuse block		Continuity
Connector No.	Terminal No.	Connector No.	Terminal No.	
M34	2	M3	12C	Existed

Is the inspection result normal?

YES >> GO TO 5.

NO >> Repair the harness.

5.CHECK POWER SUPPLY CIRCUIT

1. Connect the battery cable to the negative terminal.

L TERMINAL CIRCUIT (OPEN)

< DTC/CIRCUIT DIAGNOSIS >

2. Check voltage between combination meter harness connector and ground.

Terminals		Condition	Voltage (Approx.)
(+)	(-)		
Combination meter harness connector	Terminal		
M34	2	When the ignition switch is in ON position	Battery voltage

Is the inspection result normal?

YES >> Replace combination meter.

NO >> Inspect the power supply circuit. Refer to [PG-66, "Wiring Diagram - IGNITION POWER SUPPLY - "](#)

L TERMINAL CIRCUIT (SHORT)

< DTC/CIRCUIT DIAGNOSIS >

L TERMINAL CIRCUIT (SHORT)

Description

INFOID:000000006938938

The "L" terminal circuit controls the charge warning lamp. The charge warning lamp illuminates when the ignition switch is set to ON or START. When the alternator is providing sufficient voltage with the engine running, the charge warning lamp will go off. If the charge warning lamp illuminates with the engine running, a malfunction is indicated.

Diagnosis Procedure

INFOID:000000006938939

1.CHECK "L" TERMINAL CIRCUIT (SHORT)

1. Turn ignition switch OFF.
2. Disconnect alternator connector.
3. Turn ignition switch ON.

Does charge warning lamp illuminate?

YES >> GO TO 2.

NO >> Refer to [CHG-14. "Work Flow"](#).

2.CHECK HARNESS CONTINUITY (SHORT CIRCUIT)

1. Turn the ignition switch OFF.
2. Disconnect the battery cable from the negative terminal.
3. Disconnect combination meter connector.
4. Check continuity between combination meter harness connector and ground.

Combination meter harness connector		Ground	Continuity
Connector No.	Terminal No.		
M34	25		Not existed

Is the inspection result normal?

YES >> Replace combination meter.

NO >> Repair the harness.

CHG

S TERMINAL CIRCUIT

< DTC/CIRCUIT DIAGNOSIS >

S TERMINAL CIRCUIT

Description

INFOID:000000006938940

The output voltage of the alternator is controlled by the IC voltage regulator at the "S" terminal detecting the input voltage.

The "S" terminal circuit detects the battery voltage to adjust the alternator output voltage with the IC voltage regulator.

Diagnosis Procedure

INFOID:000000006938941

1.CHECK "S" TERMINAL CONNECTION

1. Turn ignition switch OFF.
2. Check if "S" terminal is clean and tight.

Is the inspection result normal?

YES >> GO TO 2.

NO >> Repair "S" terminal connection. Confirm repair by performing complete Starting/Charging system test. Refer to Technical Service Bulletin.

2.CHECK "S" TERMINAL CIRCUIT

Check voltage between alternator harness connector and ground.

Terminals			Voltage (Approx.)
(+) (–)		(–)	
Alternator harness connector	Terminal		
F60	4	Ground	Battery voltage

Is the inspection result normal?

YES >> Refer to [CHG-14, "Work Flow"](#).

NO >> Check harness for open between alternator and fuse.

< SYMPTOM DIAGNOSIS >

SYMPTOM DIAGNOSIS

CHARGING SYSTEM

Symptom Table

INFOID:0000000006938943

Symptom	Reference
Discharged battery	Refer to CHG-14, "Work Flow" .
The charge warning lamp does not illuminate when the ignition switch is set to ON.	
The charge warning lamp does not turn OFF after the engine starts.	
The charge warning lamp turns ON when increasing the engine speed.	

A

B

C

D

E

F

G

H

I

J

K

L

N

O

P

CHG

ALTERNATOR

< REMOVAL AND INSTALLATION >


REMOVAL AND INSTALLATION

ALTERNATOR

Exploded View

INFOID:000000006938952

REMOVAL

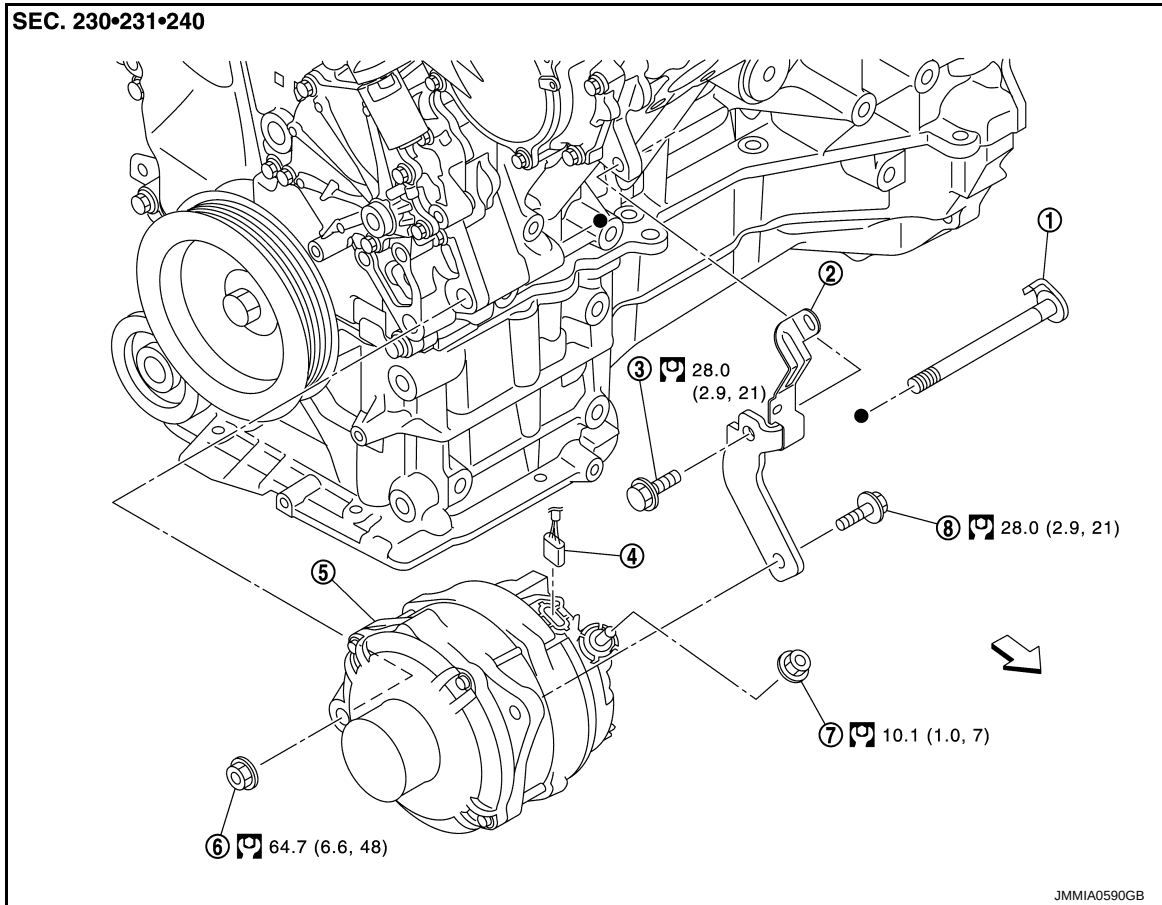

- | | | |
|-------------------------------------|-------------------------------------|-------------------------------------|
| 1. Alternator mounting bolt (lower) | 2. Alternator bracket | 3. Alternator bracket mounting bolt |
| 4. Alternator connector | 5. Alternator | 6. Alternator mounting nut (lower) |
| 7. "B" terminal nut | 8. Alternator mounting bolt (upper) | |

⬅ : Vehicle front


: N·m (kg-m, ft-lb)

DISASSEMBLY

ALTERNATOR

< REMOVAL AND INSTALLATION >

Type: A003TJ1791

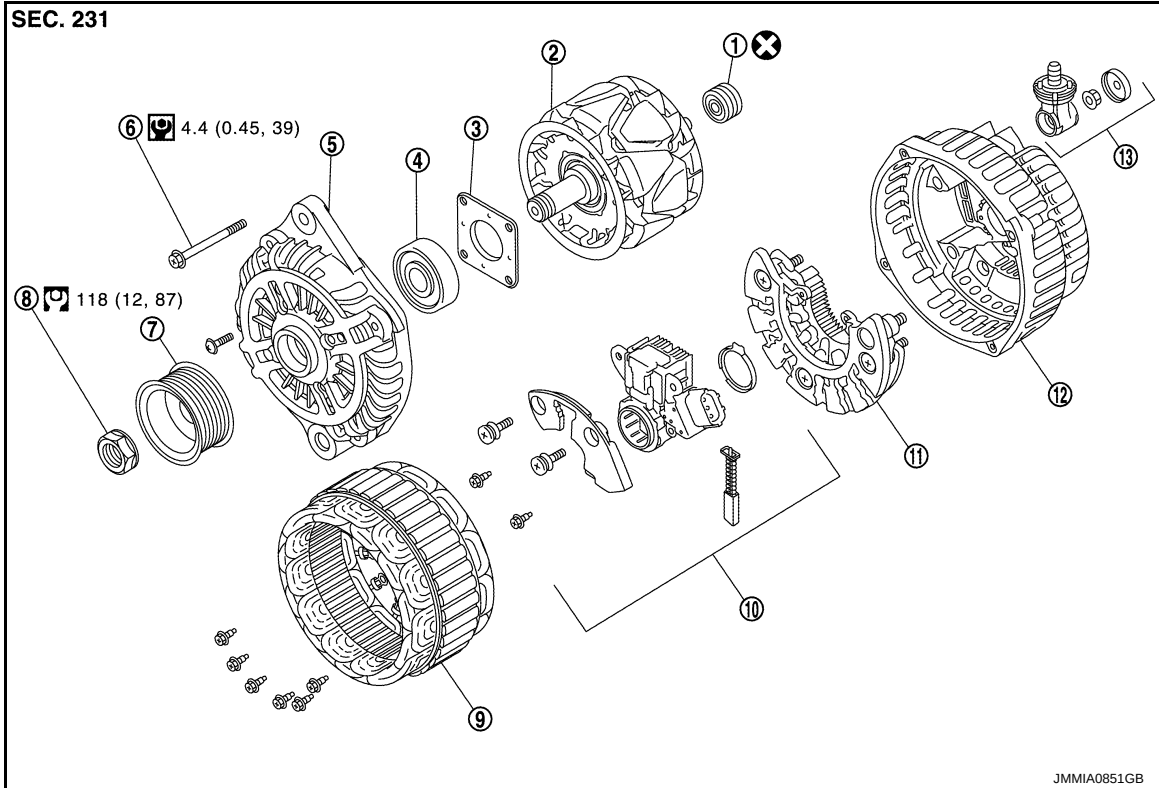

- | | | |
|-----------------------------------|---------------------------|---------------------------|
| 1. Rear bearing | 2. Rotor assembly | 3. Retainer |
| 4. Front bearing | 5. Front bracket assembly | 6. Through bolt |
| 7. Pulley | 8. Pulley nut | 9. Stator assembly |
| 10. IC voltage regulator assembly | 11. Diode assembly | 12. Rear bracket assembly |
| 13. Terminal set | | |

✕ : Always replace after every disassembly.

Ⓔ : N·m (kg-m, in-lb)

Ⓕ : N·m (kg-m, ft-lb)

Removal and Installation

INFOID:000000006938953

REMOVAL

1. Disconnect the negative battery terminal. Refer to [PG-112, "Removal and Installation"](#).
2. Remove engine cover.
3. Remove front wheel and tire RH.
4. Remove splash guard RH. Refer to [EXT-26, "FENDER PROTECTOR : Exploded View"](#).
5. Remove air cleaner and air duct assembly. Refer to [EM-26, "Removal and Installation"](#).
6. Remove drive belt. Refer to [EM-14, "Removal and Installation"](#).
7. Remove A/C compressor. Refer to [HA-29, "COMPRESSOR : Removal and Installation"](#).
8. Remove idler pulley.
9. Disconnect the oil pressure switch.
10. Disconnect the alternator connectors.
11. Remove the alternator bolt and nuts, using power tools.
12. Slide the alternator out and remove.

INSTALLATION

Note the following items, and then install in the reverse order of removal.


CAUTION:

CHG

ALTERNATOR

< REMOVAL AND INSTALLATION >

- Temporarily tighten all of alternator bolt and nuts. And then tighten them in numerical order shown in the figure.

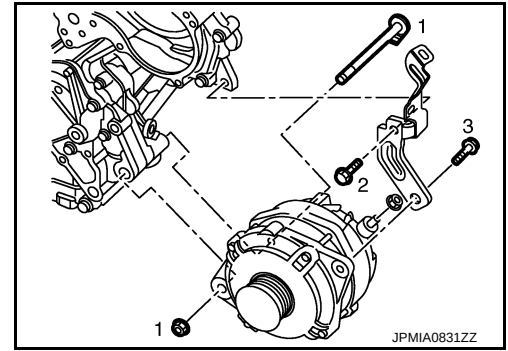

- Be careful to tighten “B” terminal nut carefully.
- Install alternator and check tension of belt. Refer to [EM-14, "Checking"](#).
- For this model, the power generation voltage variable control system that controls the power generation voltage of the alternator has been adopted. Therefore, the power generation voltage variable control system operation inspection should be performed after replacing the alternator, and then make sure that the system operates normally. Refer to [CHG-18, "Inspection Procedure"](#).

Inspection

INFOID:000000006938954

ALTERNATOR PULLEY INSPECTION

Perform the following.

- Make sure that alternator pulley does not rattle.
- Make sure that alternator pulley nut is tight.

SERVICE DATA AND SPECIFICATIONS (SDS)

< SERVICE DATA AND SPECIFICATIONS (SDS)

SERVICE DATA AND SPECIFICATIONS (SDS)

SERVICE DATA AND SPECIFICATIONS (SDS)

Alternator

INFOID:0000000006938955

Type		A003TJ1791
		MITSUBISHI make
Nominal rating	[V - A]	12 – 130
Ground polarity		Negative
Minimum revolution under no-load (When 13.5 V is applied)	[rpm]	Less than 1,300
Hot output current (When 13.5 V is applied)	[A/rpm]	More than 61/1,500 More than 109/2,500 More than 129/5,000
Regulated output voltage	[V]	14.1 – 14.7*
Minimum length of brush	[mm (in)]	More than 5.00 (0.197)
Brush spring pressure	[N (g, oz)]	4.1 – 5.3 (418 – 541, 14.7 – 19.1)
Slip ring minimum outer diameter	[mm (in)]	More than 22.1 (0.870)
Rotor (Field coil) resistance	[Ω]	1.8 – 2.2

*: Adjustment range of power generation voltage variable control is 11.4 – 15.6 V.

A
B
C
D
E
F
G
H
I
J
K
L
N
O
P

CHG