

9. Fuel Filter

A: REPLACEMENT

Refer to “FU” section for fuel filter replacement.
<Ref. to FU(H4SO)-64, Fuel Filter.> <Ref. to
FU(H4DOTC)-84, Fuel Filter.> <Ref. to FU(H6DO)-
73, Fuel Filter.>

B: INSPECTION

Replace if the filter is clogged, or time for replacement has come.