 


Oldsmobile Intrigue 2002 fuse box diagram

Instrument Panel Fuse Block

These fuses are located in a fuse block on the passenger's side of the instrument panel.

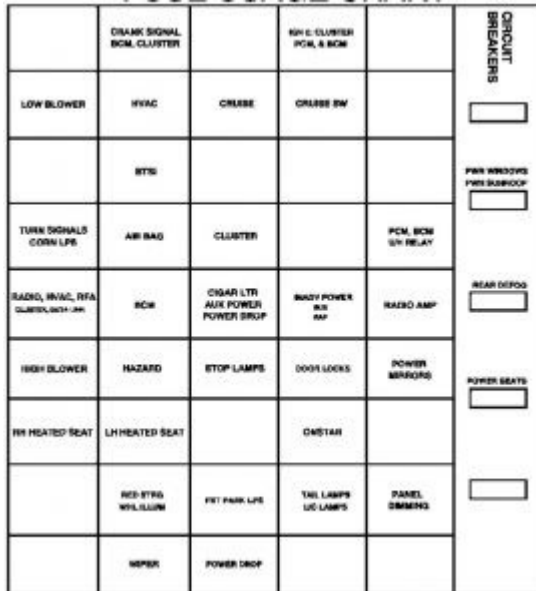

Oldsmobile Intrigue – fuse box – instrument panel

Fuse	Description
NOT USED	Not Used
CRANK SIGNAL BCM, CLUSTER	CRANK — Instrument Panel Cluster, Body Control Module, Powertrain Control Module
NOT USED	Not Used
IGN 0: CLUSTER PCM, & BCM	Instrument Panel Cluster, Powertrain Control Module, Body Control
NOT USED	Not Used
LOW BLOWER	HVAC Control Assembly, Blower Motor
HVAC	Air Temperature Valve Motor, HVAC Control Assembly, Solenoid Box, Compass Mirror
CRUISE	Cruise Control Module
NOT USED	Not Used
NOT USED	Not Used
NOT USED	Not Used
BTSI	Automatic Transaxle Shift Lock Control System


NOT USED	Not Used
NOT USED	Not Used
NOT USED	Not Used
TURN SIGNALS, CORN LPS	Turn Signals, Cornering Lamps
AIR BAG	Air Bag System
CLUSTER	Instrument Panel Cluster
NOT USED	Not Used
PCM, BCM, U/H RELAY	Powertrain Control Module, Body Control Module, Underhood Ignition/Relay
RADIO, WAC, RFA CLUSTER DATA LINK	Radio, HVAC Control Assembly, Instrument Panel Cluster, Remote Keyless Entry Module, Data Link Connector, Bose Amplifier
BCM	Body Control Module
CIGAR LTR, AUX POWER	Auxiliary Power, Cigarette Lighter, Power Drop
INADV POWER BUS	Vanity Mirrors, Instrument Panel Courtesy Lamps, Instrument Panel Compartment Lamps, Trunk Courtesy Lamp, Header Courtesy and Reading Lamps, I/S Lighted Rearview Mirror
NOT USED	Not Used
HIGH BLOWER	High Blower Relay
HAZARD	Hazard Switch
STOP LAMPS	Stoplamps Switch
DOOR LOCKS	Door Lock Relays (Internal to Body Control Module) and External Driver Door Lock Relay
POWER MIRRORS	Left-hand and Right-hand Power Mirrors
RH HEATED SEAT	Passenger's Side Heated Seat
LH HEATED SEAT	Driver's Side Heated Seat
NOT USED	Not Used
ONSTAR	OnStar System
NOT USED	Not Used

NOT USED	Not Used
RED STRG WHL ILLUM	Steering Wheel Radio Switch Illumination
FRT PARK LPS	Front Parking Lamps, Sidemarker Lamps
TAIL LAMPS, LIC LAMPS	Taillamps, License Lamps, Rear Sidemarker Lamps, Rear Sidemarker Lamps
PANEL DIMMING	Dimmable Instrument Panel Lamps
NOT USED	Not Used
WIPER	Wiper Switch
POWER DROP	Power Drop
RADIO, CRUISE	Radio, Steering Wheel Radio Controls, Cruise Control Switches
NOT USED	Not Used

Circuit Breaker	Description
NOT USED	Not Used
PWR WINDOWS, PWR SUNROOF	Power Windows, Power Sunroof
REAR DEFOG	Rear Defog
POWER SEATS	Power Seats
NOT USED	Not Used

Underhood Electrical Center — Passenger's Side

 Some fuses are in the underhood electrical center. The accessory wiring junction fuse block (A) is located next to the main underhood fuse block (B) on the passenger's side of the engine compartment.

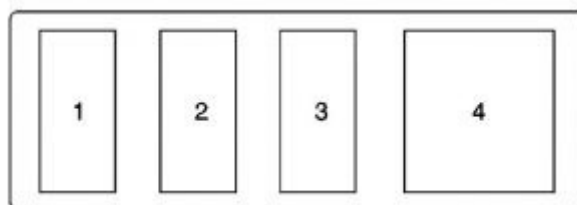


Oldsmobile Intrigue –
fuse box – underhood electrical center passenger side (A)

Fuse	Usage
1	Air Pump

2	ABS
3	ABS
Fuse	Usage
4	Air Pump

Underhood Electrical Center – Passenger’s Side

 Some fuses are in the underhood electrical centers on the passenger’s side of the engine compartment.

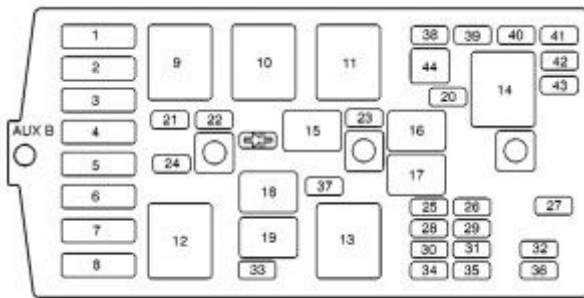

Oldsmobile Intrigue –

fuse box – underhood electrical center passenger side (B)

Maxi Fuse	Usage
1	Cooling Fan
2	Crank
3	Power Seats, Rear Defog, Trunk Release
4	HVAC Controls, Hazard Flasher, CHMSL, Body Control Module, Stoplamp, Power Mirrors
5	HVAC Controls, Compass Mirror, Cruise Control, PRNDL Lamp, Powertrain Control Module (PCM)
6	Cooling Fan
7	Body Control Module, Cigar Lighter, Accessory Power Outlet, Trunk CD Changer, Audio Systems, Keyless Entry System, I/P Cluster, HVAC Controls
8	Turn Signals, Air Bag System, I/P Cluster, Body Control Module, Windshield Wipers

Mini Relay	Usage
9	Cooling Fan
10	Cooling Fan

11	Crank
12	Cooling Fan
13	Ignition Main
14	Blank

Micro Relay	Usage
15	Air Conditioning Compressor
16	Horn
17	Fog Lamps
18	Blank
19	Fuel Pump

Mini Fuse	Usage
20	Blank
21	Generator
22	Powertrain Control Module
23	Air Conditioning Compressor Clutch
24	Blank
25	Fuel Injectors, Electronic Ignition
26	Transmission Solenoid
27	Horn
28	Fuel Injector, Electronic Ignition
29	Oxygen Sensor
30	PCM Devices/Engine Emissions Sensors
31	Fog Lamps
32	Headlamp (Passenger Side)
33	Trunk Release

34	Parking Lamp
35	Fuel Pump
36	Headlamp (Driver Side)
37	ABS
38	Spare
39	Spare
40	Spare
41	Spare
42	Spare
43	Spare

Diode	Usage
	Air Conditioning Compressor Diode
44	Fuse Puller