


Chevrolet Blazer 1995 – 2005 fuse box diagram

Passenger Compartment Fuse Box

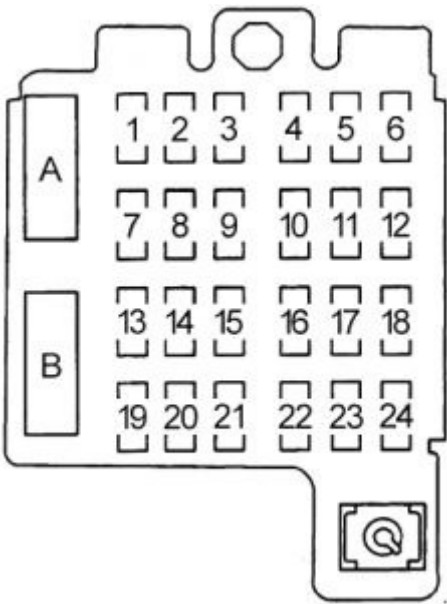

Chevrolet Blazer – fuse box diagram – passenger

compartment

No.	A	Protected Component
1	20	'95-'97: Stoplights, Hazard Warning Lights, Chime Module
	10	'98: Headlamp Switch
2	20	'95-'97: Dome Light, Glove Box Light, Lighted Visor Mirror, Horn, I/P Courtesy Light, Cigar Lighter , Liftgate Glass Release, Power Mirror, Endgate Lock Switch, Keyless Entry, Cargo Lamp, Driver's Information Display Center, Interior Lamps Control Module, Inside Rear View Mirror
	15	'98-'05: Cigar Lighter, Data Link Connector (DLC)
3	20	'95-'97: Electric Shift Transfer Case Module, Parking Lights, License Plate Light, Rear Windshield Washer Pump, Underhood Lamp
	10	'98-'05: Body Control Module (BCM), Cruise Control Module (CCM), Multifunction Switch (Cruise Control Switch), Seat Lumbar Switch – Driver/Front Passenger
4	20	'95: Auto Transmission, Alternator Field, Variable Throttle Control, A/C Compressor, Cluster, Chime Module, 4WD Indicator Light, Heated O2 Sensor, Daytime Running Lights Module, Rear Window Defog Switch, Keyless Entry


	10	'96-'97: A/C Compressor Relay, Daytime Running Lamps Control Module, Daytime Running Lamps Relay, Four Wheel Drive Indicator Switch, Front Axle Switch, Fuel Level Buffer Module, Inflatable Restraint Diagnostic Energy Reserve Module, Instrument Ouster, Interior Lamps Control Module, Rear Window Defogger Switch, Remote Control Door Lock Receiver, Seat Belts Lamp Alarm, Ignition Key Lamp Alarm, Transfer Case Select Switch, Transfer Case Shift Control Module
	10	'98-'05: Body Control Module (BCM), Instrument Panel Cluster (IPC)
5	20	'95-'97: Linear EGR Valve, Evaporative Emissions Canister Purge Solenoid, Evaporative Emission Canister Vent Solenoid Valve, Heated O2 Sensors, Camshaft Position Sensor, Vehicle Control Module, Powertrain Control Module, Mass Air Flow Sensor
	10	'98: Radio, Heater Controller (except A/C), Heater and A/C Controller (with A/C), Fog Lamp Switch, IP Module Switch, Truck Body Control Module (TBC), Transfer Case Select Switch, Instrument Cluster
	10	'99-'05: Body Control Module (BCM), Outside Rear View Mirror Switch, Door Lock and Side Window Switch – Driver/Front Passenger, Side Window Lockout Switch, Rear Seat Audio Control, IP Ashtray Lamp
6	25	'95: Heater and A/C Select Switch, Air Temperature Valve Electric Actuator
	20	'96-'97: Air Temperature Valve Electric Actuator, Heater and A/C Controller, Heater Controller
	2	'99-'05: Redundant Steering Wheel Controls
7	25	'95-'97: Power Auxiliary Outlets, Data Link Connector
	5	'98: Outside Rear View Mirror Switch, Door Lock Switch Assembly, Side Window Switch Assembly
	10	'99-'05: Headlamp Switch
8	30	'95-'97: Rear Window Defog Switch
	10	'98-'05: Courtesy Lamps – Left/Right Console, Inadvertent Power Relay, Transfer Case Shift Control Module (NP1)
9	15	'95: Powertrain Control Module (Battery), ABS Battery, Fuel Pump Relay

	20	' 96-'97 : Powertrain Control Module (Battery), Fuel Pump Relay, Fuel Pump Switch and Engine Oil Pressure Gauge Sensor
	20	' 98-'05 : Heater and A/C Control Module (with A/C), Heater Controller (except A/C)
10	10	' 95 : Powertrain Control Module (Ignition), Injectors, Engine Sensors
	20	' 96-'97 : Crankshaft Position Sensor, Electronic Ignition Control Module, Fuel Injectors, Powertrain Control Module
	20	' 98-'05 : Multifunction Switch (Hazard Switch)
11	20	' 95-'97 : Radio, Inside Rearview Mirror Map Lights, Rear Window Wiper/Washer, Driver Information Display Control Module, Map/Dome Lamp Relay
	10	' 98-'05 : Instrument Panel Cluster (IPC), Automatic Transmission Shift Lock Actuator, Automatic Transmission, Powertrain Control Module
12	10	' 96-'97 : Cruise Control Module, Cruise Control Switch (Multi-Function Switch), Electronic Brake Control Module (ABS), TCC/Brake And Cruise Control Release Switch
	10	' 98 : IP Ashtray Lamp, Truck Body Control Module (TBC), Outside Rear View Mirror Switch, Door Lock Switch Assembly, Side Window Switch Assembly
	10	' 99-'05 : Radio, Heater and A/C Control Module, Fog Lamp Switch, Rear Wiper/Washer and Endgate/Liftgate Window Release Switch, Driver Information Center (DIC), Automatic Transmission Shift Lever Position Indicator, Body Control Module (BCM), Transfer Case Select Switch, Instrument Panel Cluster (IPC), Headlamp Leveling Switch
13	15	' 95 : Clock, Radio Battery, CD Player
	10	' 96-'97 : Radio
	20	' 98-'05 : Accessory Power Outlet – Left/Right, Accessory Power Outlet – Floor Console, Accessory Power Outlet – Rear
14	5	' 95 : Cluster Illumination, Ash Tray Lamp, Radio Illumination, Heater Lamp, 4WD Illumination, Chime Module, Fog Lamp Sw. Illumination, Daytime Running Lights

	10	'96-'97: A/C Compressor Relay
	15	'98-'05: Door Lock Relay, Door Unlock Relay, Door Unlock Relay – Driver (Power Door Locks)
15	10	'95: Daytime Running Lights Relay
	20	'96-'97: Fog Lamp Relay, Daytime Running Lights Relay
	10	'98-'05: Powertrain Control Module (PCM), Transfer Case Shift Control Module, Transfer Case Shift Control Switch (NP1, NP8), Front Axle Vacuum Solenoid (NP1, NP8), Front Axle Indicator Switch (NP1, NP8)
16	15	'95-'97: Turn Signal Lights, Back-Up Lights, Backup Lamp Switch (Manual Transmission), Transmission Range Switch (Park/Neutral Position and Backup Lamp Switch)
	15	'98-'05: Inflatable Restraint Sensing and Diagnostic Module (SDM)
17	25	Windshield Wiper Motor, Multifunction Switch (Wiper Switch)
18	15	'95: Speedometer, ABS System, Cruise Control
	2	'99-'05: Redundant Steering Wheel Controls
19	20	'95-'97: Transfer Case Control Module (Four-Wheel Drive)
	15	'98-'05: Radio, Instrument Panel Cluster (IPC), Heater and A/C Control Module, Vehicle Interface Unit (VIU)
20	10	'95: Diagnostic Energy Reserve Module (DERM)
	10	'96-'97: Clutch Pedal Position and Cruise Control Shutoff Switch, Inflatable Restraint Diagnostic Energy Reserve Module, Transfer Case Shift Control Module, Transmission Range Switch (Park/Neutral Position And Backup Lamp Switch)
	25	'98-'05: Audio Amplifier
21	20	'95: Fog Lamps Relay

	10	'98-'05: Air Temperature Actuator, Heater and A/C Control Module, Inside Rear View Mirror (Automatic Day – Night Mirror), Air Temperature Sensor Assembly – Inside, Vacuum Control Assembly
22	10	'95-'97: Air Bag Diagnostic Energy Reserve Module (DERM), Arming Sensor
	10	'98-'05: Stop Lamp Switch, ABS – Electronic Brake Control Module (EBCM)
23	10	'95-'97: Automatic Transmission Position Indicator Lamp, Driver's Information Display Center, Endgate Window Release Switch, Fog Lamp Switch, Four Wheel Drive Indicator Switch, Heater and A/C Controller Heater Controller, Instrument Cluster, Liftgate Window Release Switch, Radio, Rear Window Defogger Switch, Rear Window Wiper and Washer Switch, Seat Belts Lamp Alarm, Ignition Key Lamp Alarm
	15	'98-'05: Rear Wiper/Washer Switch, Endgate/Liftgate Window Release Switch
24	10	'95-'97: Instrument Cluster, Automatic Transmission, Park Pawl Actuator (Brake Transmission Shift Interlock Solenoid)
	10	'98-'05: Radio, Driver Information Center (DIC), Rear Seat Audio (RSA) Module, Vehicle Interface Unit (VIU), Outside Rear View Mirror Switch
Circuit Breaker		
A	20	'95-'97: Power Door Locks
B	30	'95-'97: Power Windows, Sunroof

Engine Compartment Fuse Box ('98-'05)

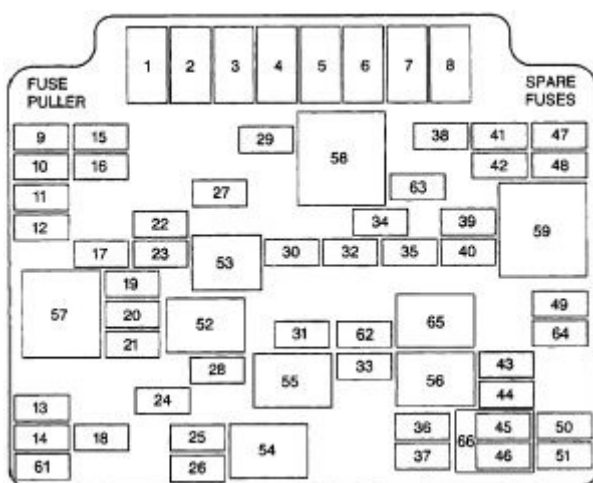

Chevrolet Blazer – fuse box diagram – engine


compartment

No.	A	Protected Component
1	50	except Envoy: Fuses (Passenger Compartment): "2", "7", "8", "13", "14", "19"
	60	Envoy: Fuses (Passenger Compartment): "2", "7", "8", "13", "14", "19"
2	60	ABS – Electronic Brake Control Module (EBCM)
3	–	–
4	–	–
5	50	Ignition Switch
6	50	Retained Accessory Power (RAP) Relay, "POWER SEATS" Circuit Breaker
7	40	Starter Relay, Ignition and Start Switch
8	30	Trailer Wiring Provision (Power Aux)
9	10	Trailer Wiring Provision (LP – Stop, T/Sig – LH)
10	10	Trailer Wiring Provision (LP – Stop, T/Sig – RH)
11	10	Trailer wiring Provision (LP-B/U)
12	15	Backup Lamp – Right/Left, Inside Rear View Mirror (Automatic Day – Night Mirror)
13	10	Park/Turn Signal Lamp – RH, Marker Lamp, Repeater Lamps
14	10	Park/Turn Signal Lamp – LH, Marker Lamp, Repeater Lamp
15	10	Park/Turn Signal Lamp – LR, Turn Signal Lamp – LR
16	10	Park/Turn Signal Lamp – RR, Turn Signal Lamp – RR
17	10	Park/Turn Signal Lamps – RR (Domestic), Tail/Stop Lamp – RH, License Plate Light
18	10	Park/Turn Signal Lamp – LH/RH (Domestic), Marker Lamp, Headlamp Washer Pump Relay
19	10	License Lamps, and Trailer Wiring Provisions (LP Park)
20	10	'98: Headlamp Low Beam (LH), Daytime Running Lamp (DRL) Relay
	15	'99-'05: Left Headlamp, Daytime Running Lamps (DRL) Relay
	20	Envoy ('99-'01): Left Low Beam (HID)
21	10	'98: Right Headlamp
	15	'99-'05: Right Headlamp

	20	Envoy ('99-'01): Right High Beam (HID)
22	10	Evaporative Emission (EVAP) Canister Purge Solenoid, Evaporative Emission (EVAP) Canister Vent Solenoid, Mass Air Flow (MAF) Sensor, Camshaft Position (CMP) Sensor
23	20	Fuel Pump Relay, Powertrain Control Module (PCM), Fuel Pump and Engine Oil Pressure Gauge Sensor
24	15	Envoy ('98): Left High Beam (HID)
	10	Envoy ('99-'01): Left High Beam (HID)
25	10	'99-'05: Headlamp Washer Fluid Pump Relay
	15	Envoy ('98): Right High Beam (HID)
	10	Envoy ('99-'01): Right High Beam (HID)
26	15	Horn
27	15	Ignition Control Module (ICM), Fuel Injectors, Powertrain Control Module (PCM), Ignition Coil, Crankshaft Position Sensor
28	10	'99-'05: A/C Compressor Relay
	15	Envoy ('98): Daytime Running Lamps
29	10	Stop Lamp Switch, Transfer Case Shift Control Module, Automatic Transmission Shift Lock Actuator
30	25	Backup Lamp Switch, Park Neutral Position (PNP)
31	10	'98: A/C Compressor Clutch Relay
32	10	A/C Compressor Relay, Secondary Air Injection (AIR) Relay (California Emissions), Rear Defogger Relay, Headlamp Leveling Switch, Headlamp Leveling Actuator Motor (LH/RH), Automatic Level Control (ALC) Sensor and Compressor
33	15	Fog Lamp Relay, Daytime Running Lamps (DRL) Relay, Headlamp Ground Relay
34	20	Heated Oxygen Sensor (HO2S) Bank 1, Sensor 1, Heated Oxygen Sensor (HO2S) Bank 1, Sensor 3, Heated Oxygen Sensor (HO2S) Bank 2, Sensor 1
35	10	Park/Turn Signal Lamps – LR (Domestic) and Tail/Stop Lamp – LH, License Lamp
36	20	Ignition Switch
37	20	Seat Heater Module (LH/RH), Lumbar Switch (RH, LH)
38	20	Park Lamp Relay, Headlamp Grounding Relay, Headlamp Switch
39	20	'98: Transfer Case Control Module
	20	Envoy: High Beam Relay
40	30	Rear Window Defogger Grid
41	30	Blower Motor Relay (without Electronic Climate Control), Blower Motor Control Module (Electronic Climate Control)
42	10	Trailer Wiring Provision (LP – High MT Stop)
43	10	'99-'05: Body Control Module (BCM), Remote Control Door Lock Receiver (RCDLR), Multifunction Switch (Flash to Pass)

44	10	Transfer Case Shift Control Module, Clutch Pedal Position (CPP) Switch (M/T Only), Park/Neutral Position (PNP), Backup Lamp Switch, Manual Transmission Clutch Start Switch
45	–	–
46	20	HID Headlamps
47	20	Multifunction Switch (Hazard)
48	10	Center High Mounted Stop Lamp (CHMSL), Center High Mounted Stop Lamp (CHMSL) Resistor, Cruise Control Module (CCM), Tail/Stop Lamp – LH/RH, Dome Lamp
49	10	Heated Mirrors
50	20	Stop Lamp Switch, High Mounted Stop Lamp Relay
51	10	'98: Truck Body Control Module (TBC), RFA Module Assembly (Remote Keyless Entry)
	15	'99-'05: Rear Window Wiper Motor
61	15	Headlamp Washer
62	3	Outside Rear View Mirror Switch, Door Lock and Side Window Switch – Left/Right, Lift Glass Relay, Liftgate or Endgate Lock Cylinder Switch
63	25	Load Leveling Pump, Load Leveling Timer Relay
64	20	Transfer Case Shift Control Module, Transfer Case Encoder Motor (NP1)
Relay		
52		Daytime Running Lamps (DRL)
53		Fuel Pump
54		Horn
55		Air Conditioner
56		Fog Lamp
57		Headlamp (Low Beam Headlamps)
58		Starter
59		Rear Window Defogger
65		'98: Headlamps
		Liftgate/Endgate Window Release Actuator
66		'98: Center High Mounted Stop Lamp (CHMSL)

Relay Box

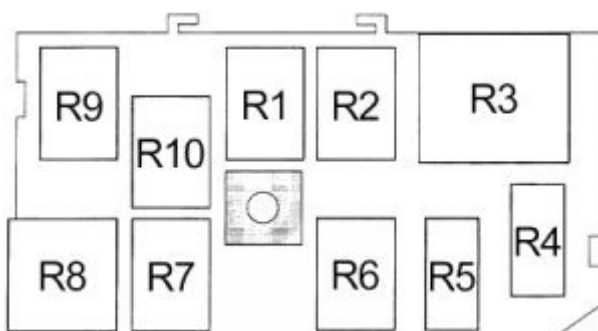

Chevrolet Blazer – fuse box diagram – relay box

No.	Relay
R1	Park Lamp
R2	Courtesy Lamp
R3	Retained Accessory Power (RAP)
R6	Inadvertent Power
R7	Door Lock
R8	except Envoy: Headlamp Ground
	Envoy: High Beam
R9	Driver Door Unlock
R10	Door Unlock
Circuit Breaker	
R4	Power Seats
R5	Power Windows