


Buick Regal 2017 fuse box diagram

Engine Compartment Fuse Block

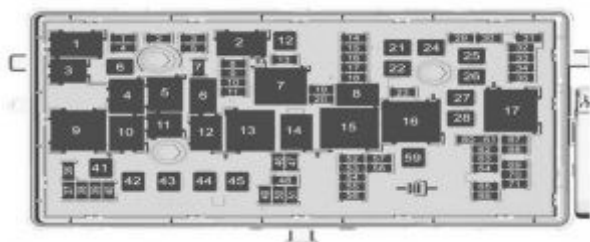

Buick Regal mk5 – fuse box – engine

compartment

Fuses	Usage
1	Transmission control module
2	Engine control module
3	—
4	—
5	Ignition/ Transmission control module/Engine control module
6	Windshield wiper
7	BPIM (eAssist only)
8	—
9	Fuel injection/ Ignition system
10	Engine control module
11	O2 sensor
12	Starter
13	Fuel system control module
14	Trunk release
15	MGU coolant pump (eAssist only)
16	Heated steering wheel
17	—
18	BPIM (eAssist only)
19	—
20	—
21	Rear power windows
22	ABS valve
23	Obstacle detection
24	Front power windows
25	Power outlets
26	ABS pump
27	Electric parking brake
28	Rear window defogger
29	Driver seat lumbar

30	Passenger seat lumbar
31	A/C clutch
32	Body control module 6
33	Heated front seats
34	Sunroof
35	Infotainment system
36	Adaptive cruise
37	Right high-beam headlamp
38	Left high-beam headlamp
39	AWD
40	—
41	Vacuum pump
42	Radiator fan
43	Passive entry/ Passive start
44	Transmission auxiliary pump (eAssist only)
45	Radiator fan
46	Terminal 87/Main relay
47	O2 sensor
48	Fog lamps
49	Right low-beam HID headlamp
50	Left low-beam HID headlamp
51	Horn
52	Malfunction indicator lamp
53	Interior rearview mirror
54	Rear vision camera
55	Power windows/ Mirrors
56	Windshield washer
57	—
58	—
59	Secondary air induction (eAssist only)
60	Heated mirrors
61	—
62	Canister vent solenoid
63	—
64	HVAC pump (eAssist only)
65	—
66	SAI check valve (eAssist only)
67	Fuel system control module
68	—

69	Battery sensor
70	Right low-beam headlamp/DRL
71	—

Relays	Usage
1	A/C control
2	Starter
3	—
4	Front wiper (step 2)
5	Front wiper (step 1)
6	Right low-beam headlamp/DRL
7	Main relay
8	Auxiliary heater pump (eAssist only)
9	Cooling fan
10	Cooling fan
11	Transmission auxiliary pump (eAssist only)
12	—
13	Cooling fan
14	HID headlamps/Left low-beam headlamp/DRL
15	Ignition
16	Secondary AIR pump (eAssist only)
17	Window/Mirror defogger

Instrument Panel Fuse Block

The instrument panel fuse block is located in the instrument panel, on the driver side of the vehicle.



Buick Regal mk5 – fuse box – instrument panel

Item	Usage
1	Suspension control module/Universal garage door opener/ESC
2	Body control module 1
3	Body control module 5
4	Radio
5	Radio displays/ Parking assist/ Infotainment/Module tunnel control
6	Instrument panel power outlet
7	Console power outlet
8	Body control module 3
9	Body control module 4
10	Body control module 8
11	Front HVAC blower
12	Right front seat
13	Left front seat
14	Diagnostic link connector
15	Airbag
16	Steering wheel controls
17	HVAC controller
18	Service fuse/ Logistics relay
19	Memory seats
20	Automatic occupant sensing
21	Instrument cluster
22	Discrete logic ignition switch/ Passive entry/ Passive start
23	Body control module 6
24	Body control module 2
25	OnStar
26	—