


MAIN FUSE
BOX (M/B)

B: (B143)
C: (F35)
E: (F36)

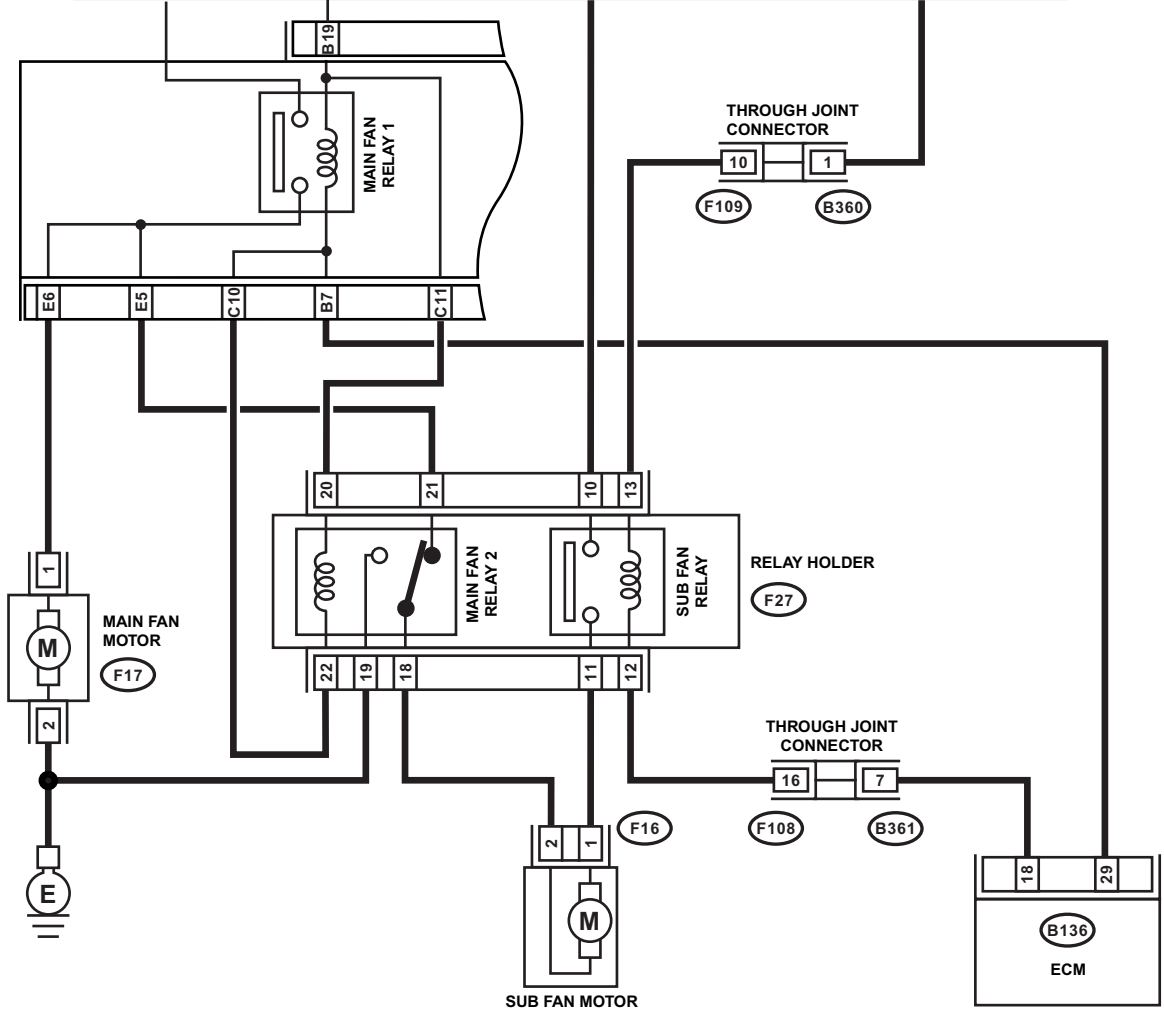


 
 
 
 
B361

B360

F108

F109

F27

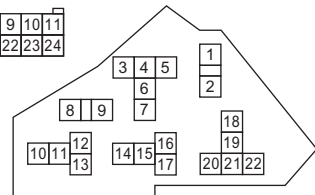

B: (B143)

C: (F35)

E: (F36)

