


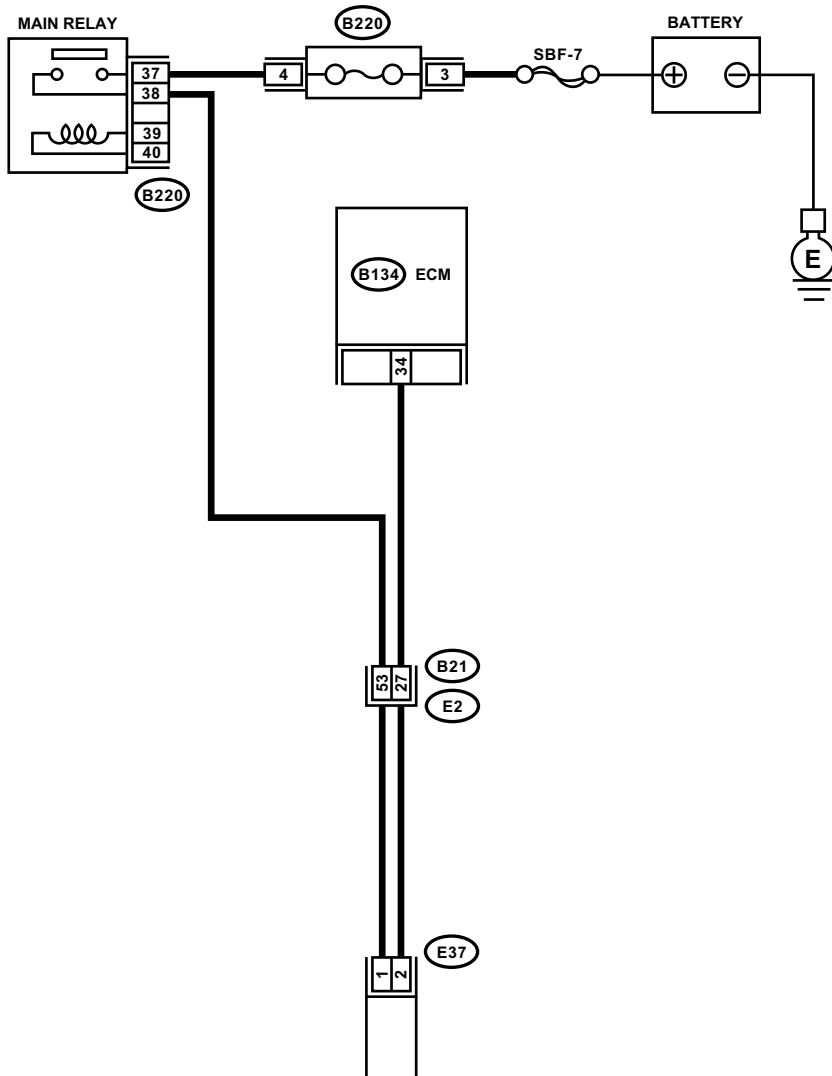

OIL FLOW CONTROL SOLENOID VALVE LH

E37



B134

1	2	3	4	5	6	7
8	9	10	11	12	13	14
15	16	17	18	19	20	21
22	23	24	25	26	27	28
29	30	31	32	33	34	

B21

1	2	3	4	5	6	7	8	9	10	11
12	13	14	15	16	17	18	19	20	21	22
23	24	25	26	27	28	29	30	31	32	33
34	35	36	37	38	39	40	41			
42	43	44	45	46	47					
48	49	50	51	52	53	54				

B220

1	2	9	13	17	21
3	4	10	14	18	22
5	6	11	12	15	16
		19	20	23	24
7	8	25	29	33	37
		26	30	34	38
		27	28	31	32
		35	36	39	40