

A: B54 B: B55 TCM

- AT(R)-02 A**
- \*1 : TERMINAL No. OPTIONAL ARRANGEMENT AMONG 1, 11 AND 12
  - \*2 : TERMINAL No. OPTIONAL ARRANGEMENT AMONG 2, 3 AND 13
  - \*3 : TERMINAL No. OPTIONAL ARRANGEMENT AMONG 8, 18 AND 19
  - \*4 : TERMINAL No. OPTIONAL ARRANGEMENT AMONG 9, 10 AND 20

AT4

REAR VEHICLE SPEED SENSOR

FRONT VEHICLE SPEED SENSOR

TORQUE CONVERTER  
TURBINE SPEED SENSOR

ATF TEMPERATURE SENSOR

LINE PRESSURE LINEAR SOLENOID

LOW CLUTCH DUTY SOLENOID

HIGH CLUTCH DUTY SOLENOID

LOW & REVERSE DUTY SOLENOID

2-4 BRAKE DUTY SOLENOID

LOCK-UP DUTY SOLENOID

TRANSFER DUTY SOLENOID

CONTROL VALVE BODY

JOINT CONNECTOR

B53

B11

T4

AT4

|   |   |   |
|---|---|---|
| 1 | 2 | 3 |
|---|---|---|

AT2

|   |   |
|---|---|
| 1 | 2 |
| 3 | 4 |

AT3

|   |   |   |
|---|---|---|
| 1 | 2 | 3 |
| 4 | 5 | 6 |

B11 (GRAY)

|    |    |    |    |
|----|----|----|----|
| 1  | 2  | 3  | 4  |
| 5  | 6  | 7  | 8  |
| 9  | 10 | 11 | 12 |
| 13 | 14 | 15 | 16 |
| 17 | 18 | 19 | 20 |

B53

|    |    |    |    |    |    |    |    |    |    |
|----|----|----|----|----|----|----|----|----|----|
| 1  | 2  | 3  | 4  | 5  | 6  | 7  | 8  | 9  | 10 |
| 11 | 12 | 13 | 14 | 15 | 16 | 17 | 18 | 19 | 20 |

A: B54

|    |    |    |    |    |    |    |
|----|----|----|----|----|----|----|
| 1  | 2  | 3  | 4  | 5  | 6  | 7  |
| 8  | 9  | 10 | 11 | 12 | 13 | 14 |
| 15 | 16 | 17 | 18 | 19 | 20 | 21 |
| 22 | 23 | 24 | 25 | 26 | 27 | 28 |
| 29 | 30 | 31 | 32 | 33 | 34 | 35 |

B: B55

|    |    |    |    |    |    |
|----|----|----|----|----|----|
| 1  | 2  | 3  | 4  | 5  | 6  |
| 7  | 8  | 9  | 10 | 11 | 12 |
| 13 | 14 | 15 | 16 | 17 | 18 |
| 19 | 20 | 21 | 22 | 23 | 24 |
| 25 | 26 | 27 | 28 | 29 | 30 |
| 31 | 32 | 33 | 34 | 35 |    |