

M/B FUSE No. 13

F/B FUSE No. 4

DATA LINK
CONNECTOR

B1

A27

A35

B5

B11

A36

B20

A7

A12

A22

B10

A11

PUSH BUTTON
START SYSTEM *1

STARTER
SYSTEM *2

POWER
SUPPLY
CIRCUIT *3

GENERATOR

F/B FUSE No. 12

M/B FUSE No. 11

SUB FUEL
PUMP RELAY

SUB FUEL
PUMP

CLUTCH
SWITCH

B33

TEST MODE
SUB CONNECTOR

DELIVERY (TEST)
MODE CONNECTOR

NEUTRAL
POSITION SWITCH

B21

A42

JOINT
CONNECTOR

②

③

④

①