

Injector code registration.

Enter the injector code #1.

(1)

(3)

(5)

(7)

(2)

(4)

(6)

(8)

(1)		(2)	
(3)		(4)	
(5)		(6)	
(7)		(8)	

OK

Cancel

Injector code registration.

Enter the injector code #2.

(1)

(3)

(5)

(7)

(2)

(4)

(6)

(8)

(1)		(2)	
(3)		(4)	
(5)		(6)	
(7)		(8)	

OK

Cancel

Injector code registration.

Enter the injector code #3.

(1)

(3)

(5)

(7)

(2)

(4)

(6)

(8)

(1)		(2)	
(3)		(4)	
(5)		(6)	
(7)		(8)	

OK

Cancel

Injector code registration.

Enter the injector code #4.

(1)

(3)

(5)

(7)

(2)

(4)

(6)

(8)

(1)		(2)	
(3)		(4)	
(5)		(6)	
(7)		(8)	

OK

Cancel