


Lincoln MKX 2011 – 2015 fuse box diagram

Passenger compartment fuse panel

The fuse panel is located behind a trim panel on the left side of the driver's footwell near the parking brake.

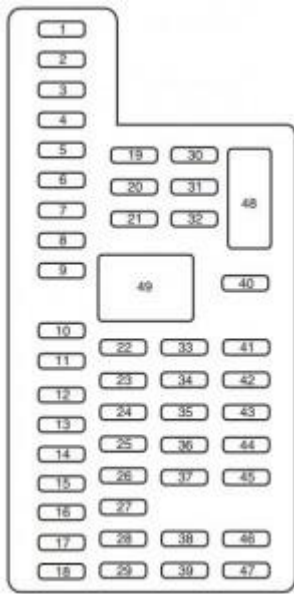

Lincoln MKX – fuse box – passenger compartment

No.	A	Protected components
1	30	Driver front smart window
2	15	Not used (spare)
3	30	Passenger front smart window
4	10	Demand lamps
5	20	Subwoofer
6	5	Radio frequency module

7	7.5	Power mirror switch, Memory seat switch, Driver seat module
8	10	Not used (spare)
9	10	Power liftgate
10	10	Run/accessory relay
11	10	Instrument panel cluster, Heads-up display
12	15	Interior lighting, Puddle lamps, Backlighting
13	15	Right turn/stop lamps and turn signals
14	15	Left turn/stop lamps and turn signals
15	15	Reverse lamps, Stop lamps (high-mounted)
16	10	Low beam headlamps (right)
17	10	Low beam headlamps (left)
18	10	Keypad illumination, Brake shift interlock (BSI), Passenger compartment fuse panel, Start button LED, Passive anti-theft system (PATs), Powertrain control module (PCM) wake-up, 2nd row power enable
19	20	Audio amplifier
20	20	Lock/unlock relays – vehicles without intelligent access (IA)


21	10	Not used (spare)
22	20	Horn relay
23	15	Steering wheel control, Intelligent access (IA), Headlamp switch
24	15	Power tilt/telescope steering column, On-board diagnostics (OBDII)
25	15	Liftgate release
26	5	Global positioning system (GPS) module
27	20	Intelligent access (IA)
28	15	Ignition switch (without intelligent access), Key inhibit solenoid, Push button start (with intelligent access)
29	20	Radio, Electronic finish panel, SYNC® module
30	15	Front park lamps
31	5	Not used (spare)
32	15	Moon roof, Power windows, Compass/auto-dimming rear view mirror
33	10	Not used (spare)
34	10	Reverse sensing system, Rearview camera, Blind spot monitor, Rear heated seat module

35	5	Heads-up display
36	10	Heated steering wheel
37	10	Climate control
38	10	Not used (spare)
39	15	High beam headlamps
40	10	Rear park lamps, License plate lamps
41	7.5	Occupant classification sensor (OCS), Restraints control module
42	5	Not used (spare)
43	10	Not used (spare)
44	10	Not used (spare)
45	5	Not used (spare)
46	10	Climate control
47	15	Fog lamps, LED signal mirrors
48	30	Circuit Breaker: Power windows (Rear power windows)
Relay		

49	Delayed accessory
----	-------------------

Engine Compartment Fuse Box

The power distribution box is located in the engine compartment.

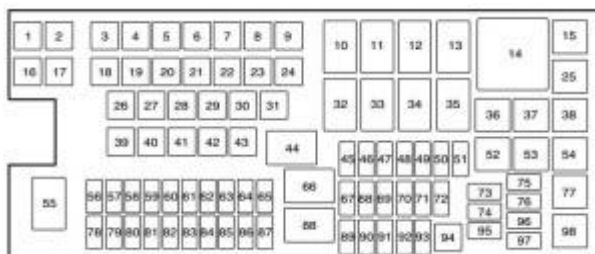

Lincoln MKX FL – fuse box – power

distribution box

No.	A	Protected components
1	—	Not used
2	—	Not used
3	—	Not used
4	30	Wipers
5	40	Anti-lock brake system (ABS) pump
6	—	Not used
7	30	Power liftgate
8	20	Moon roof
9	20	Power point #2 (console rear)

16	—	Not used
17	—	Not used
18	40	Blower motor
19	30	Starter motor
20	20	Power point #1 (console bin)
21	20	Cargo area power point
22	—	Not used
23	30	Driver seat module
24	—	Not used
25	—	Not used
26	40	Rear window defroster
27	20	Front power point/lighter
28	30	Climate controlled seats
29	—	Not used
30	30	Rear heated seats

31	—	Not used
39	40	Cooling fan (vehicles with trailer tow)
	60	Cooling fan (vehicles without trailer tow)
40	40	Cooling fan (trailer tow only)
41	—	Not used
42	30	Passenger seat
43	30	'11: Anti-lock brake system valves
	25	'12-'15: Anti-lock brake system valves
45	5	Rain sensor
46	—	Not used
47	—	Not used
48	—	Not used
49	—	Not used
50	15	Heated mirror
51	—	Not used

56	—	Not used
57	20	Left high-intensity discharge (HID) headlamps
58	10	Alternator sensor
59	10	Brake on/off switch
60	—	Not used
61	10	Rear seat release
62	10	A/C clutch
63	15	Trailer tow stop/turn lamps relay
64	20	Rear wiper motor
65	15	Fuel pump
67	20	Vehicle power (VPWR) #2
68	15	VPWR #4
69	15	VPWR #1
70	10	A/C relay, All-wheel drive module
71	—	Not used

72	—	Not used
73	—	Not used
74	—	Not used
76	—	Not used
78	20	Right high-intensity discharge (HID) headlamps
79	5	Adaptive cruise control
80	—	Not used
81	—	Not used
82	15	Rear washer
83	—	Not used
84	20	Trailer tow park lamps
85	—	Not used
86	7.5	PCM keep-alive, PCM relay
87	5	Run/start relay
89	5	Adaptive lighting

90	10	PCM
91	10	Adaptive cruise control
92	10	ABS module
93	5	Blower motor/rear defroster relay
94	30	Passenger compartment fuse panel run/start
95	—	Not used
96	—	Not used
97	—	Not used
Diode		
75	A/C clutch	
Relay		
10	Not used	
11	Rear window defroster/heated mirror	
12	Not used	
13	Starter	

14	Not used
15	Fuel pump
32	Not used
33	Not used
34	Blower motor
35	Not used
36	Rear seat
37	Right trailer tow stop/turn lamps relay
38	Not used
44	Rear washer
52	Not used
53	Left trailer tow stop/turn lamps
54	Not used
55	Wiper
66	Powertrain control module (PCM)

77	Trailer tow park lamps
88	Run/start
98	A/C clutch