

Alfa Romeo 4C 2013 – 2016 fuse box diagram

Dashboard Fuse Box


The dashboard fuse box is part of the Body Control Module (BCM) and is located on the passenger side under the forward passenger floor.

Cavity	Fuse number	Mini Fuse	Description
3	F53	7,5	Instrument Panel Node
4	F38	15	Central Door Locking
5	F36	10	Diagnostic Socket, Vehicle Radio, TPMS, Alarm
6	F43	20	Bi-Directional Washer
7	F48	20	Passenger Power Window
9	F50	7,5	Airbag
10	F51	7,5	Headlamp Washer Relay, A/C Compressor Relay, High Beam Relay, Parking ECU, Vehicle Radio, Stop Lamp Switch
11	F37	7,5	Stop Light Switch, Instrument Panel Node
12	F49	5	Transmission Shifter Module, Cigar Lighter Light, Drive Style Unit, Heated Mirrors Relay
13	F31	5	Climate Control, Body Controller

14	F47	20	Driver Power Window
----	-----	----	---------------------

Engine compartment fuse box

The engine compartment fuse box is located on the left side of the engine compartment, next to the battery.

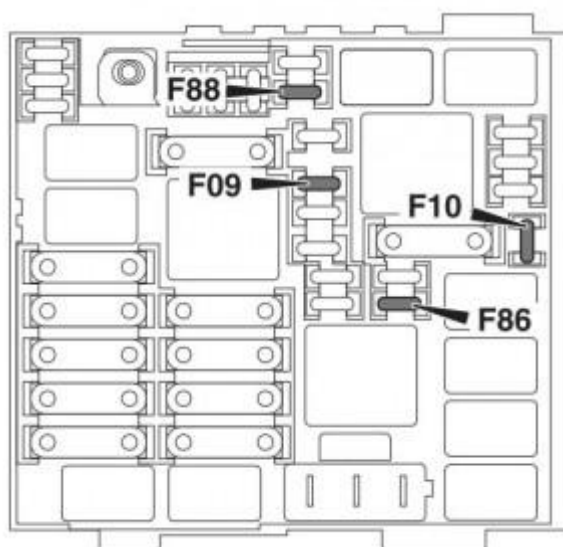

Alfa Romeo 4C – fuse box – engine compartment

Cavity	Maxi Fuse	Mini Fuse	Description
F01	70	—	Body Controller
F03	20	—	Ignition Switch
F04	40	—	Anti-Lock Brake Pump
F05	20	—	Anti-Lock Brake Valve
F06	40	—	Radiator Fan – Low Speed
F07	50	—	Radiator Fan – High Speed

F08	20	—	Blower Motor
F09	—	5	Headlight beam switch (If Equipped)
F10	—	10	Horn
F11	—	20	Powertrain
F14	—	15	Alfa Twin Clutch Transmission
F15	—	15	Alfa Twin Clutch Transmission
F16	—	5	Alfa Twin Clutch Transmission, BCM
F17	—	10	Powertrain
F18	—	5	Powertrain
F19	—	7,5	Air Conditioning Compressor
F21	—	20	Fuel Pump
F22	—	20	Engine Control Unit Power Supply
F24	—	5	Anti-Lock Brake System (ABS)
F30	—	10	Water Pump, HVAC
F82	30	—	Headlamp Washer (If Equipped)

F83	40	—	Alfa Twin Clutch Transmission Pump
F84	—	5	After Run Pump
F86	—	15	Rear Power Outlet 12V
F88	—	7,5	Heated Mirrors