

Toyota Previa (1995-1997) fuses

*In this article, we consider the first-generation Toyota Previa (XR10, XR20), produced from 1991 to 1999. Here you will find fuse box diagrams of **Toyota Previa 1995, 1996 and 1997**, get information about the location of the fuse panels inside the car, and learn about the assignment of each fuse (fuse layout).*

Fuse Layout Toyota Previa 1995-1997




Cigar lighter (power outlet) fuse in the Toyota Previa is the fuse #17 “CIG” in the Instrument panel fuse box.


Passenger Compartment Fuse Box

Fuse Box Location

It is located under the cover at the top of the dashboard.

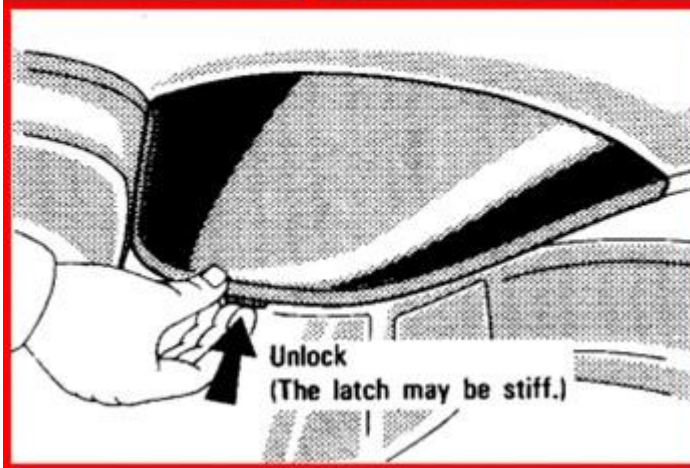

Fuse Box Diagram

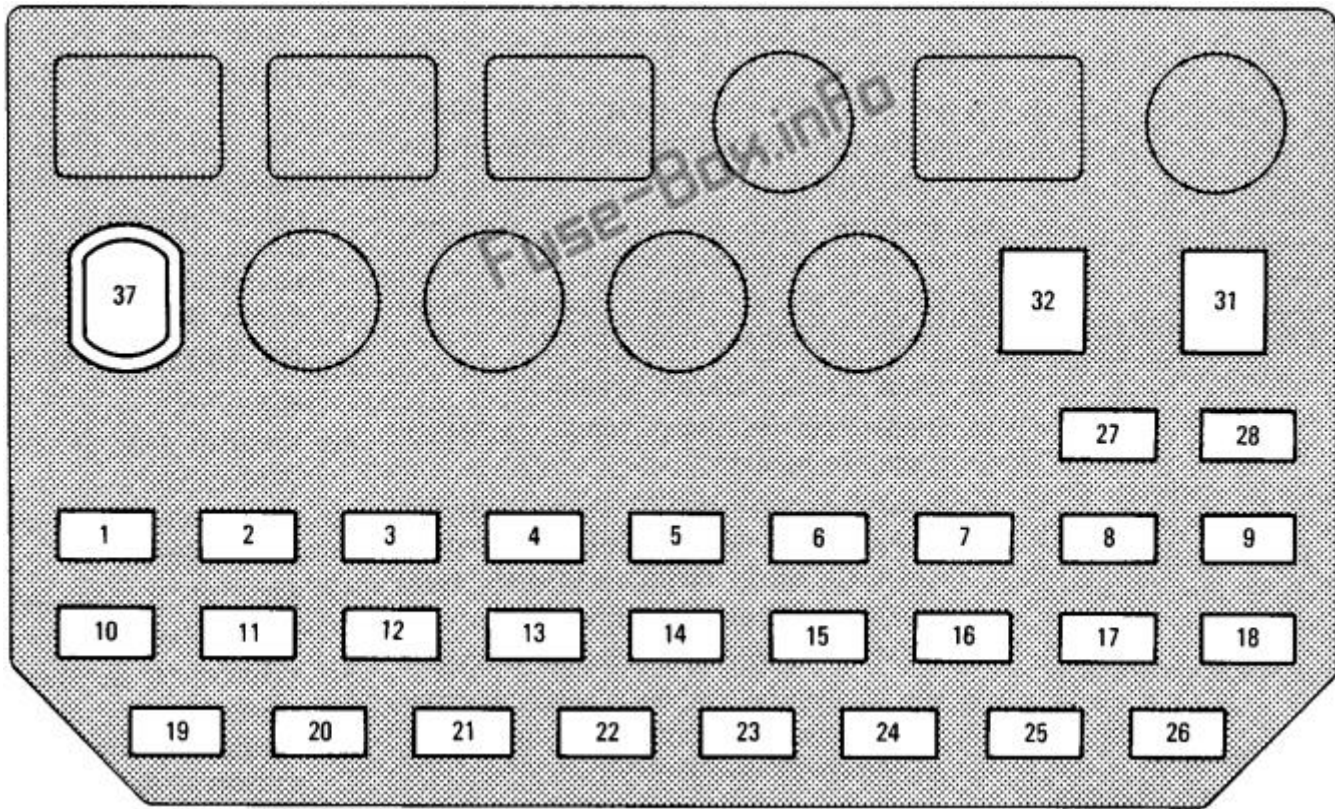

Advertisements

Assignment of the fuses in the instrument panel

Nº	Name	Amp	Description
1	ST	7.5A	Starter system
2	IGN	7.5A	Charging system, discharge warning light, emission control system, multiport fuel injection system/sequential multiport fuel injection system, SRS airbag system
3	OBD	7.5A	On-board diagnosis system
4	FOG	20A	Front fog lights
5	T/M ACC	7.5A	Automatic transmission shift indicator
6	TAIL	15A	Tail lights, parking lights, side marker lights, license plate lights, instrument panel lights
7	HAZ-HORN	15A	Emergency flashers, horns, turn signal lights


No	Name	Amp	Description
8	HEAD (LH)	15A	U.S.A.: Left-hand headlight
8	HEAD (LH-L WR)	10A	Canada: Left-hand headlight
9	HEAD (RH)	15A	U.S.A.: Right-hand headlight
9	HEAD (RH-LWR)	10A	Canada: Right-hand headlight
10	ENGINE	7.5A	Charging system, emission control system
11	RADIO	7.5A	Radio, cassette tape player, Compact Disc player
12	ST-A	7.5A	Starter system
13	STOP	20A	Stop lights, anti-lock brake system
14	DOME	15A	Interior lights, luggage compartment light, clock, open door warning light, radio, cassette tape player, Compact Disc player
15	DEFOG	15A	Rear window defogger
16	ECU-B	15A	Anti-lock brake system, electronically controlled automatic transmission system
17	CIG	15A	Cigarette lighter, digital clock display, power rear view mirrors, theft deterrent system, SRS airbag system, automatic transmission shift lock system
18	EFI	15A	Multiport fuel injection sys-tem/sequential multiport fuel injection system
19	TURN	7.5A	Turn signal lights
20	GAUGE	10A	Gauges and meters, service reminder indicators and warning buzzers (except discharge and open door warning lights), back-up lights, automatic transmission overdrive system, rear window

No	Name	Amp	Description
			defogger, electric rear sun roof, power windows, power door lock system
21	FR-WIPER	30A	Windshield wipers and washer
22	ENGINE	15A	Engine oil autofeed system
23	RR-WIPER	15A	Rear window wiper and washer
24	A/C	15A	Air conditioning cooling system, cool box
25	ECU-IG	15A	Cruise control system, electronically controlled automatic transmission system, anti-lock brake system, theft deterrent system
26	FR-WASHER	10A	Windshield washer motor
27	HEAD (LH-UPR)	10A	Canada: Left-hand headlight
28	HEAD (RH-UPR)	10A	Canada: Right-hand headlight
31	DOOR	30A	Power door lock system, theft deterrent system
32	POWER	30A	Electric rear sun roof, power windows
37	FR-HTR	40A CB	Air conditioning control system (Circuit breaker)

Engine Compartment Fuse Box


Fuse Box Location

The fuse box is located near the battery.

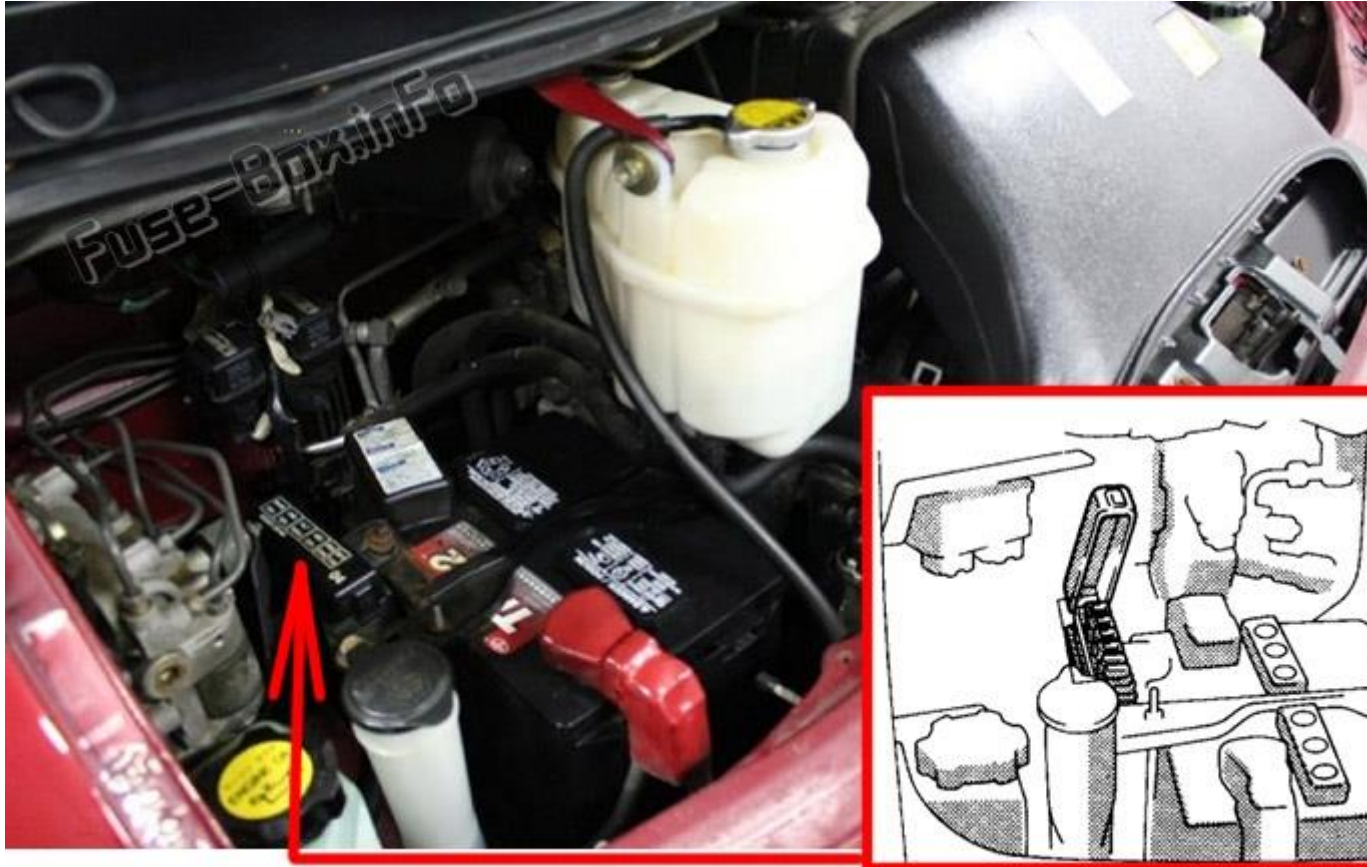

Advertisements

Fuse Box Diagram

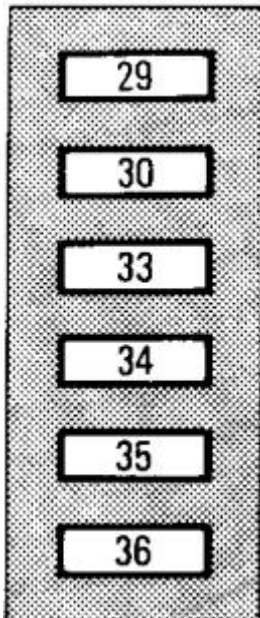

Assignment of the fuses in the engine compartment

No	Name	Amp	Description
29	ALT-S	7.5A	Charging system
30	AM2	20A	Charging system, discharge warning light, emission control system, multiport fuel injection system/sequential multiport fuel injection system
33	ABS	60A	Anti-lock brake system
34	ALT	100A	"ABS", "AM1", "STOP", "DEFOG", "FOG", "ECU-B", "TAIL", "A/C" and "RR A/C" fuses, and "FR-HTR" circuit breaker
35	AM1	50A	"ENGINE", "GAUGE", "TURN", "FR-WIPER", "ECU-IG", "A/C", "RADIO", "CIG", "ST", "POWER" and DOOR" fuses
36	MAIN	50A	"HAZ-HORN", "DOME", "HEAD (LH)", "HEAD (RH)" and "EFI" fuses