

SUBARU®**INSTALLATION
INSTRUCTIONS****PREMIUM SPEAKER KIT
For SUBARU LEGACY
H6300LS000****Kit Contents:**


No.	PART NAME	SUBARU Part No.	QTY.
1	PREMIUM SPEAKER (RH)	H6300LS010	1
2	PREMIUM SPEAKER (LH)	H6300LS020	1
3	PREMIUM SPEAKER, REAR	H6300LS030	2
4	INSTALLATION INSTRUCTIONS		1

Tools Required:


#2 Phillips Head Screwdriver
Flat tip non-marring tool
#15 Torx Screw Driver

READ ENTIRE INSTRUCTIONS PRIOR TO INSTALLATION**Front Door Speaker Installation - Front Door Panel Removal****1. Remove trim plugs.**

Remove one (1) trim plug ① and one (1) plastic plug ② using a flat tip non-marring tool, as shown in the areas indicated by arrows in Fig. 1.

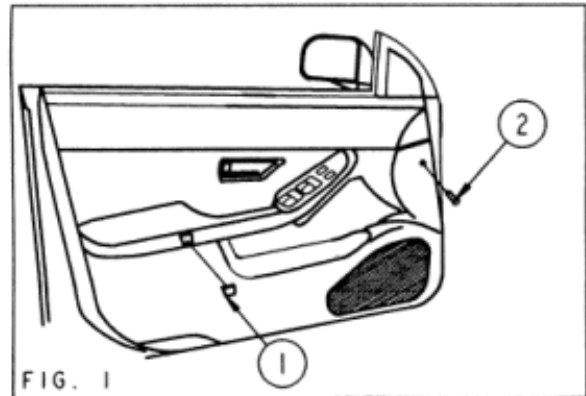**2. Remove trim panel.**

Remove the upper triangular trim panel (opposite outside rear view mirror) by carefully prying around edges. See Figure 2.

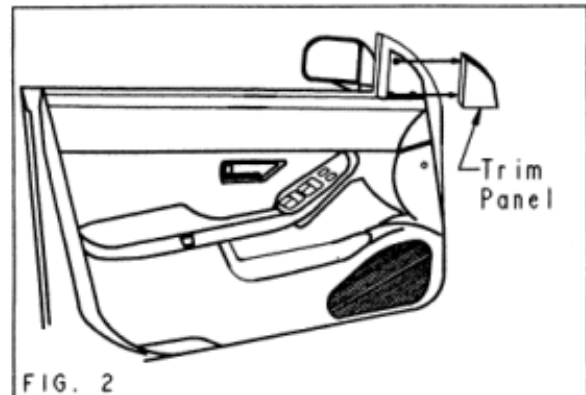

Front Door Speaker Installation - Front Door Panel Removal (continued)

3. Remove power window bezel.

Remove power window bezel by placing a flat tip non-marring tool between the upper bezel piece as shown by arrow ① and door handle while depressing the spring clip and pulling the trim upward. Then pull bezel upward at location ②. See Figure 3.

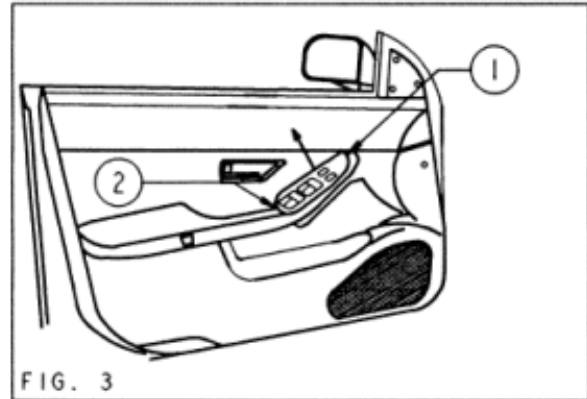


FIG. 3

4. Disconnect power window/door lock switch clusters.

Lift the bezel and disconnect harness(es) at all switch locations.

5. Remove two screws.

Remove the two (2) screws indicated by arrows in Figure 4.

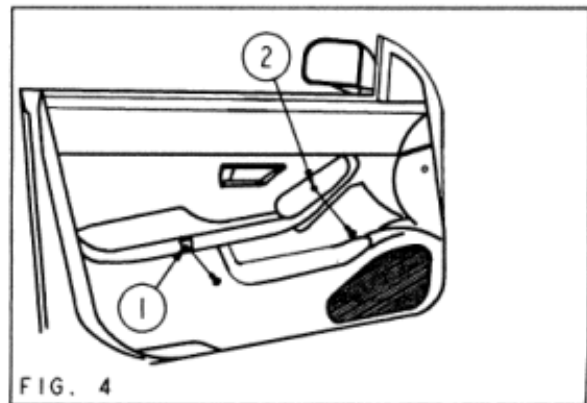


FIG. 4

6. Remove handle trim.

Remove the door handle trim by carefully prying in the direction as shown in Figure 5 ①, and pulling outward ②.


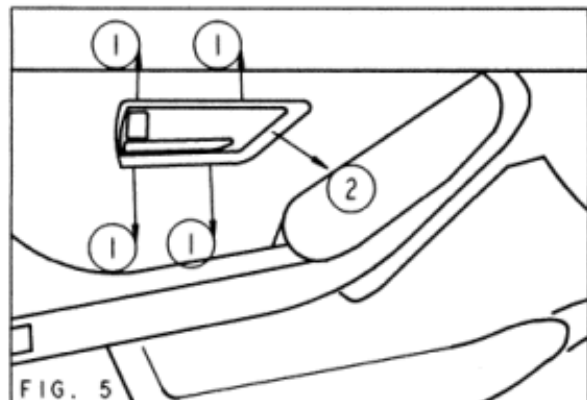


FIG. 5

7. Remove the door panel.

Pull the door panel off the door in the directions ① and ② shown.

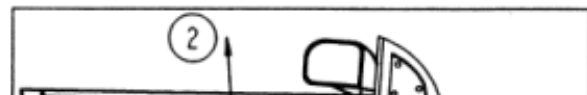

Pull the door panel off the door in the directions ① and ② shown in Figure 6. First ① then ②.

Disconnect connector for light if applicable.

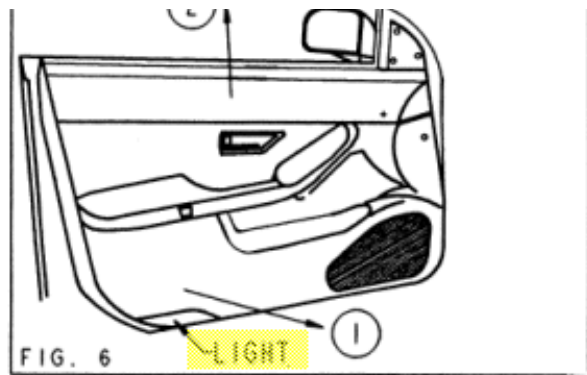


FIG. 6

Front Door Speaker Installation - Front Door Panel Removal (continued)

8. Remove installed speaker.

Remove the installed speaker by depressing the locking tab on connector while pulling the connectors apart. Remove the three (3) torx screws at the speaker/adaptor interface and remove and discard speaker. See Figure 7.

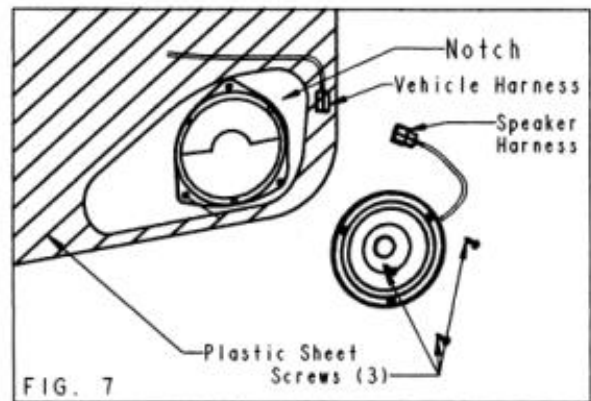


FIG. 7

9. Reinstall

Reinstall in reverse order, making sure speaker harness is not pinched, and is placed in notch in adaptor. Be careful not to damage cone. Speaker P/N:H6300LS010 is installed in the passenger side door. Speaker P/N:H6300LS020 is installed in the driver side door.

Rear Door Speaker Installation - Rear Door Panel Removal

10. Remove trim plug.

Remove one (1) trim plug in area indicated by arrow in Figure 8 using a flat tip non-marring tool.

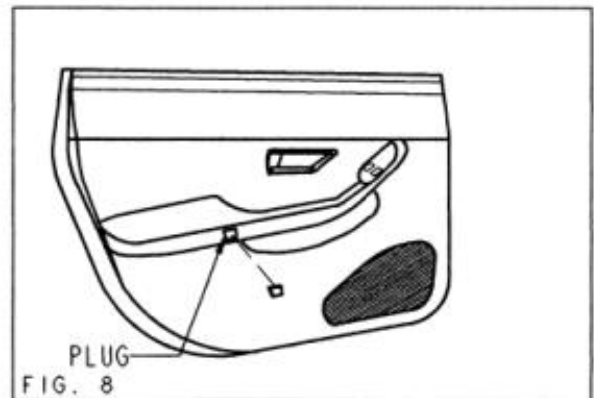


FIG. 8

11. Remove power window bezel.

Remove power window bezel piece by placing a flat tip non-marring tool between the upper bezel piece as shown by arrow ① and door handle while depressing the spring clip



shown by arrow ① and door handle while depressing the spring clip and pulling the trim upward. Then pull the bezel upward at location ②. See Figure 9.

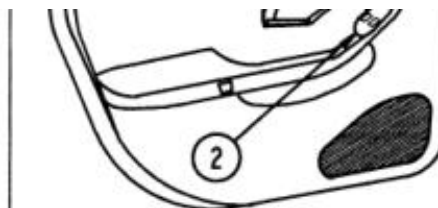


FIG. 9

12. Disconnect power window switch cluster.

Lift the bezel and disconnect harness at all switch locations.

Rear Door Speaker Installation - Rear Door Panel Removal (continued)

13. Remove two screws.

Remove the two (2) screws indicated by arrows in Figure 10.

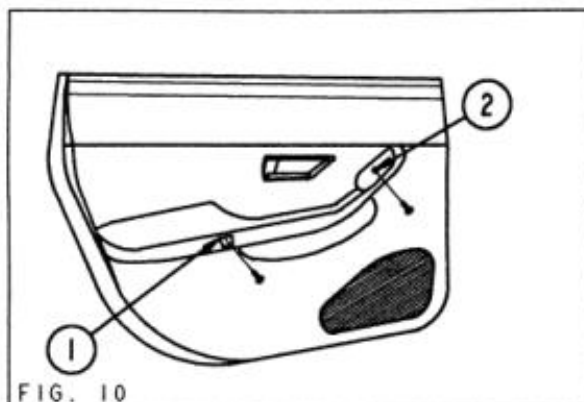


FIG. 10

14. Remove door handle trim.

Remove the door handle trim by carefully prying in the direction as shown in Figure 11 ①, and pulling outward ②.

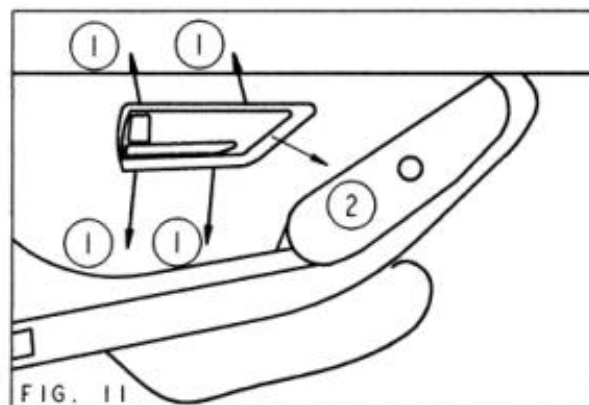



FIG. 11

15. Remove door panel.

Pull the door panel off the door in the directions ① and ② shown in Figure 12. First ① then ②.



in Figure 12. First ① then ②.

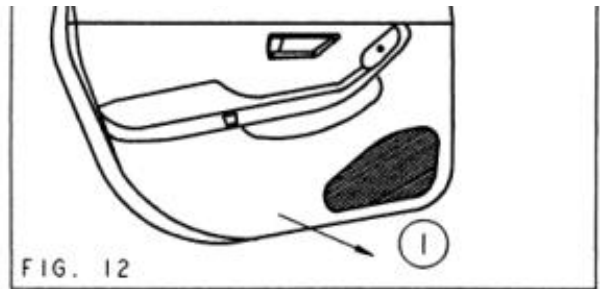

16. Remove installed speaker.

Remove the three (3) torx screws at the speaker/adaptor interface. Remove installed speaker and disconnect connector while depressing the locking tab. Discard speaker. See Figure 13.

17. Reinstall

Reinstall in reverse order. Speaker P/N:H6300LS030 is installed into both rear doors.

