

Vauxhall Astra (Astra H) 5th Generation (2004 – 2010) – fuse box diagram

Fusebox in luggage compartment

Depending on the equipment version, there are two different fuseboxes for differing electrical circuits. Astra TwinTop always has version B.

The fusebox is located on the left side of the luggage compartment behind a cover.

5-door Hatchback and Estate

To open, use a coin to turn the two latches and fold the cover downwards.

3-door Hatchback

To open, fold the cover upwards.

Astra TwinTop

To open, pull the two knobs, remove the clips and fold the cover upwards.

Fusebox, version A




Vauxhall Astra 5th Generation – fuse box – luggage compartment – version A

Number	Circuit	Rating
1	Luggage compartment socket	15
2	Rear socket	15

3	Electric windows, front	30
4	Electric windows, rear	30
5	Heated exterior mirrors	7,5
6	Air conditioning system	10

Fusebox, version B

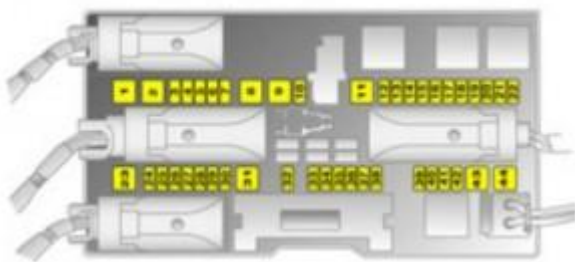

Vauxhall Astra 5th Generation – fuse box

– luggage compartment – version B

Number	Circuit	Rating
1	Electric windows, front	25
2	—	—
3	Instruments	7,5
4	Heating, air conditioning system, Electronic Climate Control (ECC) *	5
5	Airbags	7,5
6	—	—

7	—	—
8	—	—
9	—	—
10	—	—
11	Heated rear window	25
12	Tailgate wiper	15
13	Parking distance sensors	5
14	Heating, air conditioning system	7,5
15	—	—
16	Seat occupancy recognition, Open&Start system	5
17	Rain sensor, air quality sensor, tyre pressure monitoring system, interior mirror	5
18	Instruments, switches	5
19	—	—
20	CDC	10
21	Heated exterior mirrors 1)	7,5

22	Sunroof	20
23	Electric windows, rear	25
24	Diagnostics plug	7,5
25	—	—
26	Electrically retractable exterior mirrors	7,5
27	Ultrasonic sensor, Vauxhall alarm system	5
28	—	—
29	Cigarette lighter, front socket	15
30	Rear socket	15
31	—	—
32	—	—
33	Open&Start system	15
34	Sunroof, TwinTop	25
35	Rear socket	15
36	Towing equipment	20


37	Courtesy light	5
38	Central locking system, clamp 30	25
39	Seat heater (left)	15
40	Seat heater (right)	15
41	—	—
42	—	—
43	—	—
44	—	—

1) Not in conjunction with Vauxhall alarm system *

Fusebox in engine compartment

The fusebox is at the front left side of the engine compartment. To open the cover, release the catch by inserting a screwdriver into the opening as far as it will go and swivelling it to the side. Open the cover upwards and remove.

Fuse layout, version A

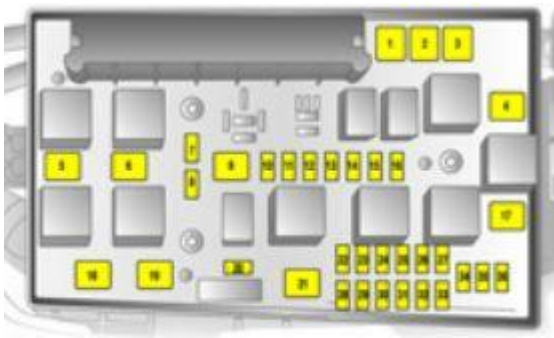

Vauxhall Astra 5th Generation – fuse box –
engine compartment – version A


Number	Circuit	Rating
1	ABS	20
2	ABS	20
3	Interior fan climate control system	30
4	Interior fan, heating, air conditioning system	30
5	Radiator fan 1 1)	30
		41
6	Radiator fan 2 1)	20
		30
		40
7	Central locking system	20
8	Windscreen wash system, tailgate	10
9	Heated rear window, heated exterior mirrors	30
10	Diagnostics plug	7,5
11	Instruments	7,5

12	Mobile telephone, digital radio, Twin Audio, display	7,5
13	Courtesy light	5
14	Windscreen wiper	30
15	Windscreen wiper	30
16	Horn, ABS, brake light switch, air conditioning system	25
17	Diesel filter	25
	Air conditioning system	20
18	Starter	25
19	Transmission electronics	30
20	Horn	15
21	Engine electronics	20
22	Engine electronics	7,5
23	Headlight range adjustment	5
24	Fuel pump	15
25	Reversing lights	5

26	Engine electronics	10
27	Heating, air conditioning system, air quality sensor	7,5
28	—	—
29	Power steering	5
30	Engine electronics	10
31	Tailgate wiper	15
32	Brake light switch	5
33	Headlight range adjustment, light switch, clutch switch, instrument assembly, driver's door module	5
34	Control unit steering column module	7,5
35	Infotainment system	20
36	Cigarette lighter, front socket	15

1) Different ratings depending on engine and equipment level.

Fuse layout, version B

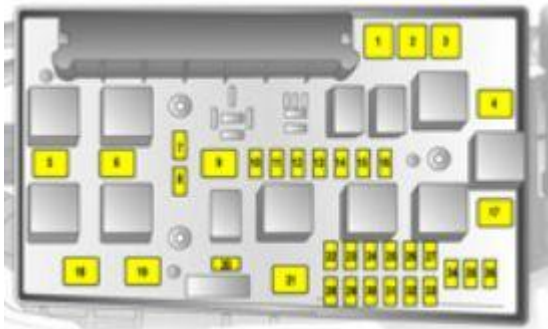

Vauxhall Astra 5th Generation – fuse box –

engine compartment – version B

Number	Circuit	Rating
1	ABS	20
2	ABS	30
3	Interior fan climate control system	30
4	Interior fan, heating or air conditioning system	30
5	Radiator fan 1 1)	30
		40
6	Radiator fan 2 1)	20
		30
		40
7	Windscreen wash system	10
8	Horn	15

9	Headlight wash system	25
10	—	—
11	—	—
12	—	—
13	Front fog lights	15
14	Windscreen wiper	30
15	Windscreen wiper	30
16	Electronics control units, Open&Start system, ABS, brake light switch, TwinTop	5
17	Diesel filter heating	25
18	Starter	25
19	Transmission electronics	30
20	Air conditioning system	10
21	Engine electronics	20
22	Engine electronics	7,5
23	Adaptive Forward Lighting, headlight range adjustment	10

24	Fuel pump	15
25	Transmission electronics	15
26	Engine electronics	10
27	Power steering	5
28	Transmission electronics	5
29	Transmission electronics	7,5
30	Engine electronics	10
31	Adaptive Forward Lighting, headlight range adjustment	10
32	Brake system, air conditioning system, clutch switch	5
33	Adaptive Forward Lighting, headlight range adjustment, light switch	5
34	Control unit, steering column module	7,5
35	Infotainment system	20
36	Mobile telephone, digital radio, Twin Audio, display	7,5

1) Different ratings depending on engine and equipment level.