


Scion xB 2004 – 2007 fuse box diagram

Passenger Compartment

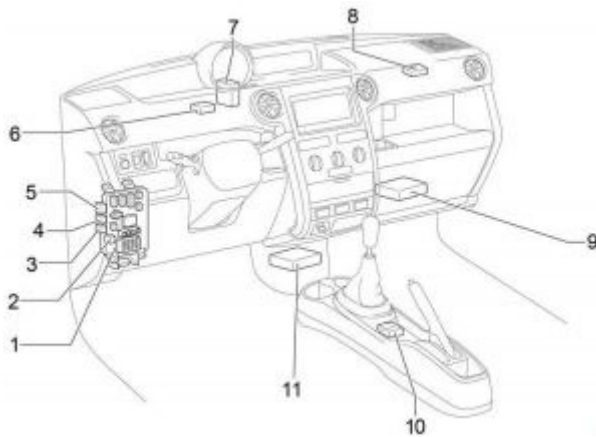


Scion xB – fuse box diagram – passenger

compartment


Number	Description
1	Instrument Panel J/B
2	Fuse Block
3	Front Fog Light Relay
4	Headlight Relay
5	Rear Window Defogger Relay
6	Door Control Receiver
7	Door Lock Control Relay
8	A/C Amplifier
9	Engine Control Module
10	Shift Lock Control SW
11	Airbag Sensor Assembly

Passenger Compartment Fuse Box

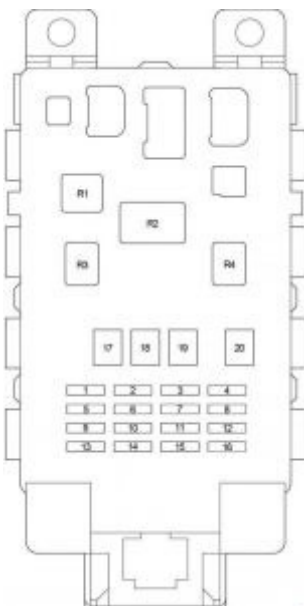

Scion xB – fuse box diagram – passenger compartment fuse box

Fuse	Ampere rating [A]	Circuit
1 GAUGE	10	Back-up lights, charging system, air conditioning system, power window system, gauges of meters
2 —	—	—
3 D/L	25	Power door lock system
4 TAIL	10	Tail lights, parking lights, license plate lights
5 —	—	—
6 WIPER	20	Windshield wipers and washer
7 ECU-B	7,5	SRS airbag system
8 FOG	15	Front fog lights
9 ACC	15	Clock, cigarette lighter
10 ECU-IG	7,5	Anti-lock brake system, electric cooling fan
11 OBD	7,5	On-board diagnosis system
12 HAZ	10	Turn signal lights, emergency flashers
13 A.C	7,5	Air conditioning system
14 —	—	—
15 —	—	—
16 STOP	10	Stop lights, high mounted stop light, anti-lock brake system, shift lock system, multiport fuel injection system/sequential multiport fuel injection system
17 AM1	40	"ACC", "GAUGE", "WIPER", and "ECU-IG" fuses
18 POWER	30	Power windows
19 HTR	40	Air conditioning system
20 DEF	30	Rear window defogger system
Relay		
R1	Air conditioning system	
R2	Flasher	
R3	Power windows	
R4	Circuit Opening Relay	

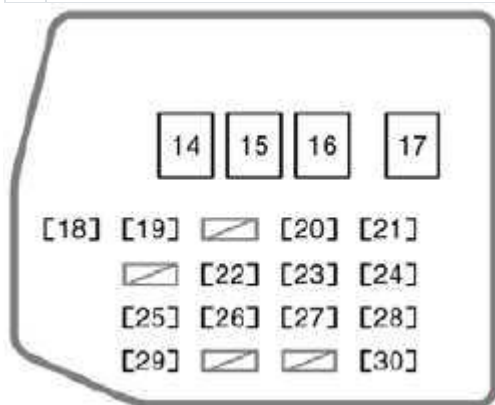


Scion xB – fuse box diagram – passenger compartment

fuse box

Number	Fuse	Ampere rating [A]	Description
18	I/UP	7,5	Rear window defogger system, multiport fuel injection system/ sequential multiport fuel injection system

Engine Compartment

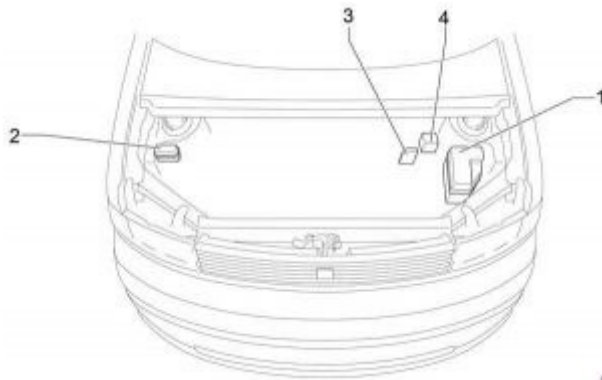


Scion xB – fuse box diagram – engine

compartment

Number	Description
1	Fuse Box
2	Additional Relay Box
3	Fusible Link Block
4	Skid Control ECU with Actuator

Engine Compartment Fuse Box

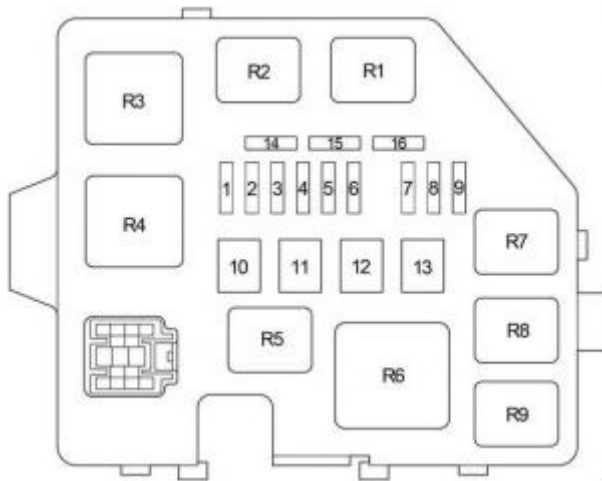


Scion xB – fuse box diagram – engine

compartment fuse box

Fuse	Ampere rating [A]	Circuit
1 DOME	15	Clock, interior light, gauges of meters
2 EFI	15	Multiport fuel injection system/sequential multiport fuel injection system
3 HORN	15	Horn


4	AM2	15	Starter system, SRS airbag system, multiport fuel injection system/sequential multiport fuel injection system, discharge warning system
5	ST	30	Starter system
6	—	—	—
7	H-LP LH H-LP LO LH	10	Left-hand headlight
8	H-LP RH H-LP LO RH	10	Right-hand headlight
9	A/C2	7,5	Air conditioning system
10	—	—	—
11	RDI	30	Electric cooling fan
12	HTR SUB1	50	Air conditioning system
13	ABS NO.1	40	Anti-lock brake system
14	SPARE	30	Spare
15	SPARE	15	Spare
16	—	—	—
Relay			
R1	Electric cooling fan (No.1)		
R2	Electric cooling fan (No.2)		
R3	Starter		
R4	—		
R5	—		
R6	Heater (A/C)		
R7	EFI		
R8	—		
R9	Horn		
Fusible Link Block			

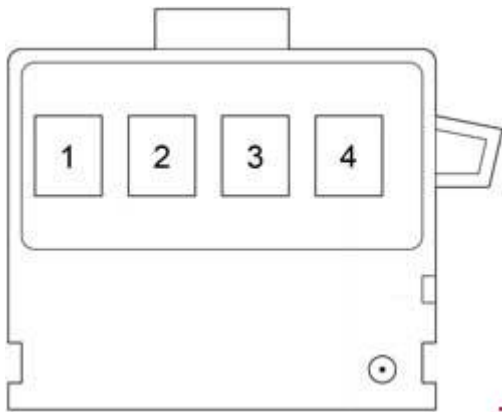

.Scion xB – fuse box diagram – fusible link block

Number	Fuse	Ampere rating [A]	Description
1	—	—	—
2	MAIN	60	ABS, TRAC and VSC Charging Combination Meter Electronically Controlled Transmission and A/T Indicator Engine Control Seat Belt Warning (From Dec. 2005 Production) SRS Starting and Ignition
3	ALT	120	ABS, TRAC and VSC Charging
4	ABS	60	ABS, TRAC and VSC

Additional Relay Box

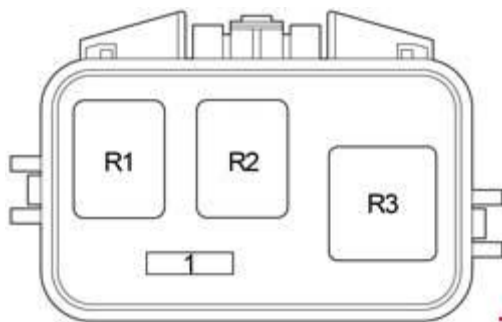

.Scion xB – fuse box diagram – additional relay box

Number	Fuse	Ampere rating [A]	Description
1	—	—	—
Relay			
R1	—		
R2	ABS		
R3	ABS		