



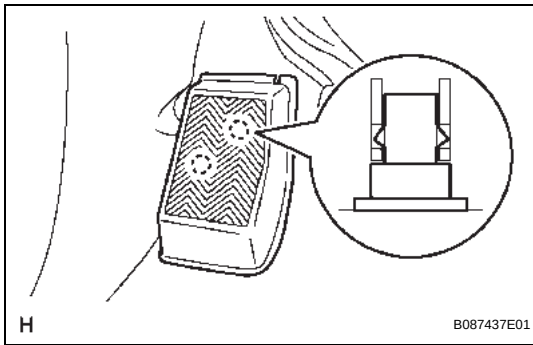

FRONT FLOOR FOOTREST

REMOVAL

1. **REMOVE FRONT FLOOR FOOTREST**
 - (a) Disengage the 2 clips and remove the front floor footrest.


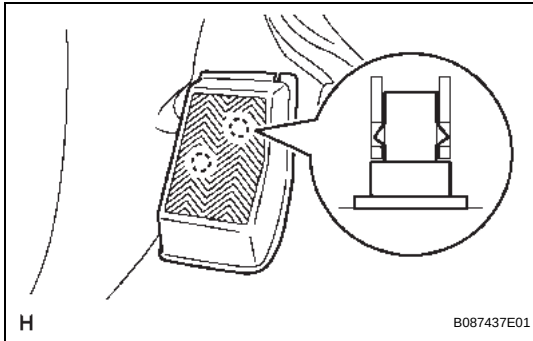



INSTALLATION

1. **INSTALL FRONT FLOOR FOOTREST**
 - (a) Engage the 2 clips and install the front floor footrest.

ROOF HEADLINING (for Double Cab)


COMPONENTS

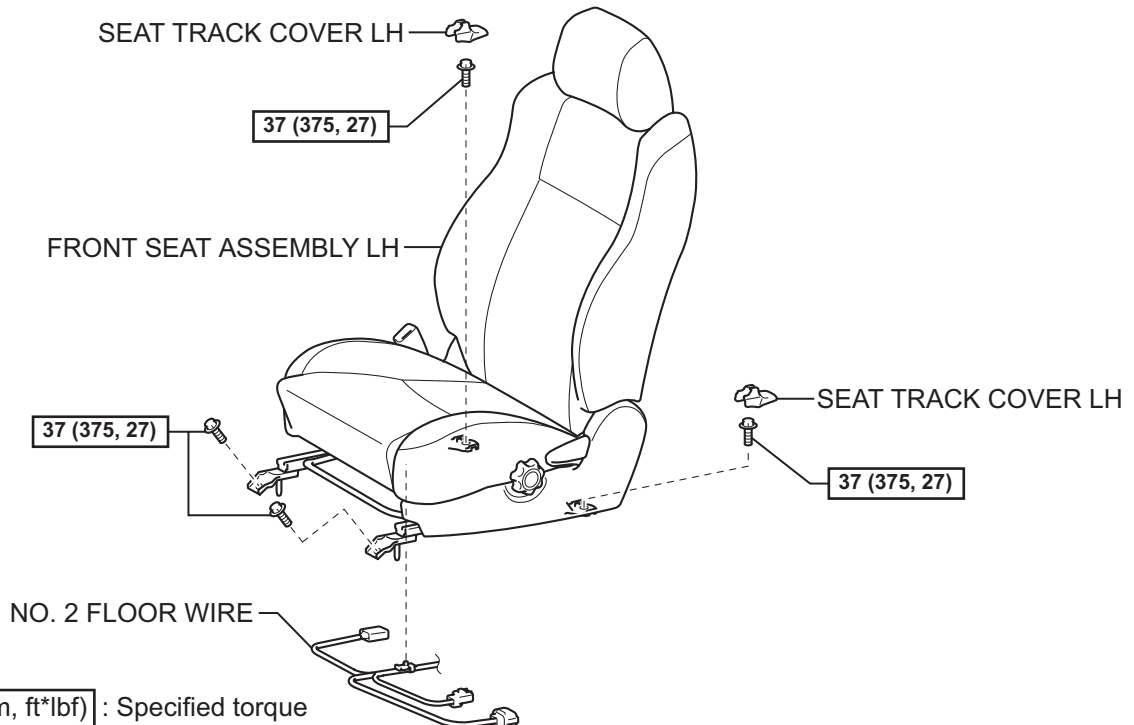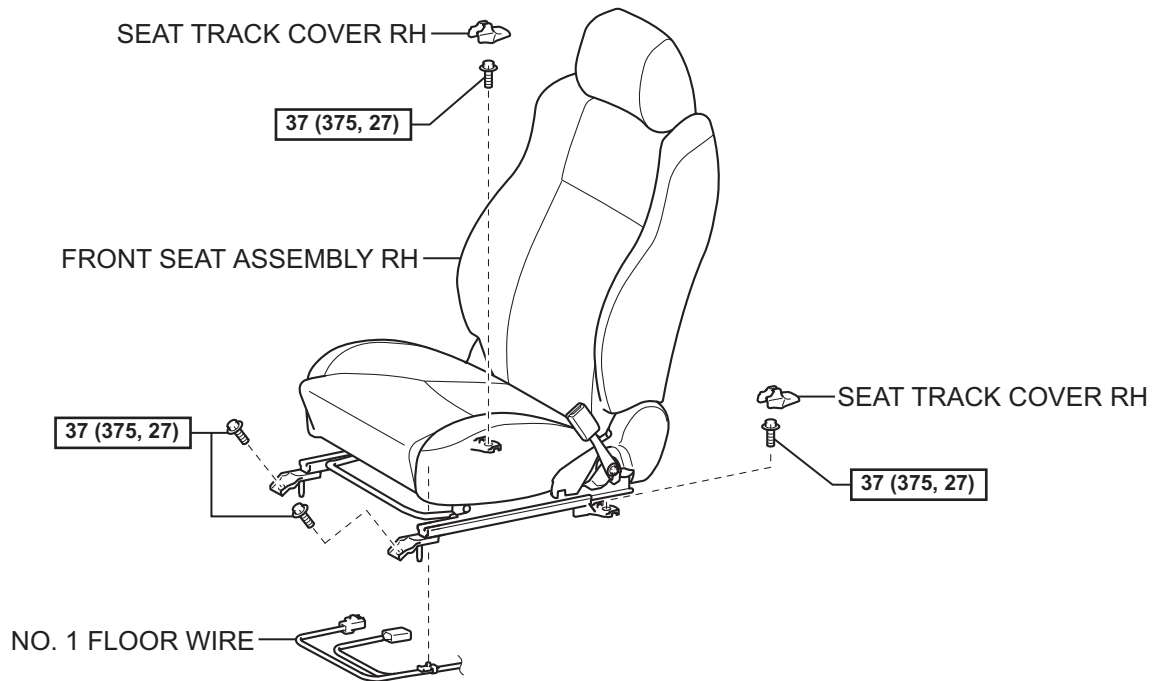

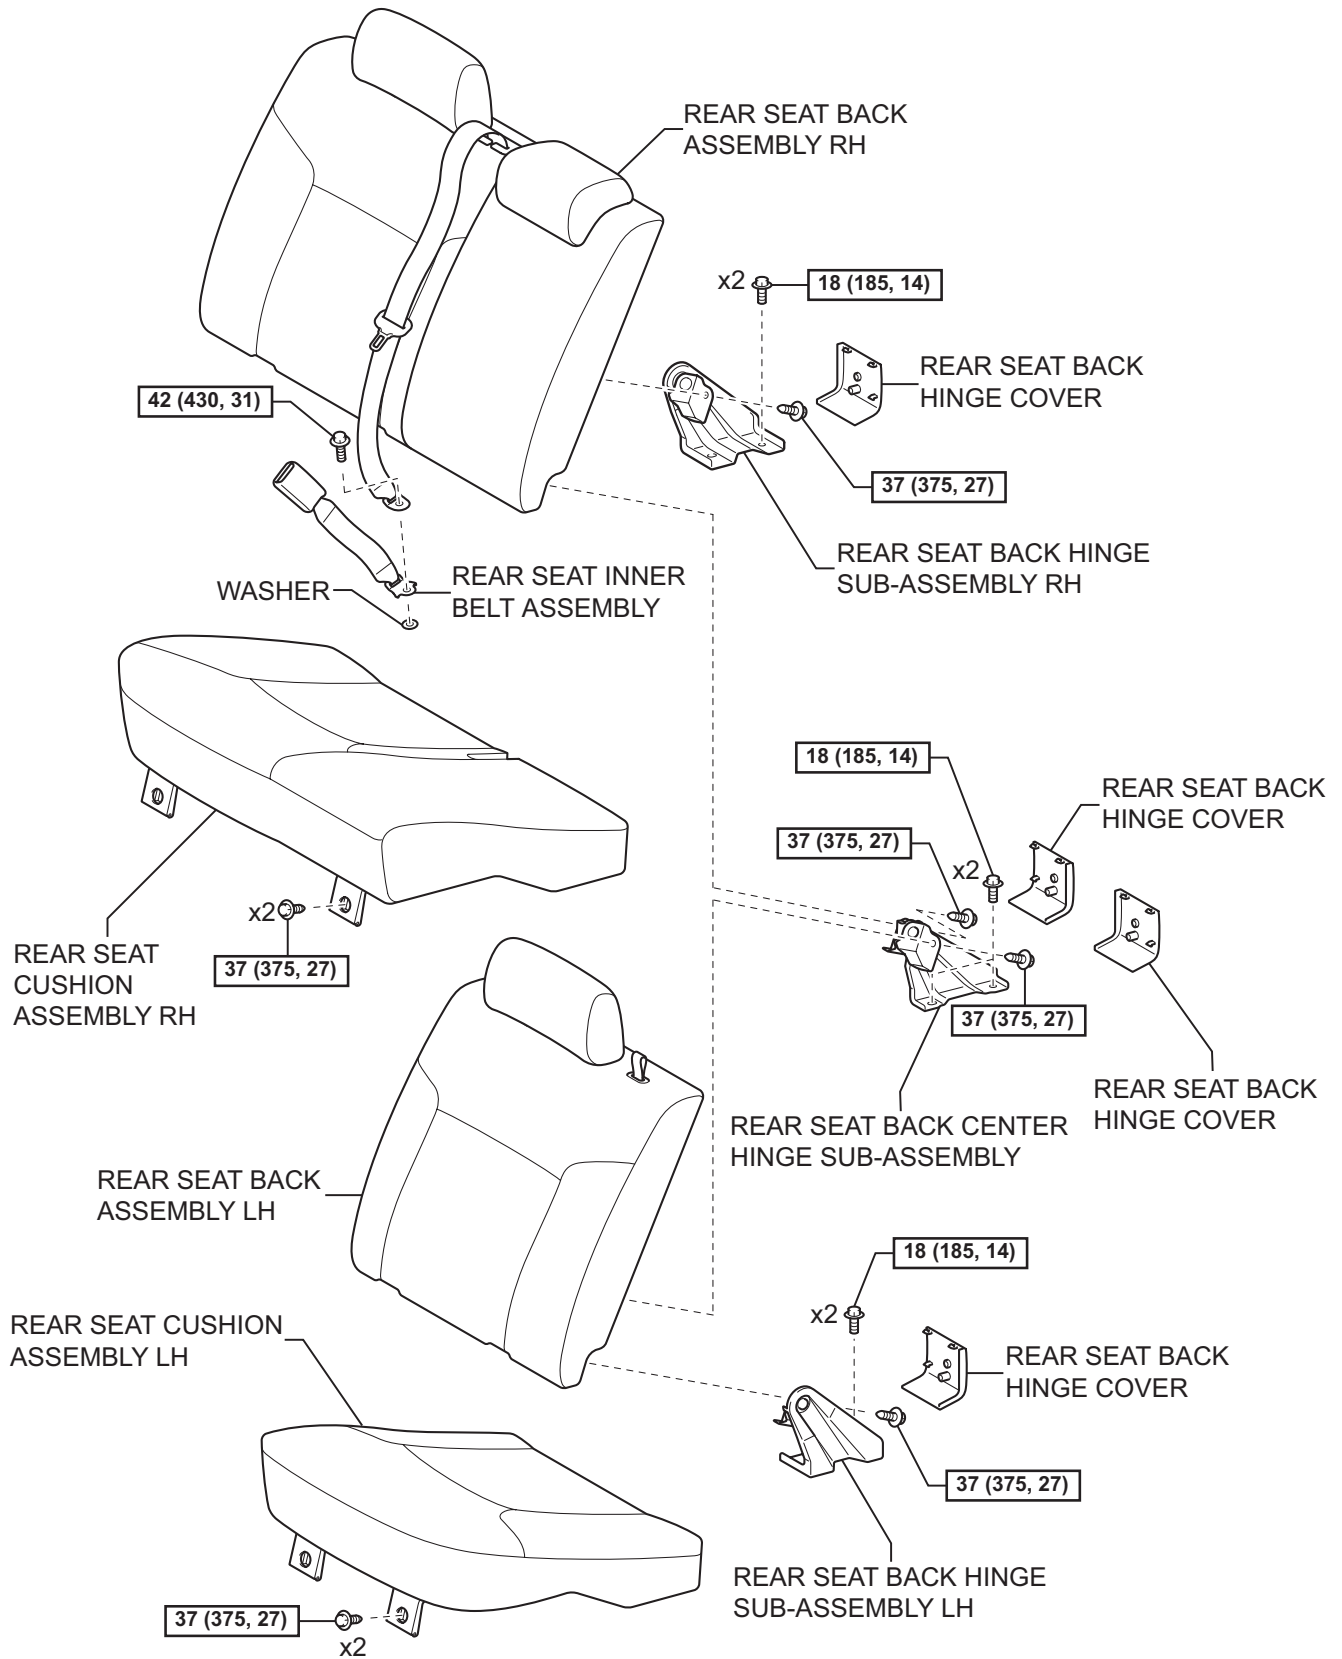



N*m (kgf*cm, ft*lb) : Specified torque

IR

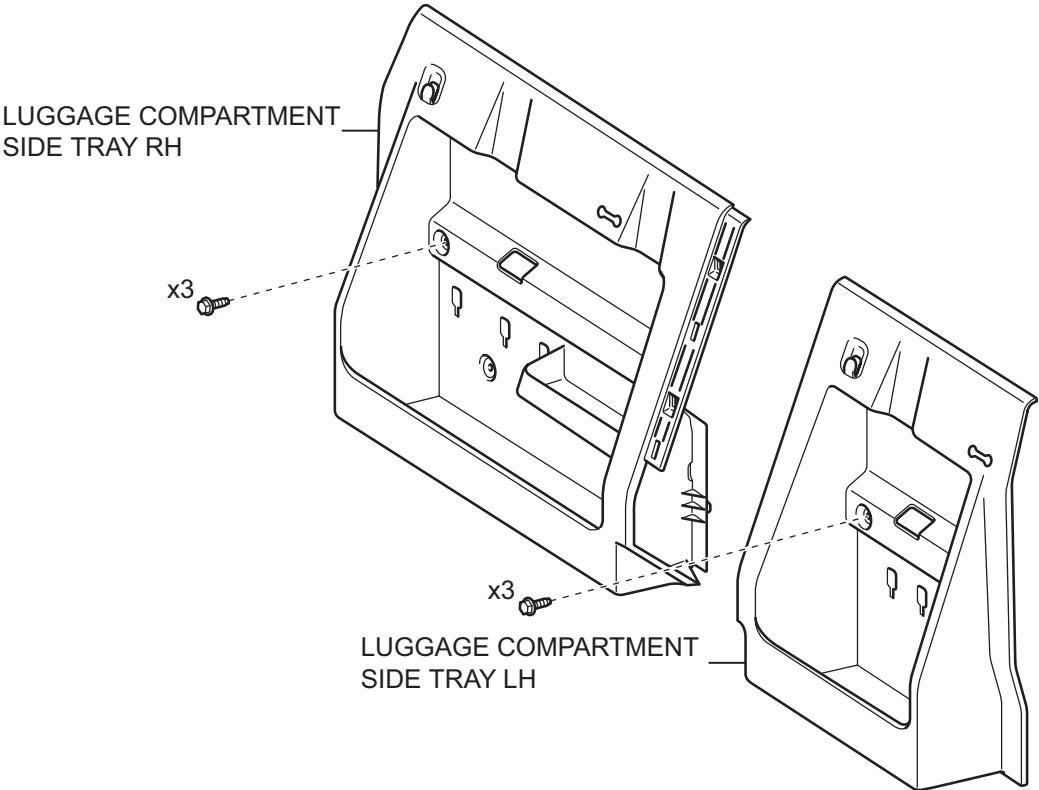


w/ Woofer:

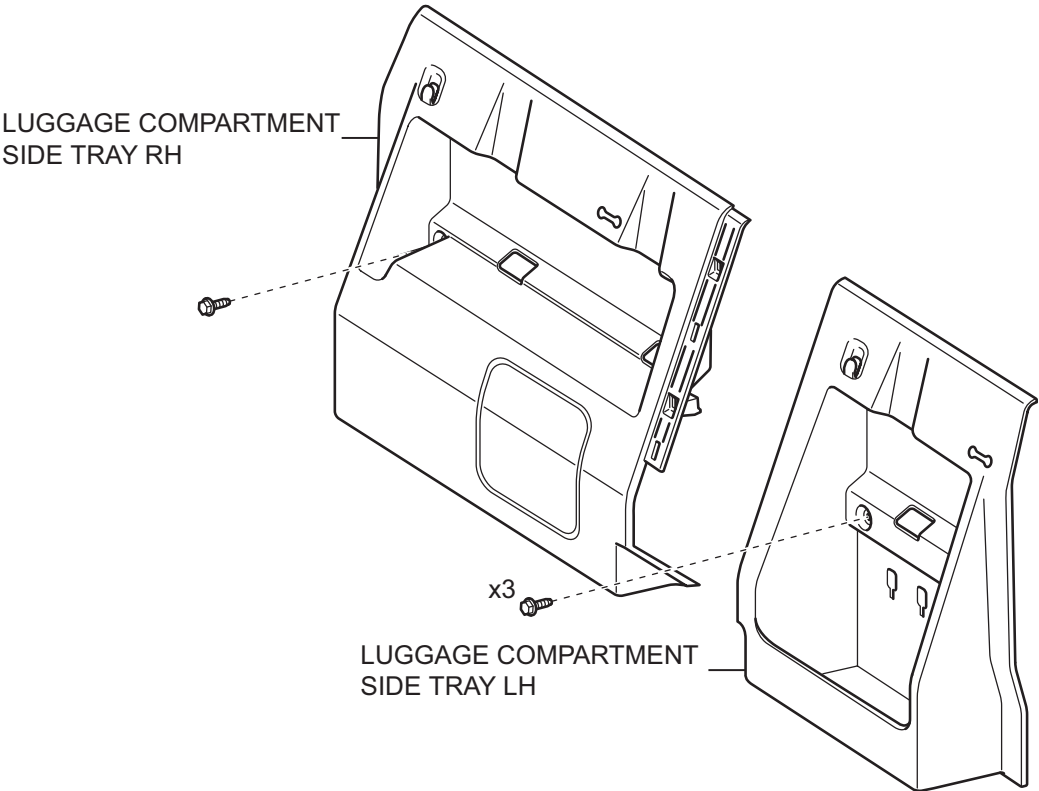


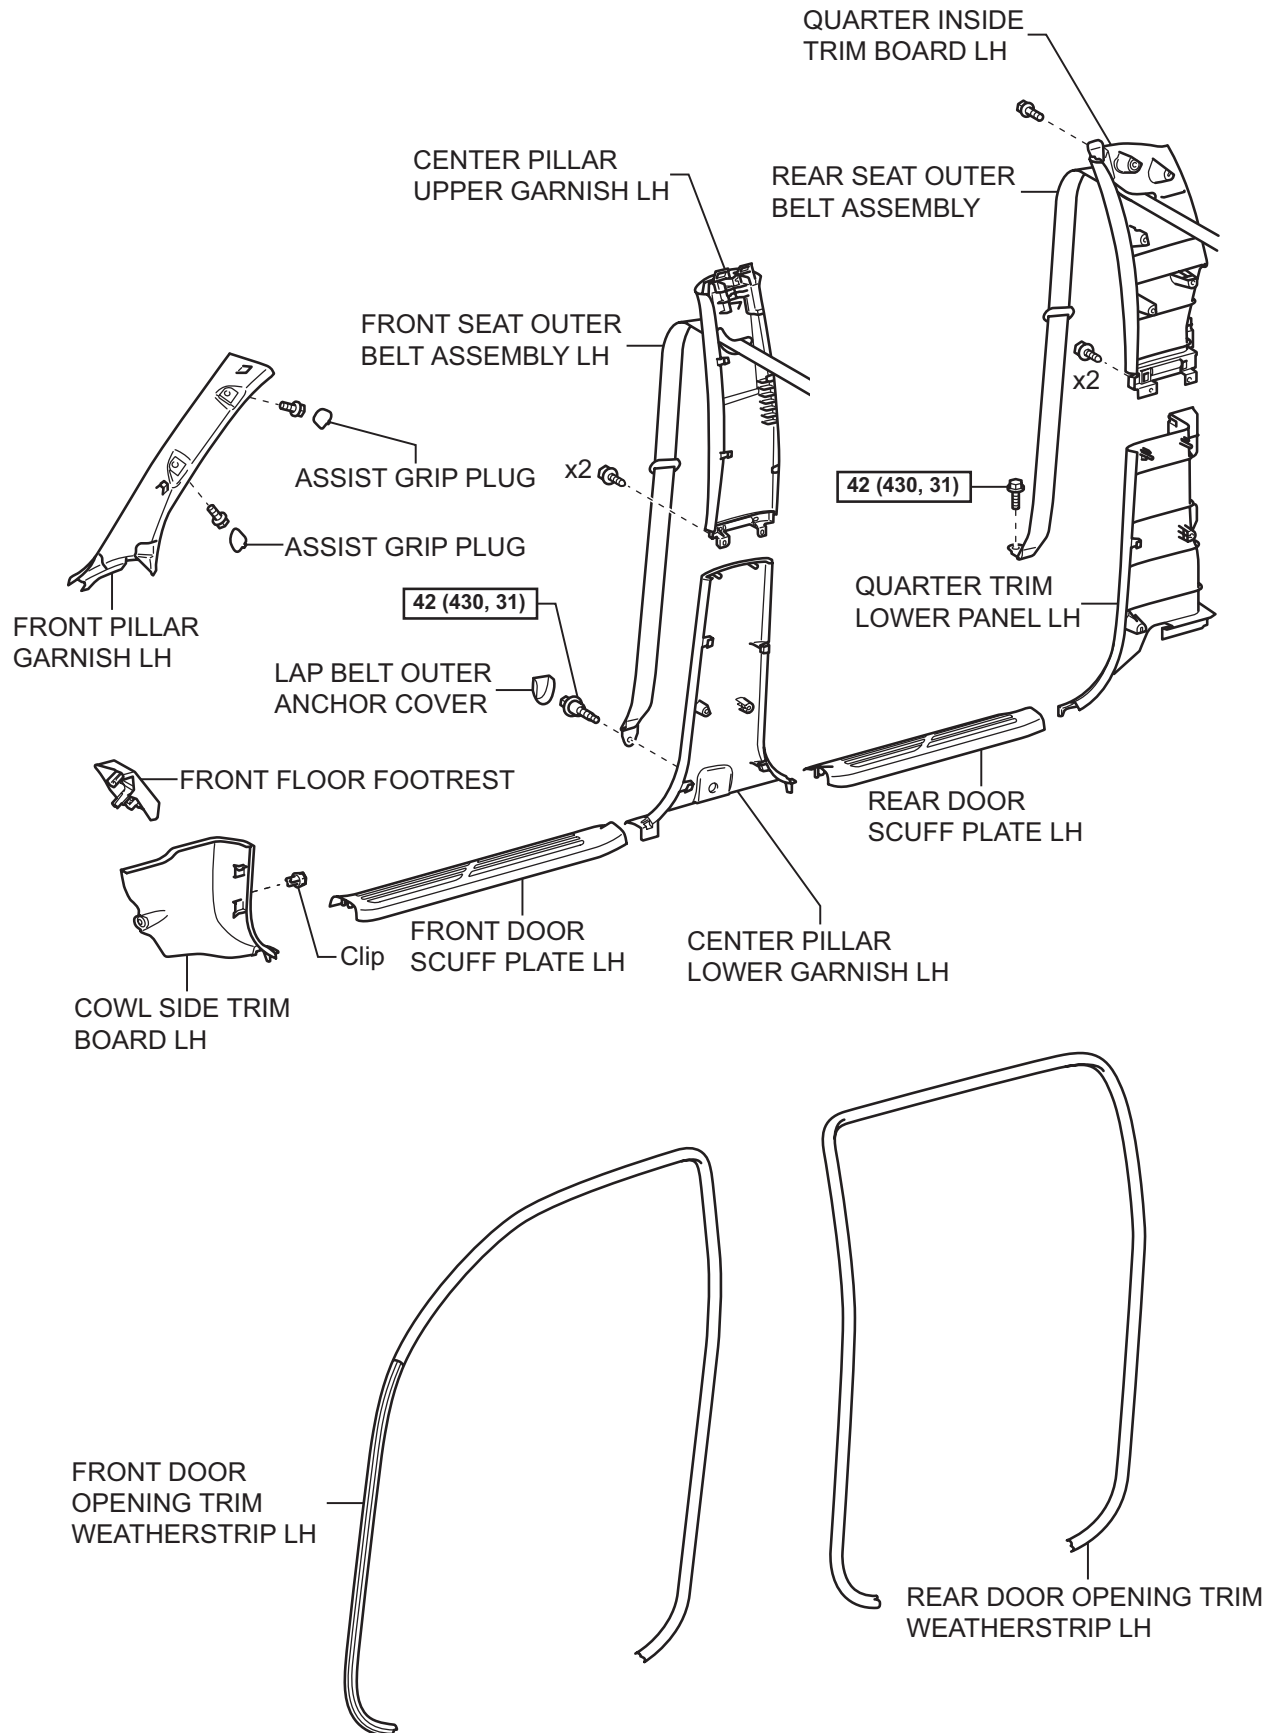


N*m (kgf*cm, ft*lb) : Specified torque






 

IR



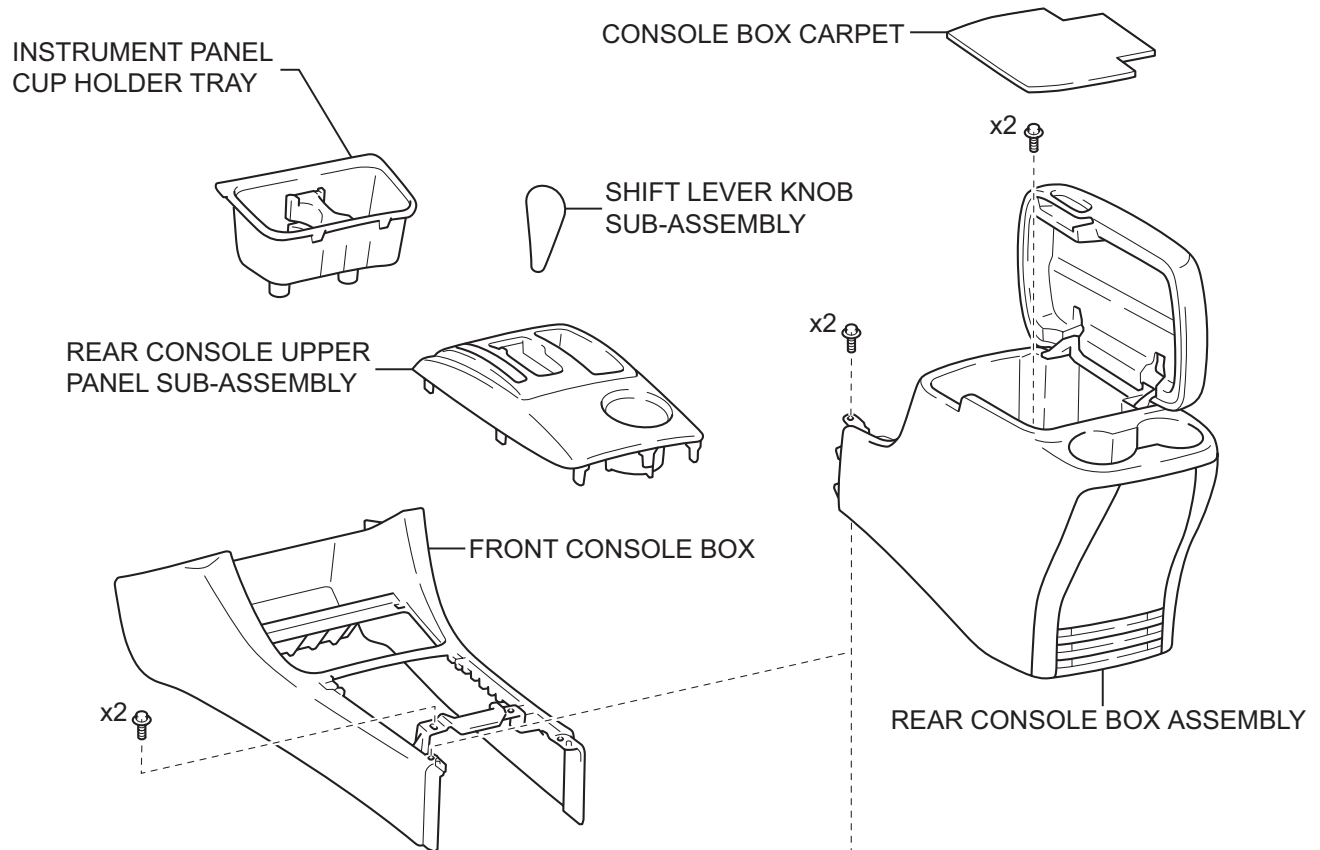


for Manual Transmission:

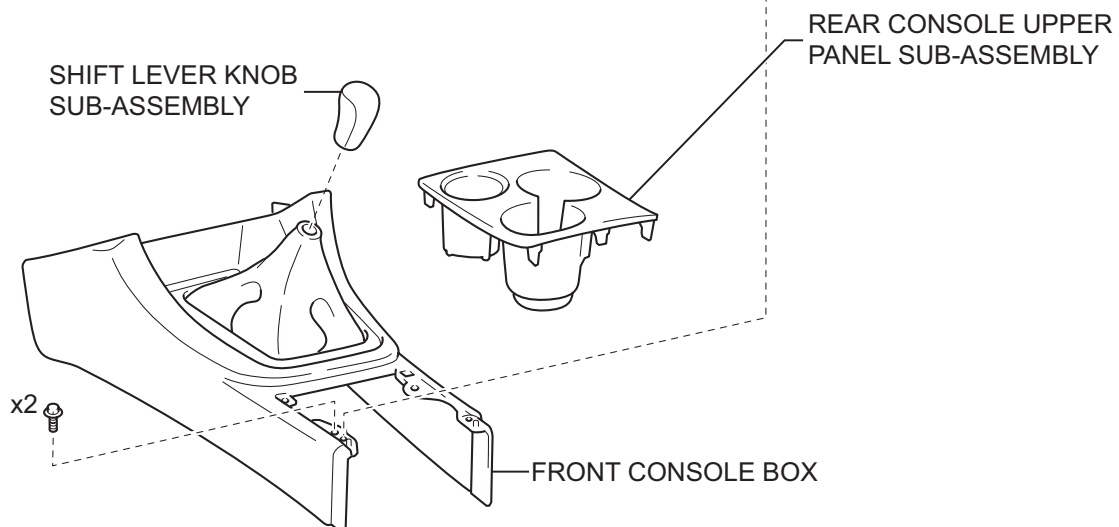

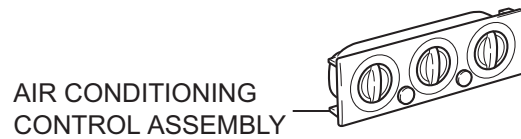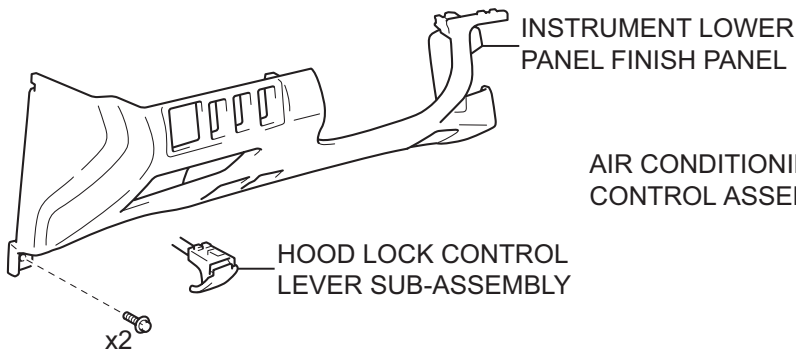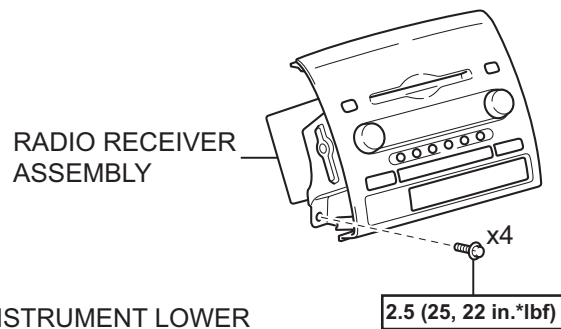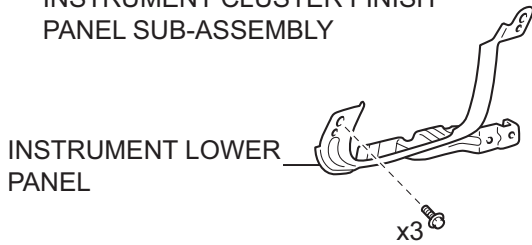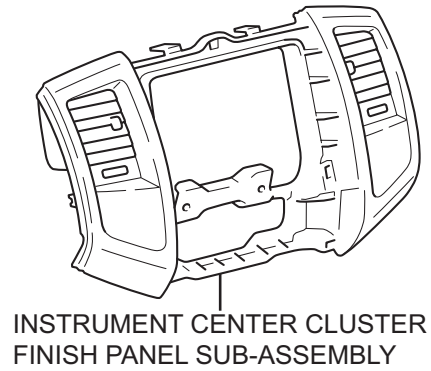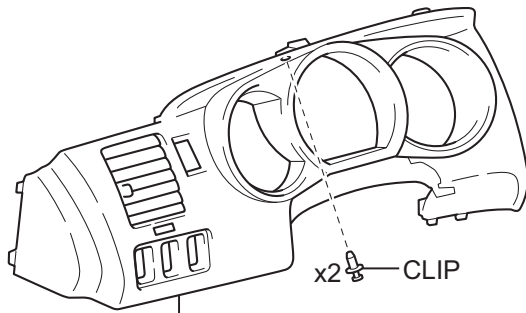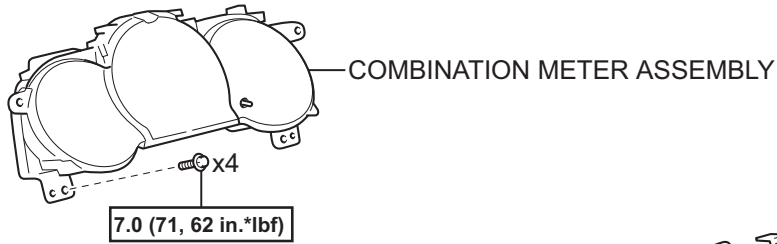


for Pedal Type Parking Brake:

 

for Lever Type Parking Brake:




N*m (kgf*cm, ft*lbf) : Specified torque

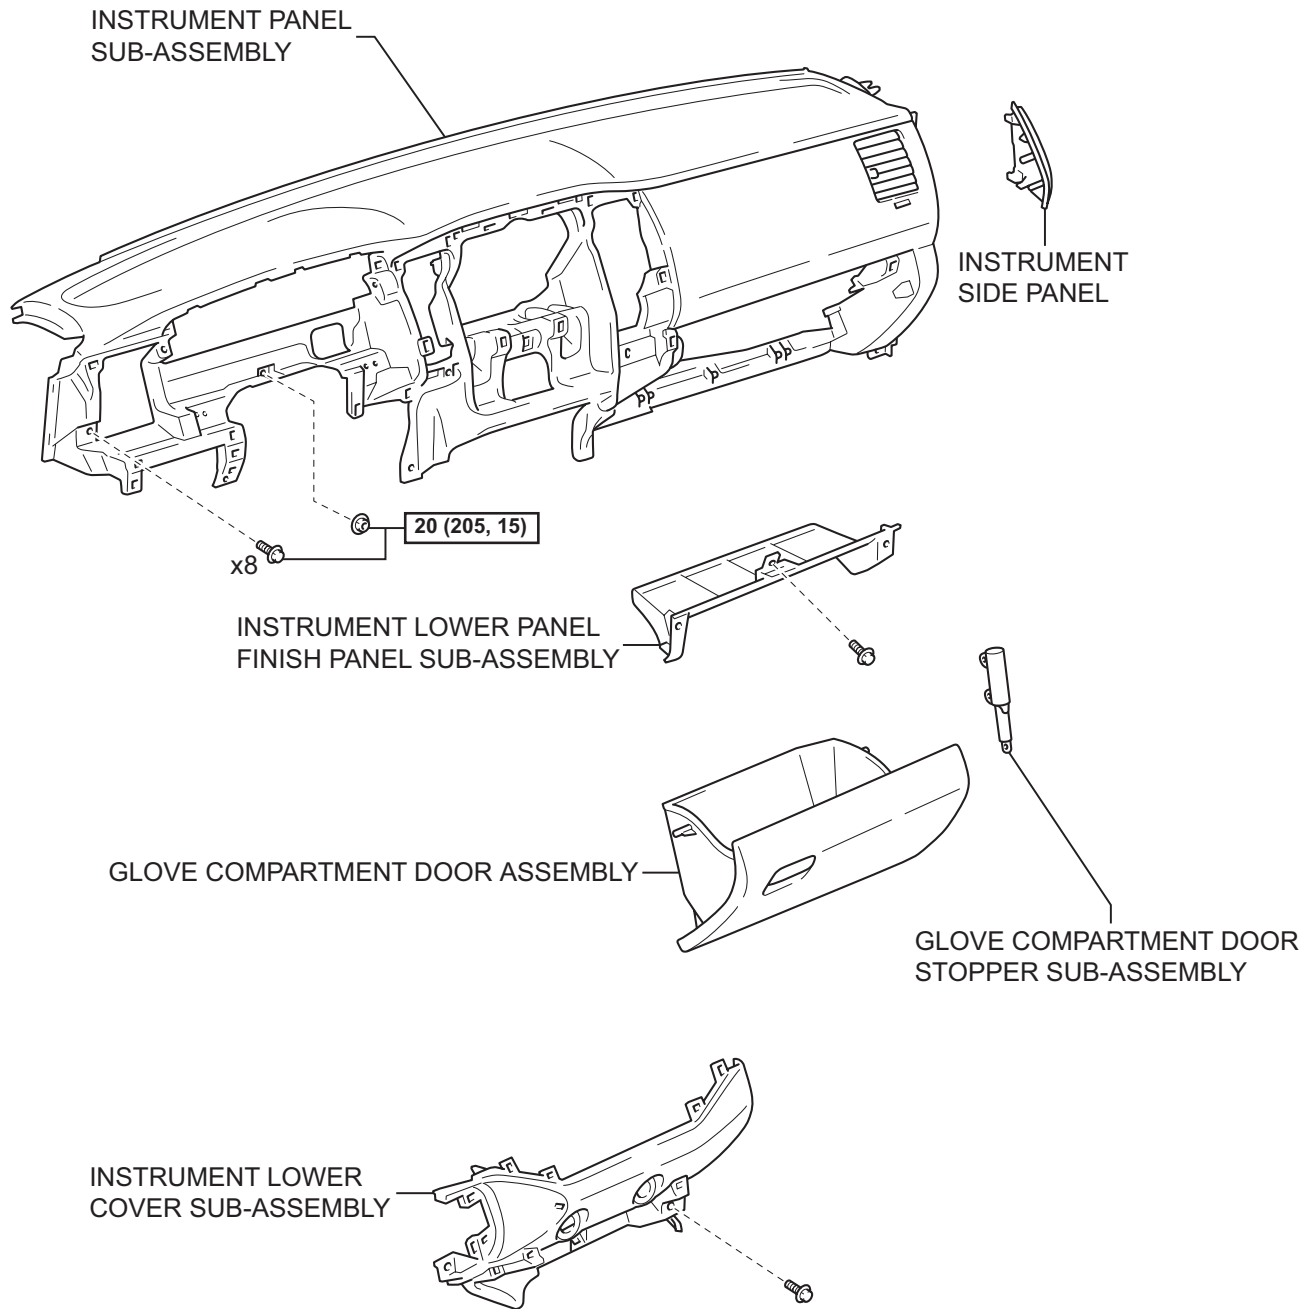

N*m (kgf*cm, ft*lbf) : Specified torque

IR

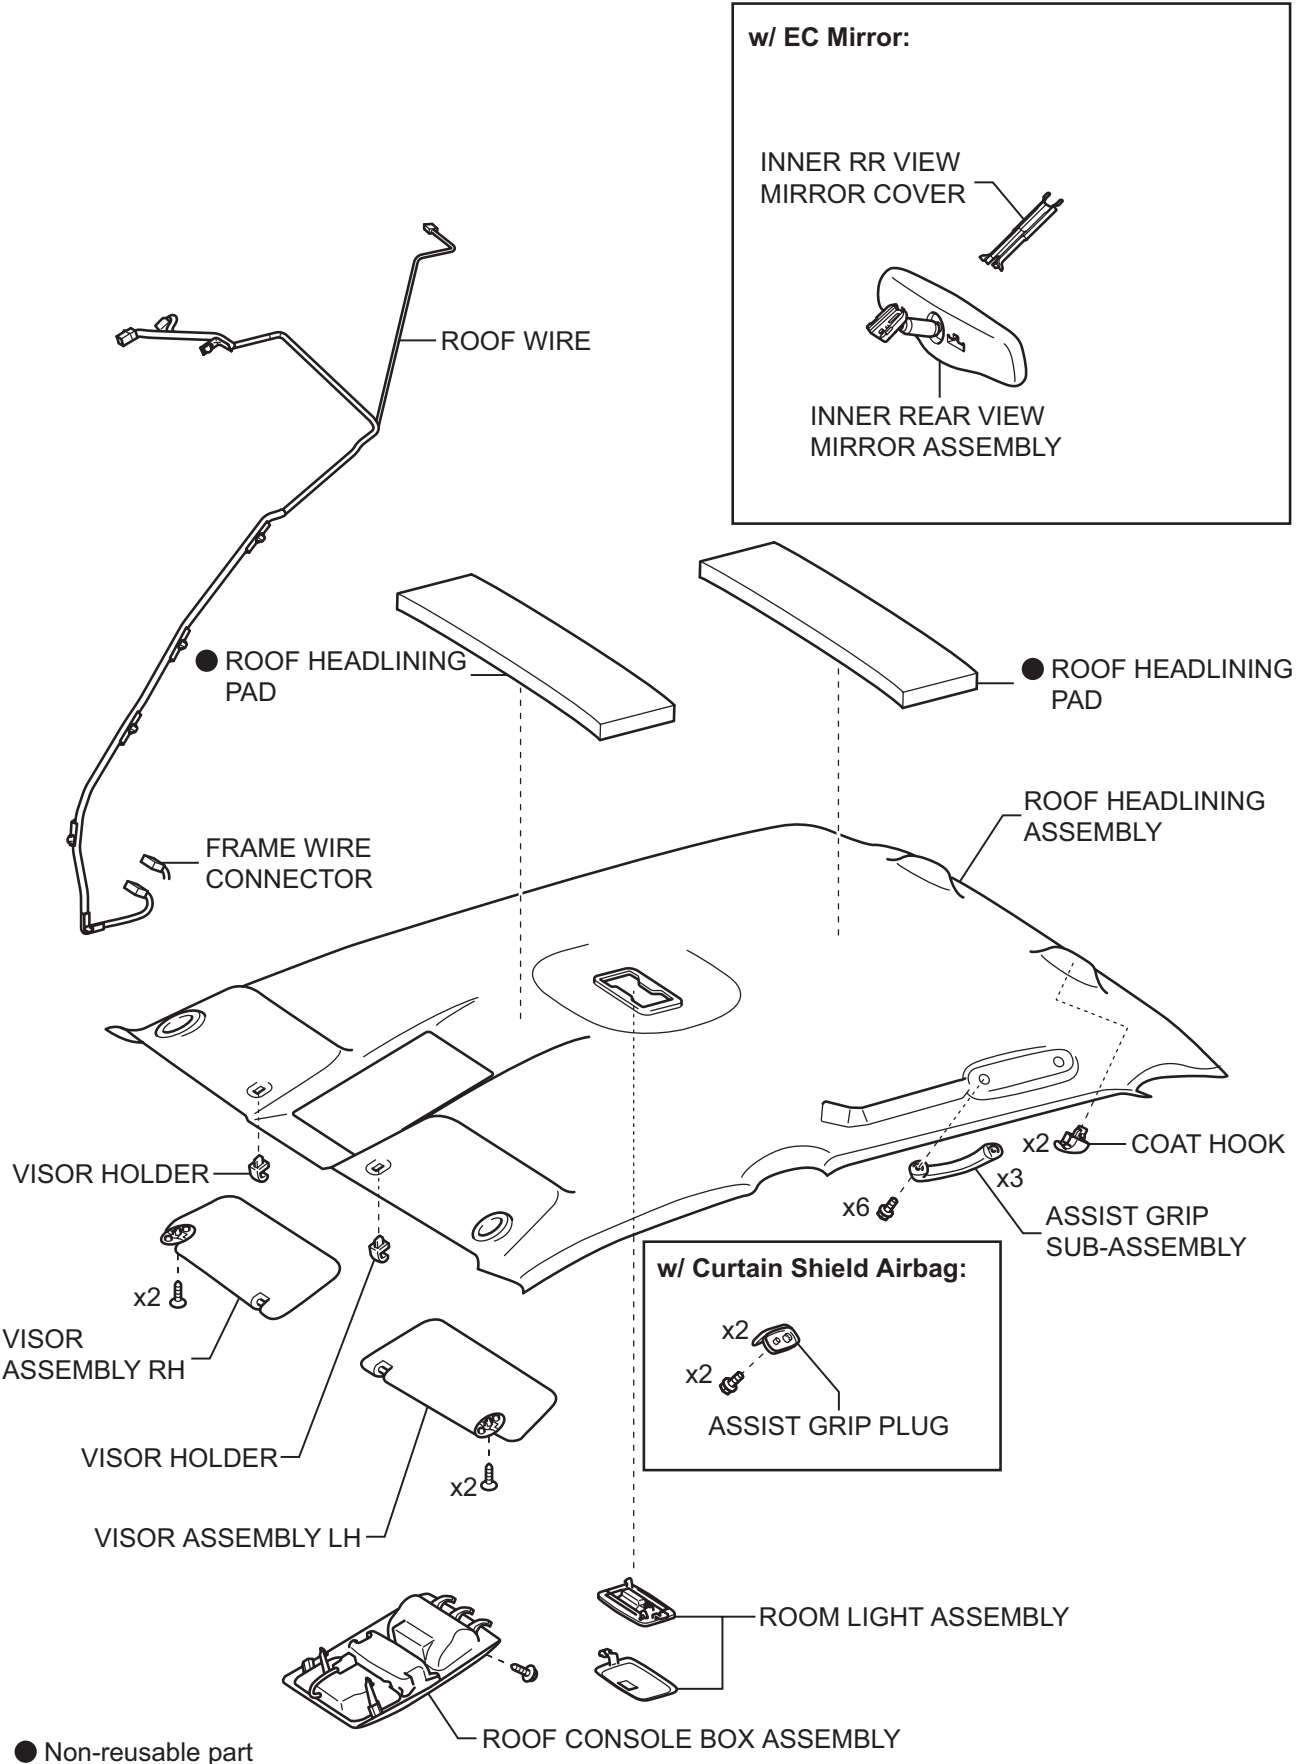

REMOVAL

CAUTION:


Some of these service operations affect the SRS airbag system. Read the precautionary notices concerning the SRS airbag system before servicing (See page [RS-1](#)).

1. DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL



Wait for at least 90 seconds after disconnecting the cable to prevent the airbag from working.

2. REMOVE INNER REAR VIEW MIRROR ASSEMBLY (w/ EC Mirror)

- (a) Disconnect the EC mirror connector.
- (b) Slide the inner rear view mirror cover.

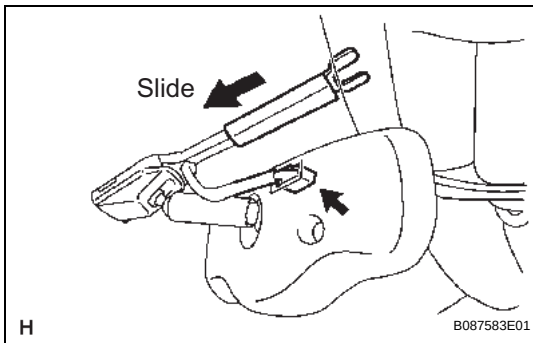

- (c) Slide the inner rear view mirror.

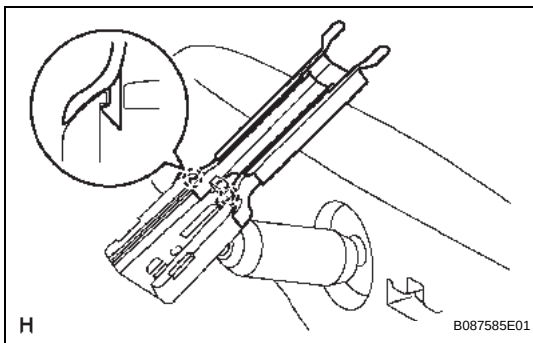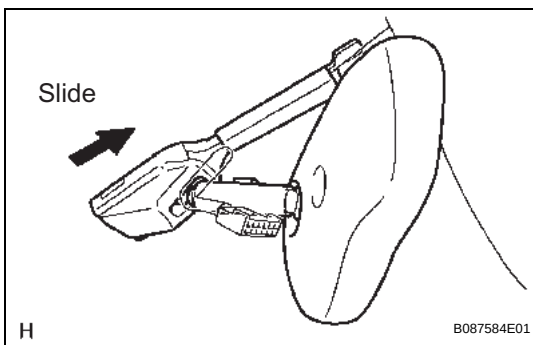

- (d) Disengage the 2 claws and remove the inner rear view mirror cover.

3. REMOVE SEAT TRACK COVER LH (See page [SE-23](#))

4. REMOVE SEAT TRACK COVER RH

- (a) for Separate Folding Seat Type:
 - (1) Remove the seat track cover RH (See page [SE-5](#)).
- (b) for Separate Seat Type Front Passenger Side:
 - (1) Remove the seat track cover RH (See page [SE-38](#)).

5. REMOVE FRONT SEAT ASSEMBLY LH (See page [SE-23](#))

6. REMOVE FRONT SEAT ASSEMBLY RH

- (a) for Separate Folding Seat Type:
 - (1) Remove the front seat assembly RH (See page [SE-5](#)).
- (b) for Separate Seat Type Front Passenger Side:
 - (1) Remove the front seat assembly RH (See page [SE-38](#)).

7. **REMOVE REAR SEAT CUSHION ASSEMBLY LH** (See page [SE-71](#))
8. **REMOVE REAR SEAT CUSHION ASSEMBLY RH** (See page [SE-82](#))
9. **REMOVE REAR SEAT BACK HINGE COVER**
 - (a) for LH Side:
 - (1) Remove the rear seat back hinge cover (See page [SE-71](#)).
 - (b) for RH Side:
 - (1) Remove the rear seat back hinge cover (See page [SE-82](#)).
10. **REMOVE REAR SEAT BACK ASSEMBLY LH** (See page [SE-71](#))
11. **REMOVE REAR SEAT BACK ASSEMBLY RH** (See page [SE-82](#))
12. **REMOVE REAR SEAT BACK HINGE SUB-ASSEMBLY LH** (See page [SE-71](#))
13. **REMOVE REAR SEAT BACK HINGE SUB-ASSEMBLY RH**


HINT:
Follow the same procedures as for the rear seat back hinge sub-assembly LH.

14. **REMOVE FRONT FLOOR FOOTREST** (See page [IR-1](#))

15. **REMOVE FRONT DOOR SCUFF PLATE LH**
 - (a) Disengage the 9 claws and remove the front door scuff plate.

16. **REMOVE FRONT DOOR SCUFF PLATE RH**


HINT:
Follow the same procedures as for the front door scuff plate LH.

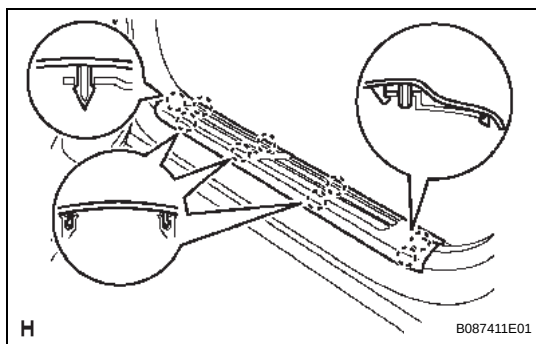


17. **REMOVE COWL SIDE TRIM BOARD LH**
 - (a) Remove the clip.
 - (b) Disengage the 2 clips and remove the cowl side trim board.

18. **REMOVE COWL SIDE TRIM BOARD RH**

HINT:
Follow the same procedures as for the cowl side trim board LH.

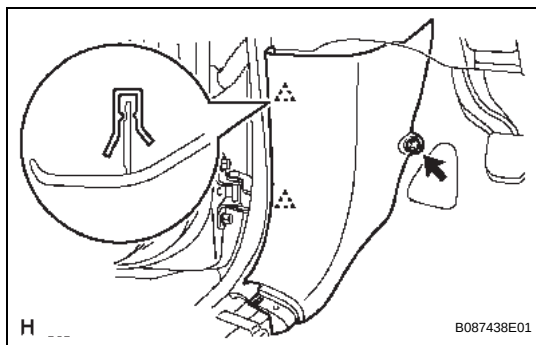

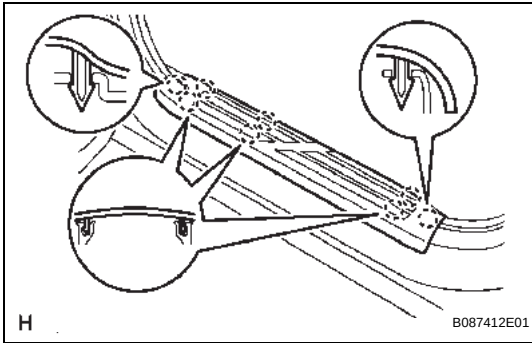


19. REMOVE REAR DOOR SCUFF PLATE LH

- (a) Disengage the 8 claws and remove the rear door scuff plate.

20. REMOVE REAR DOOR SCUFF PLATE RH

HINT:

Follow the same procedures as for the rear door scuff plate LH.

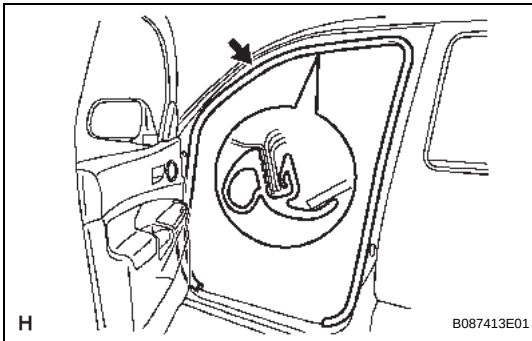


21. REMOVE FRONT DOOR OPENING TRIM WEATHERSTRIP LH

- (a) Remove the front door opening trim weatherstrip.

22. REMOVE FRONT DOOR OPENING TRIM WEATHERSTRIP RH

HINT:

Follow the same procedures as for the front door opening trim weatherstrip LH.

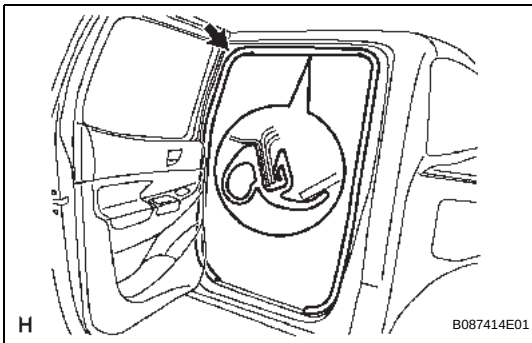


23. REMOVE REAR DOOR OPENING TRIM WEATHERSTRIP LH

- (a) Remove the rear door opening trim weatherstrip.

24. REMOVE REAR DOOR OPENING TRIM WEATHERSTRIP RH

HINT:

Follow the same procedures as for the rear door opening trim weatherstrip LH.

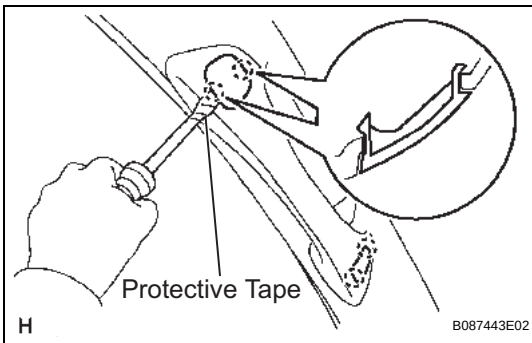


25. REMOVE FRONT PILLAR GARNISH LH

- (a) Using a screwdriver with its tip taped in protective tape, disengage the 2 claws and remove the assist grip plug.


HINT:

Follow the same procedures as for the opposite side.

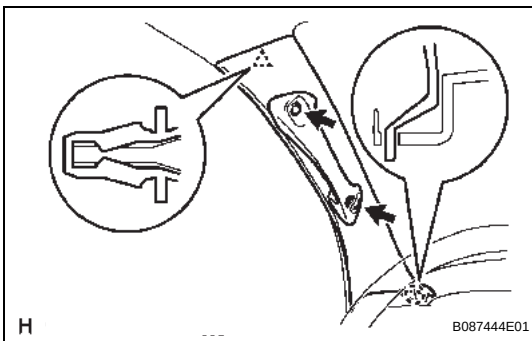


- (b) Remove the 2 screws.

- (c) Disengage the clip and claw and remove the front pillar garnish.

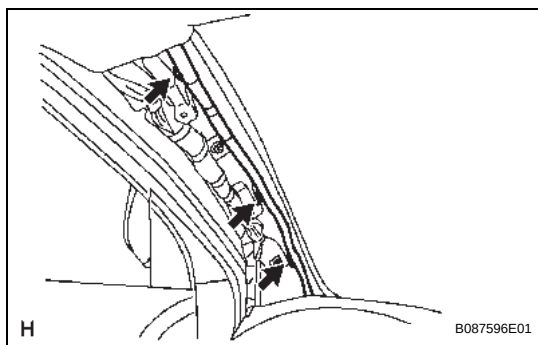

- (d) for LH side:
- (1) Using a clip remover, remove the 3 wire harness clamps.

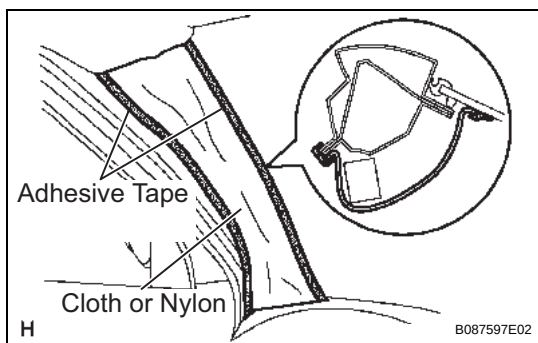

- (e) w/ Curtain Shield Airbag:

NOTICE:

Cover the curtain shield airbag with the protective cover as soon as the front pillar garnish is removed.

- (1) Thoroughly cover the air bag with cloth or nylon of 700 mm (27.56 in.) x 120 mm (4.72 in.) and fix the ends of the cover with adhesive tape, as shown in the illustration.

26. REMOVE FRONT PILLAR GARNISH RH

HINT:

Follow the same procedures as for the front pillar garnish LH.

27. REMOVE INSTRUMENT PANEL UNDER TRAY (for Pedal Type Parking Brake) (See page [IP-9](#))

28. REMOVE INSTRUMENT PANEL HOLE COVER (for Lever Type Parking Brake) (See page [IP-9](#))

29. REMOVE REAR CONSOLE UPPER PANEL SUB-ASSEMBLY

- (a) for Automatic Transmission:
 - (1) Remove the rear console upper panel sub-assembly (See page [IP-9](#)).
- (b) for Manual Transmission:
 - (1) Remove the rear console upper panel sub-assembly (See page [IP-9](#)).

30. REMOVE REAR CONSOLE BOX ASSEMBLY (See page [IP-10](#))



31. REMOVE INSTRUMENT PANEL CUP HOLDER TRAY (for Automatic Transmission) (See page [IP-10](#))

32. REMOVE FRONT CONSOLE BOX


- (a) for Automatic Transmission:
 - (1) Remove the front console box (See page [IP-10](#)).
- (b) for Manual Transmission:
 - (1) Remove the front console box (See page [IP-11](#)).

33. REMOVE AIR CONDITIONING CONTROL ASSEMBLY (See page [IP-12](#))

34. REMOVE RADIO RECEIVER ASSEMBLY (See page [AV-69](#))
35. DISCONNECT HOOD LOCK CONTROL LEVER SUB-ASSEMBLY (See page [ED-3](#))
36. REMOVE INSTRUMENT LOWER PANEL FINISH PANEL (See page [IP-12](#))
37. REMOVE INSTRUMENT CLUSTER FINISH PANEL SUB-ASSEMBLY (See page [IP-12](#))
38. REMOVE COMBINATION METER ASSEMBLY (See page [IP-13](#))
39. REMOVE INSTRUMENT CENTER CLUSTER FINISH PANEL SUB-ASSEMBLY (See page [IP-13](#))
40. REMOVE GLOVE COMPARTMENT DOOR ASSEMBLY (See page [IP-13](#))
41. REMOVE INSTRUMENT LOWER PANEL FINISH PANEL SUB-ASSEMBLY (See page [IP-14](#))
42. REMOVE INSTRUMENT LOWER PANEL (See page [IP-14](#))
43. REMOVE INSTRUMENT LOWER COVER SUB-ASSEMBLY (See page [IP-14](#))
44. REMOVE INSTRUMENT SIDE PANEL (See page [IP-14](#))
45. DISCONNECT PASSENGER AIRBAG CONNECTOR (See page [RS-576](#))
46. REMOVE INSTRUMENT PANEL SUB-ASSEMBLY (See page [IP-14](#))
47. REMOVE LAP BELT OUTER ANCHOR COVER
HINT:
Follow the same procedures as for the opposite side.
(a) Disengage the 3 claws and remove the lap belt outer anchor cover.

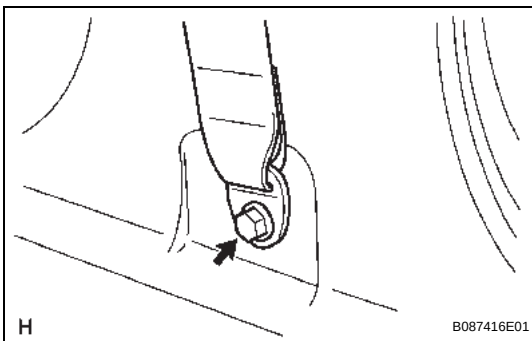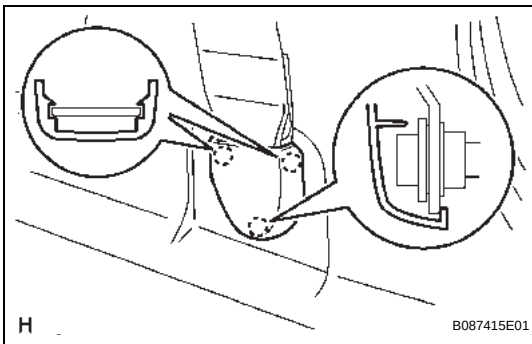

48. REMOVE CENTER PILLAR LOWER GARNISH LH
(a) Remove the bolt and floor anchor of the front seat outer belt.

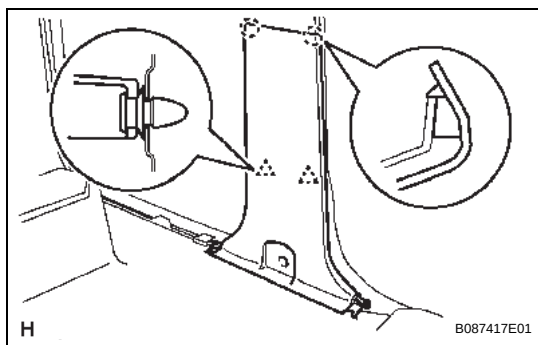


- (b) Disengage the 2 claws and 2 clips, and remove the center pillar lower garnish.

49. REMOVE CENTER PILLAR LOWER GARNISH RH

HINT:

Follow the same procedures as for the center pillar lower garnish LH.

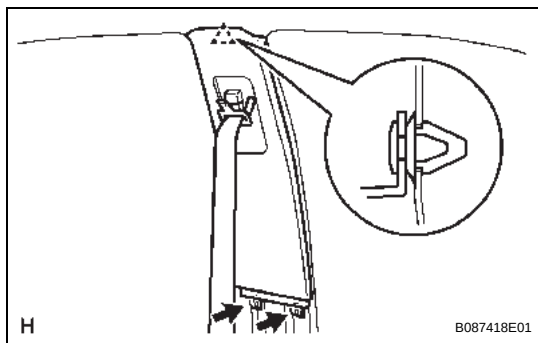

50. REMOVE CENTER PILLAR UPPER GARNISH LH


- (a) Remove the 2 screws.

- (b) Disengage the clip and remove the center pillar upper garnish.

51. REMOVE CENTER PILLAR UPPER GARNISH RH

HINT:

Follow the same procedures as for the center pillar upper garnish LH.

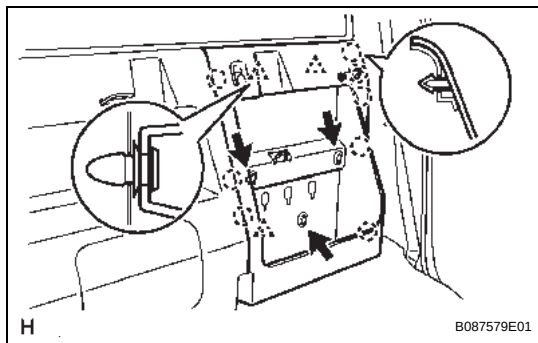


52. REMOVE LUGGAGE COMPARTMENT SIDE TRAY LH

- (a) Remove the 3 bolts.

- (b) Disengage the 8 claws and 3 clips, and remove the luggage compartment side tray.

53. REMOVE REAR SEAT BACK CENTER HINGE SUB-ASSEMBLY (See page [SE-71](#))

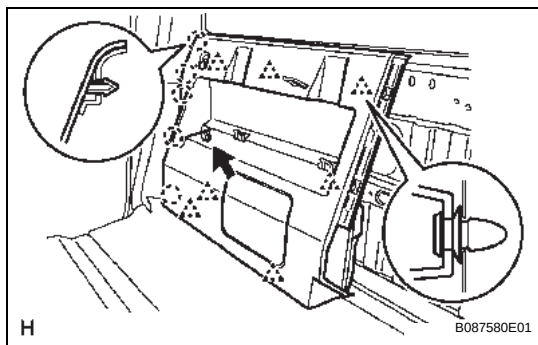

54. REMOVE LUGGAGE COMPARTMENT SIDE TRAY RH

- (a) w/ Woofer:


- (1) Remove the bolt.


- (2) Disengage the 5 claws and 7 clips, and remove the luggage compartment side tray.

- (b) w/o Woofer:

- (1) Remove the 3 bolts.

- (2) Disengage the 5 claws and 5 clips, and remove the luggage compartment side tray.

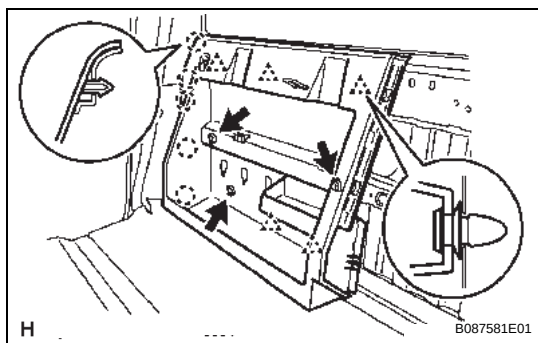

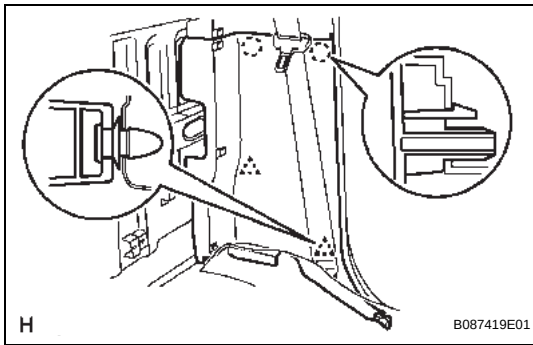


55. REMOVE QUARTER TRIM LOWER PANEL LH

- (a) Disengage the 2 claws and 2 clips, and remove the quarter trim lower panel.

56. REMOVE QUARTER TRIM LOWER PANEL RH

HINT:

Follow the same procedures as for the quarter trim lower panel LH.

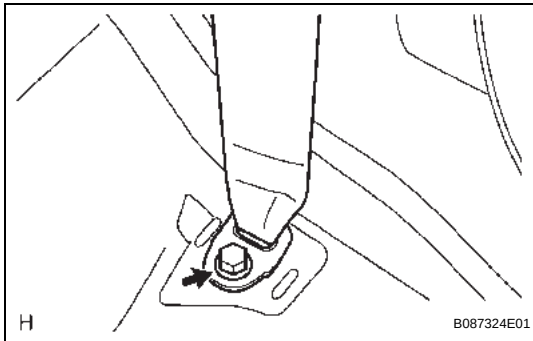


57. REMOVE QUARTER INSIDE TRIM BOARD LH


- (a) Remove the bolt and remove the floor anchor of the rear seat belt outer.

HINT:

Follow the same procedures as for the opposite side.

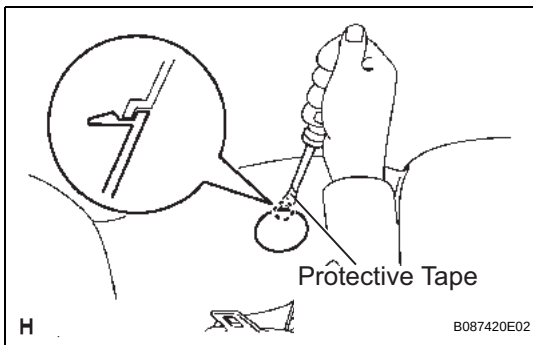

- (b) Using a screwdriver with its tip taped in protective tape, disengage the claw and open the cover.

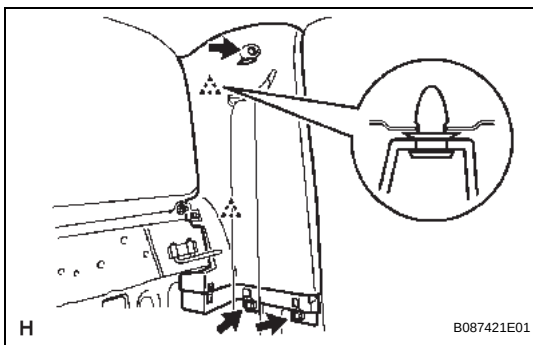


- (c) Remove the 3 screws.

- (d) Disengage the 2 clips and remove the quarter inside trim board.

58. REMOVE QUARTER INSIDE TRIM BOARD RH


HINT:

Follow the same procedures as for the quarter inside trim board LH.

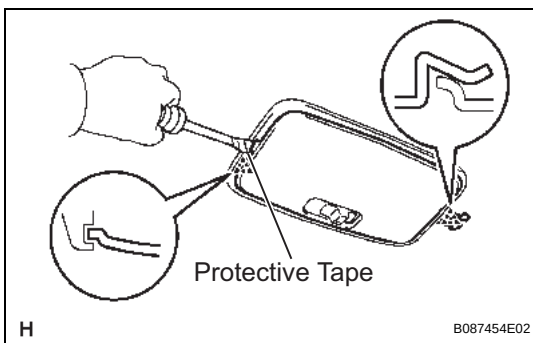

59. REMOVE ROOM LIGHT ASSEMBLY


- (a) Using a screwdriver with its tip taped in protective tape, disengage the 2 claws and remove the room light lens.

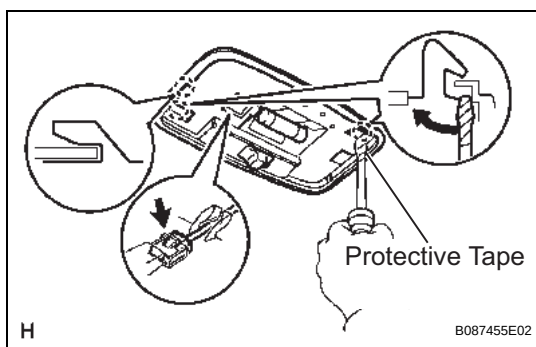


- (b) Using a screwdriver with its tip taped in protective tape, disengage the 3 claws.
- (c) Disconnect the room light connector and remove the room light.

60. REMOVE ROOF CONSOLE BOX ASSEMBLY

- (a) Remove the screw.
- (b) Disengage the 2 clips and 3 claws.
- (c) Disconnect the accessory meter connector and map lamp connector and remove the map lamp.

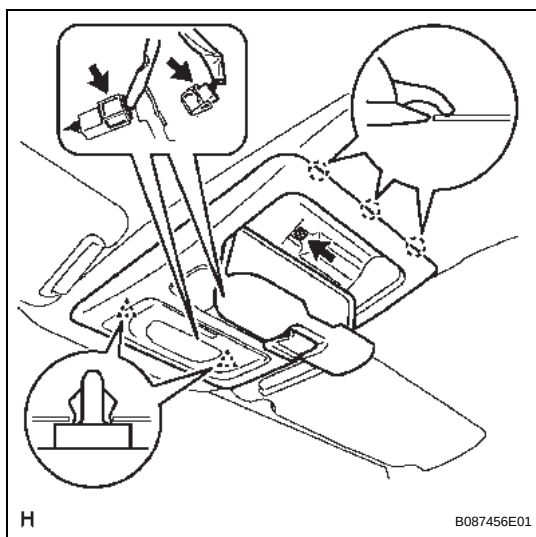

- (d) Using a clip remover, remove the wire harness clamp.

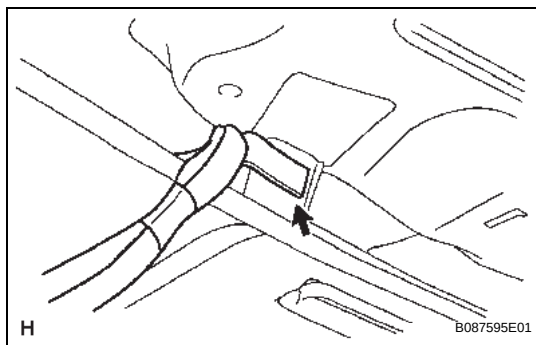



61. REMOVE ASSIST GRIP SUB-ASSEMBLY

HINT:


Follow the same procedures as for the opposite side.

- (a) Using a screwdriver with its tip taped in protective tape, disengage the 2 claws and open the cover.

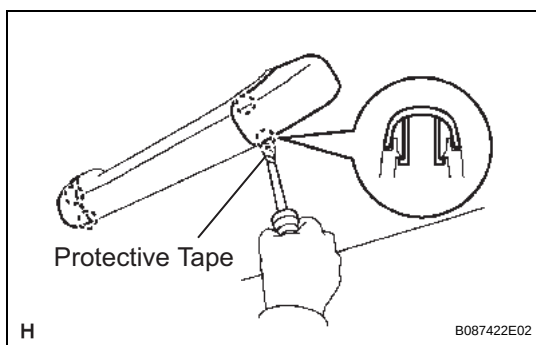

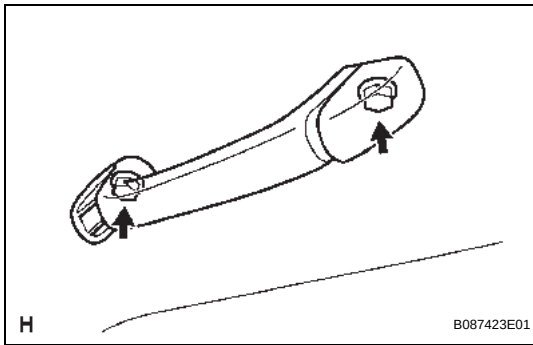

(b) Remove the 2 screws and assist grip.

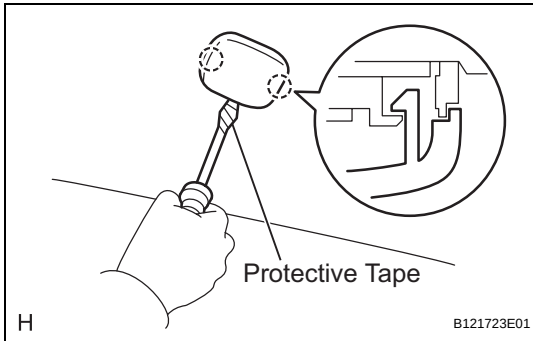


62. REMOVE ASSIST GRIP PLUG (w/ Curtain Shield Airbag)

HINT:


Follow the same procedures as for the opposite side.

(a) Using a screwdriver with its tip taped in protective tape, disengage the 2 claws and open the cover.

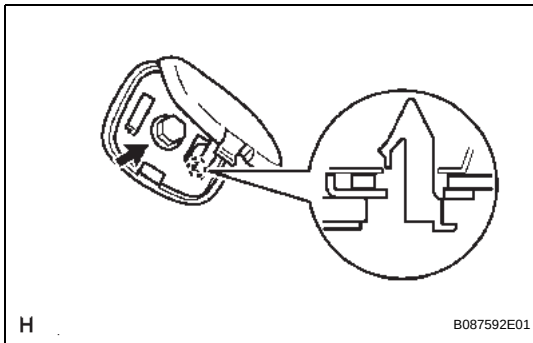

(b) Remove the screw.

(c) Disengage the claw and remove the assist grip plug.

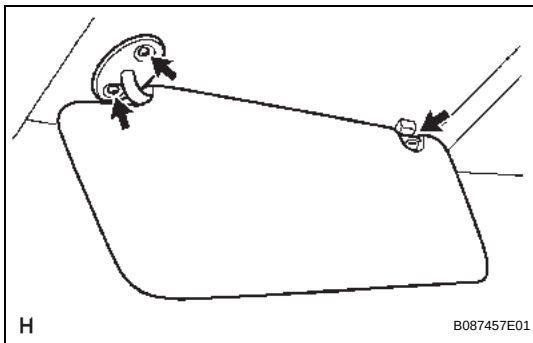

63. REMOVE VISOR ASSEMBLY LH


(a) Remove the 2 screws.

(b) Remove the visor from the visor hol

64. REMOVE VISOR ASSEMBLY RH

HINT:

Follow the same procedures as for the visor assembly LH.

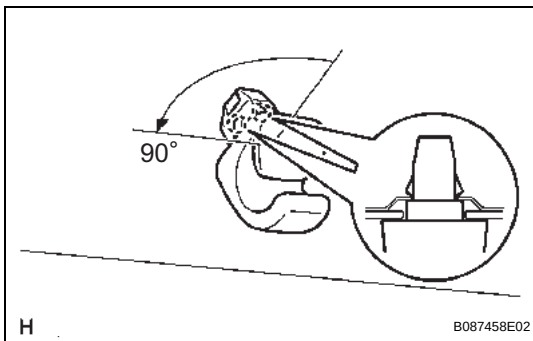


65. REMOVE VISOR HOLDER

(a) Turn the visor holder 90° counterclockwise and remove it.

HINT:


Follow the same procedures as for the opposite side.

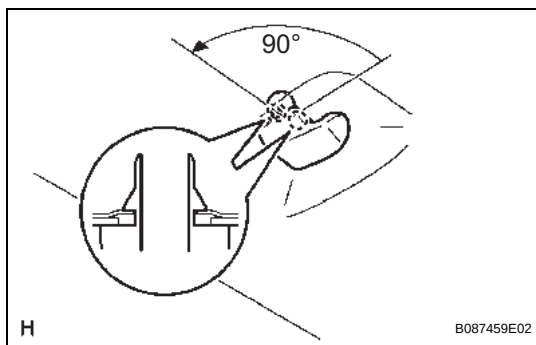**66. REMOVE COAT HOOK**

HINT:


Follow the same procedures as for the opposite side.

- (a) Turn the coat hook 90° counterclockwise and remove it.

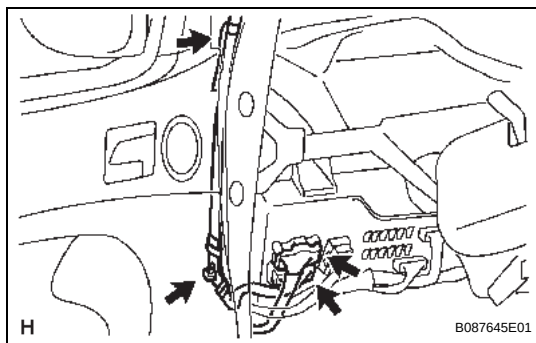
**67. REMOVE ROOF HEADLINING ASSEMBLY**


- (a) Disconnect the frame wire connector.
(b) Disconnect the roof wire connector.
(c) Using a clip remover, remove the 2 wire harness clamps.

- (d) Remove the roof headlining from the vehicle.

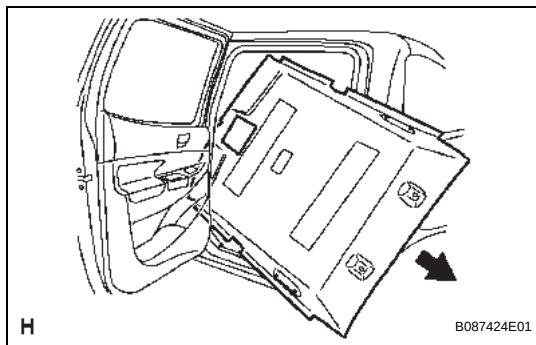**68. REMOVE ROOF HEADLINING PAD**

- (a) Remove the 2 roof headlining pads from the roof headlining.

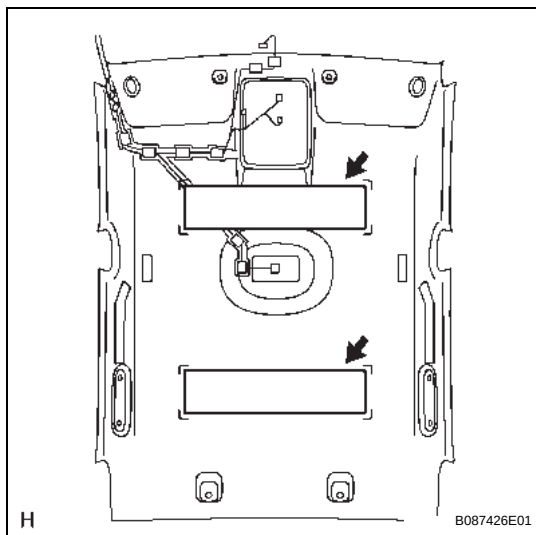

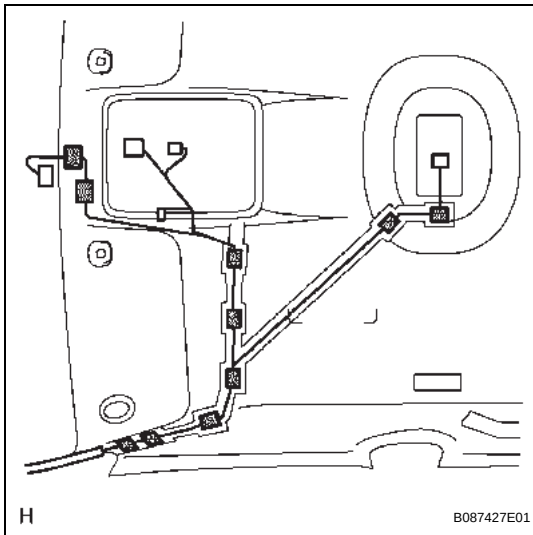

69. REMOVE ROOF WIRE

- (a) w/ EC Mirror:
 - (1) Remove the 10 tapes and roof wire.
- (b) w/o EC Mirror:
 - (1) Remove the 8 tapes and roof wire.


INSTALLATION

CAUTION:

Some of these service operations affect the SRS airbag system. Read the precautionary notices concerning the SRS airbag system before servicing (See page [RS-1](#)).


1. INSTALL ROOF WIRE

- (a) w/ EC mirror:
 - (1) Install the roof wire with 8 new tapes, as shown in the illustration.
- (b) w/o EC mirror:
 - (1) Install the roof wire with 8 new tapes, as shown in the illustration.

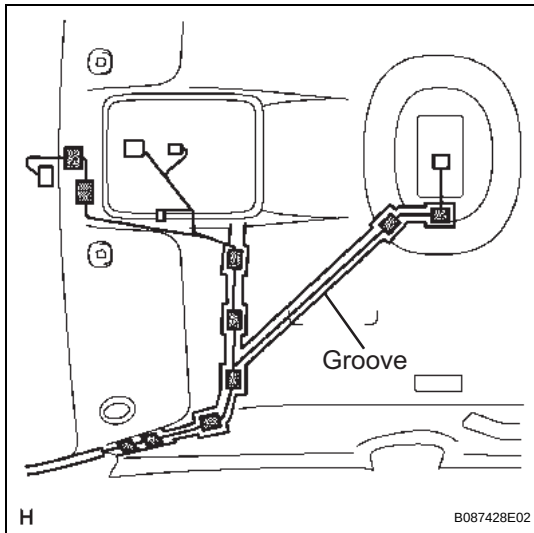


2. INSTALL ROOF HEADLINING PAD


- (a) Install 2 new roof headlining pads onto the roof headlining.

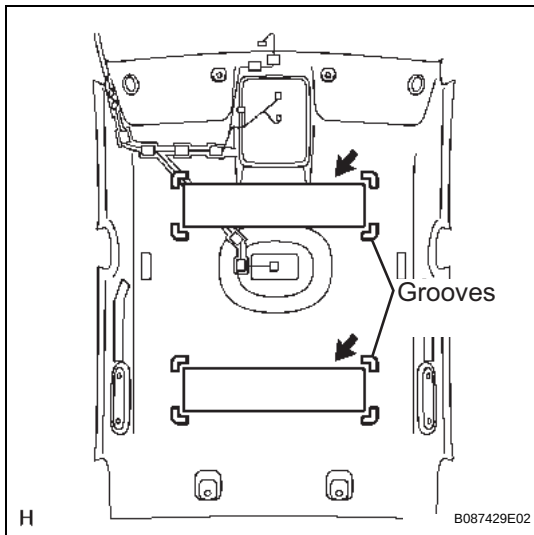


3. INSTALL ROOF HEADLINING ASSEMBLY

- (a) Install the roof headlining into the vehicle.

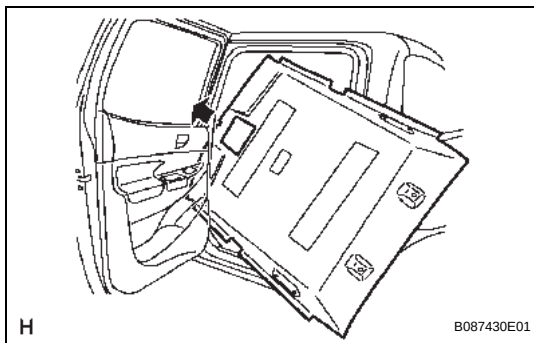

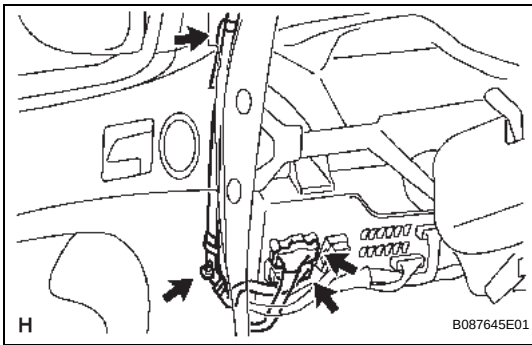

- (b) Install the 2 wire harness clamps.
- (c) Connect the roof wire connector.
- (d) Connect the frame wire connector.

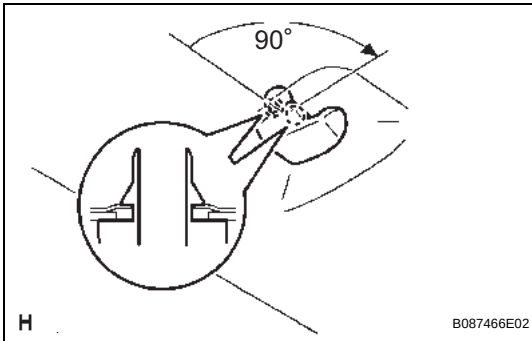


4. INSTALL COAT HOOK

HINT:

Follow the same procedures as for the opposite side.

- (a) Turn the coat hook 90° clockwise and install it.

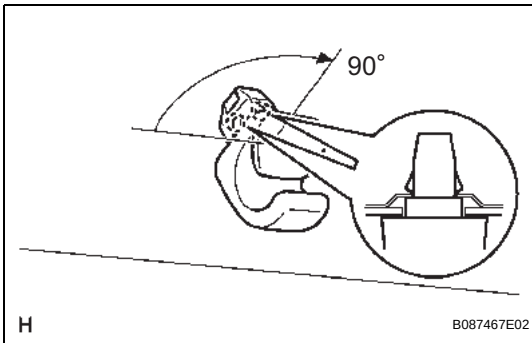


5. INSTALL VISOR HOLDER

HINT:

Follow the same procedures as for the opposite side.

- (a) Turn the visor holder 90° clockwise and install it.

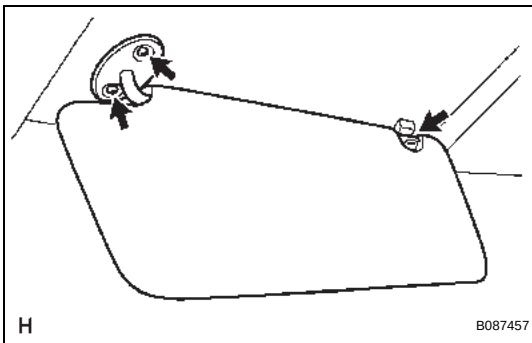


6. INSTALL VISOR ASSEMBLY LH

- (a) Install the visor into the visor holder.
- (b) Tighten the 2 screws.

7. INSTALL VISOR ASSEMBLY RH

HINT:

Follow the same procedures as for the visor assembly LH.

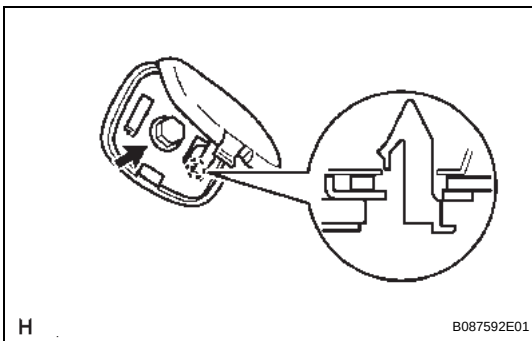


8. INSTALL ASSIST GRIP PLUG (w/ Curtain Shield Airbag)


HINT:

Follow the same procedures as for the opposite side.

- (a) Engage the claw and install the assist grip plug.
- (b) Tighten the screw.

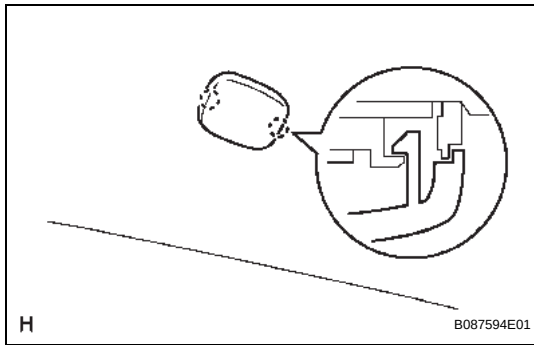

(c) Engage the 2 claws and close the cover.

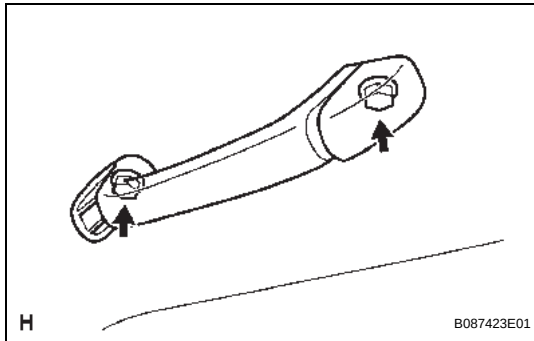


9. INSTALL ASSIST GRIP SUB-ASSEMBLY


HINT:

Follow the same procedures as for the opposite side.

(a) Install the assist grip with the 2 screws.

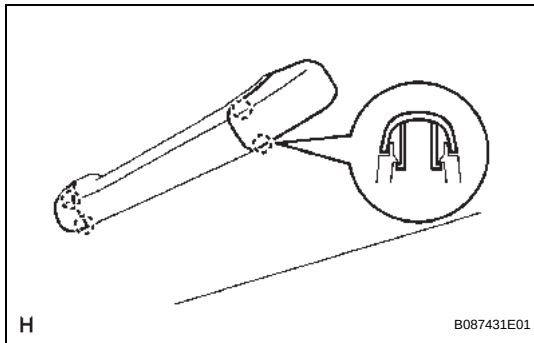


(b) Engage the 2 claws and close the cover.

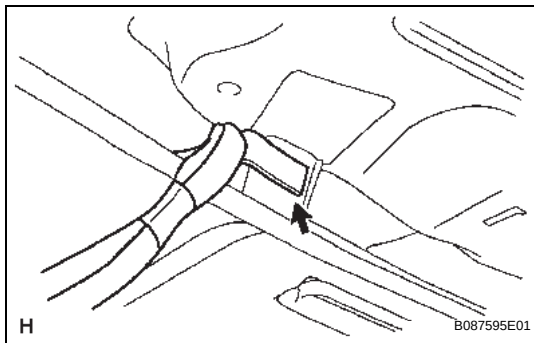


10. INSTALL ROOF CONSOLE BOX ASSEMBLY

(a) Install the wire harness clamp.

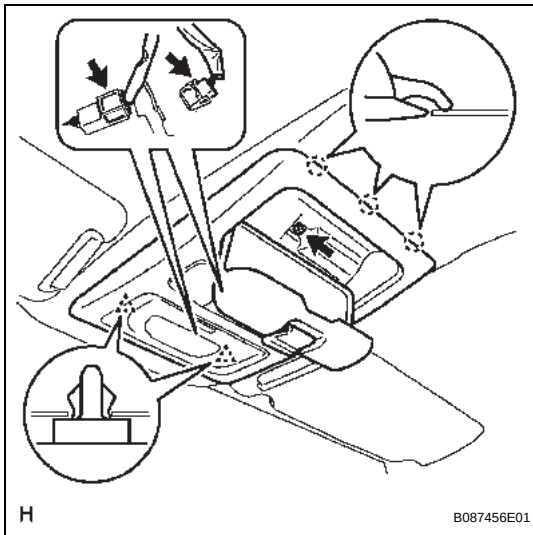


- (b) Connect the accessory meter connector and map lamp connector.
- (c) Engage the 2 clips and 3 claws and install the map lamp.
- (d) Tighten the screw.

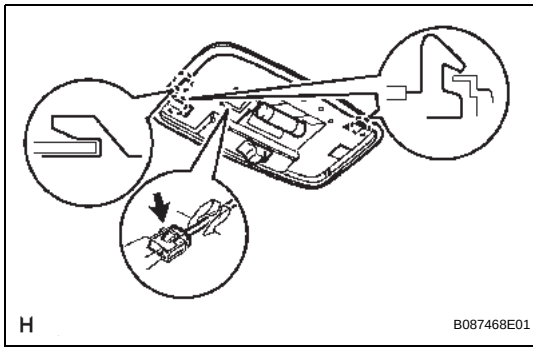


11. INSTALL ROOM LIGHT ASSEMBLY

- (a) Connect the room light connector.
- (b) Engage the 3 claws and install the room light.

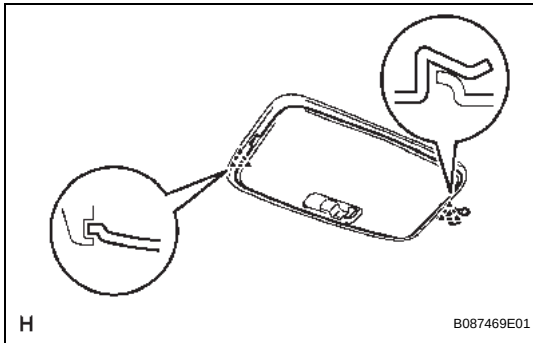


- (c) Engage the 2 claws and install the room light lens.

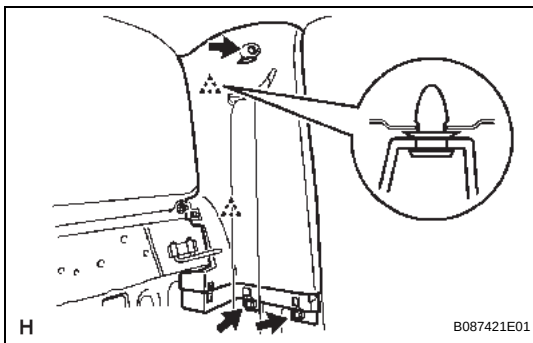


12. INSTALL QUARTER INSIDE TRIM BOARD LH

- (a) Engage the 2 clips and install the quarter inside trim board.
- (b) Tighten the 3 screws.

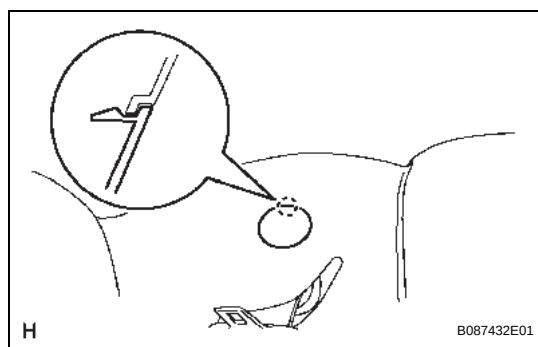

(c) Engage the claw and close the cover.

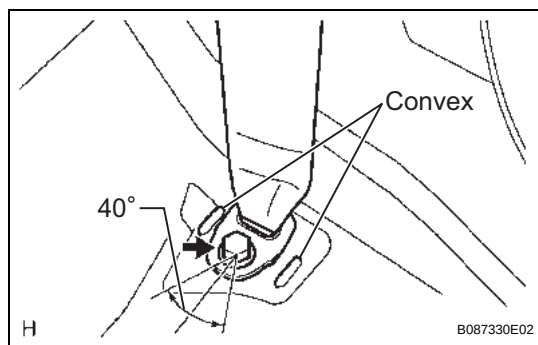

(d) Install the floor anchor of the rear seat belt outer with the bolt.

Torque: 42 N*m (430 kgf*cm, 31 ft.*lbf)

NOTICE:

- Make sure that the rear seat outer belt is oriented in the correct direction when installing.
- Be careful not to place the rear seat outer belt over the convex areas of the floor panel.

13. INSTALL QUARTER INSIDE TRIM BOARD RH

HINT:

Follow the same procedures as for the quarter inside trim board LH.



14. INSTALL QUARTER TRIM LOWER PANEL LH

(a) Engage the 2 claws and 2 clips, and install the quarter trim lower panel.

15. INSTALL QUARTER TRIM LOWER PANEL RH

HINT:


Follow the same procedures as for the quarter trim lower panel LH.

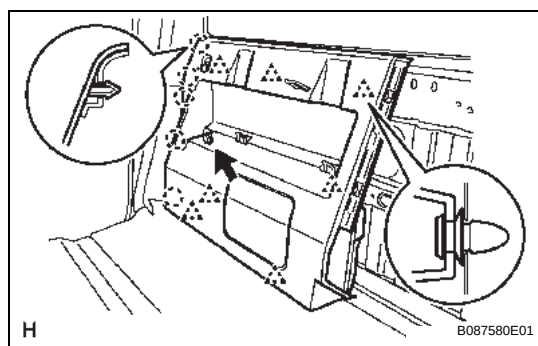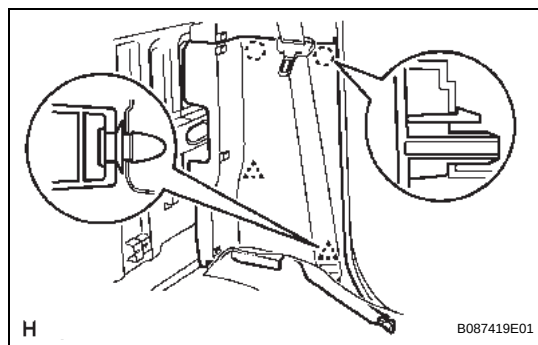

16. INSTALL LUGGAGE COMPARTMENT SIDE TRAY RH


(a) w/ Woofer:

- (1) Engage the 5 claws and 7 clips, and install the luggage compartment side tray.
- (2) Tighten the bolt.

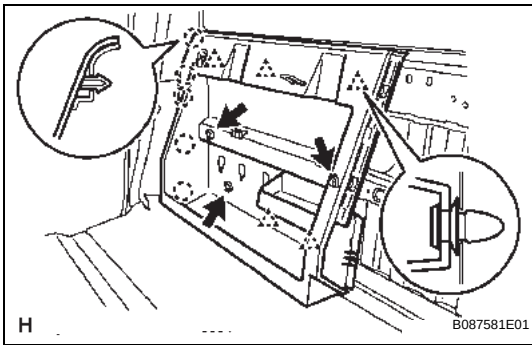


- (b) w/o Woofer:
 - (1) Engage the 5 claws and 5 clips, and install the luggage compartment side tray.
 - (2) Tighten the 3 bolts.

17. INSTALL REAR SEAT BACK CENTER HINGE SUB-ASSEMBLY (See page SE-77)

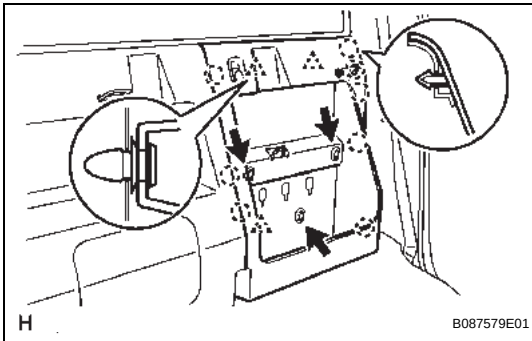

18. INSTALL LUGGAGE COMPARTMENT SIDE TRAY LH

- (a) Engage the 8 claws and 3 clips, and install the luggage compartment side tray.
- (b) Tighten the 3 bolts.

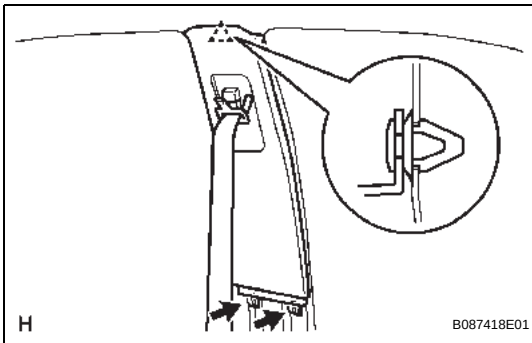


19. INSTALL CENTER PILLAR UPPER GARNISH LH

- (a) Engage the clip and install the center pillar upper garnish.
- (b) Tighten the 2 screws.

20. INSTALL CENTER PILLAR UPPER GARNISH RH


HINT:

Follow the same procedures as for the center pillar upper garnish LH.

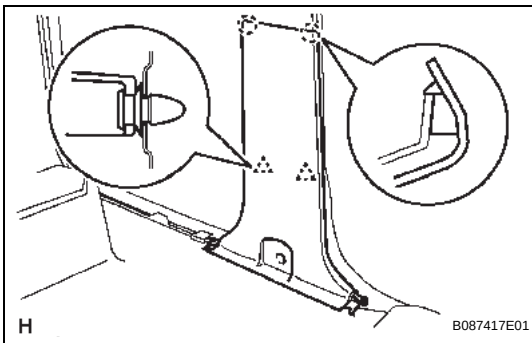

21. INSTALL CENTER PILLAR LOWER GARNISH LH

- (a) Engage the 2 claws and 2 clips, and install the center pillar lower garnish.

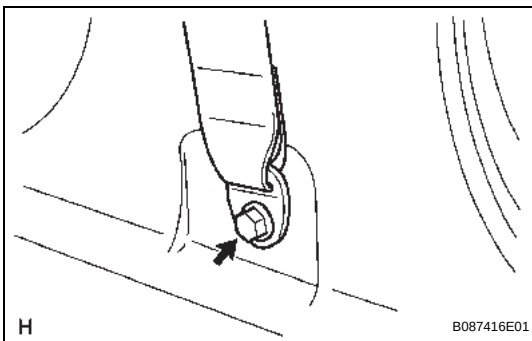


- (b) Install the floor anchor of the front seat outer belt with the bolt.

Torque: 42 N*m (430 kgf*cm, 31 ft.*lbf)

22. INSTALL CENTER PILLAR LOWER GARNISH RH

HINT:

Follow the same procedures as for the center pillar lower garnish LH.

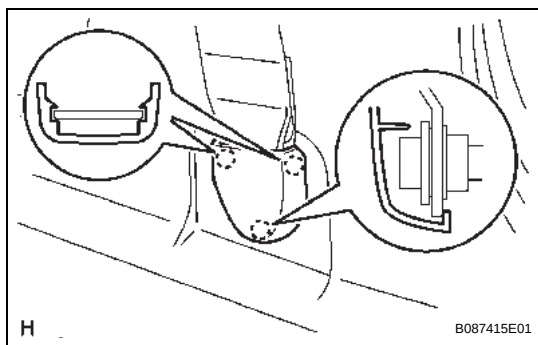

23. INSTALL LAP BELT OUTER ANCHOR COVER

HINT:

Follow the same procedures as for the opposite side.

- (a) Engage the 3 claws and install the lap belt outer anchor cover.

24. INSTALL INSTRUMENT PANEL SUB-ASSEMBLY (See page [IP-18](#))

25. CONNECT PASSENGER AIRBAG CONNECTOR

26. INSTALL INSTRUMENT SIDE PANEL (See page [IP-20](#))

27. INSTALL INSTRUMENT LOWER COVER SUB-ASSEMBLY (See page [IP-20](#))

28. INSTALL INSTRUMENT LOWER PANEL (See page [IP-20](#))

29. INSTALL INSTRUMENT LOWER PANEL FINISH PANEL SUB-ASSEMBLY (See page [IP-20](#))

30. INSTALL GLOVE COMPARTMENT DOOR ASSEMBLY (See page [IP-20](#))

31. INSTALL INSTRUMENT CENTER CLUSTER FINISH PANEL SUB-ASSEMBLY (See page [IP-21](#))

32. INSTALL COMBINATION METER ASSEMBLY (See page [IP-21](#))

33. INSTALL INSTRUMENT CLUSTER FINISH PANEL SUB-ASSEMBLY (See page [IP-21](#))

34. INSTALL INSTRUMENT LOWER PANEL FINISH PANEL (See page [IP-22](#))

35. CONNECT HOOD LOCK CONTROL LEVER SUB-ASSEMBLY (See page [ED-8](#))

36. INSTALL RADIO RECEIVER ASSEMBLY (See page [AV-70](#))

37. INSTALL AIR CONDITIONING CONTROL ASSEMBLY (See page [IP-22](#))

38. INSTALL FRONT CONSOLE BOX

- (a) for Automatic Transmission:

- (1) Install the front console box (See page [IP-24](#)).

- (b) for Manual Transmission:

- (1) Install the front console box (See page [IP-23](#)).

39. INSTALL INSTRUMENT PANEL CUP HOLDER TRAY (for Automatic Transmission) (See page [IP-24](#))

40. INSTALL REAR CONSOLE BOX ASSEMBLY (See page [IP-24](#))

41. INSTALL REAR CONSOLE UPPER PANEL SUB-ASSEMBLY

- (a) for Automatic Transmission:

- (1) Install the rear console upper panel sub-assembly (See page [IP-25](#)).

(b) for Manual Transmission:


- (1) Install the rear console upper panel sub-assembly (See page [IP-25](#)).

42. INSTALL INSTRUMENT PANEL UNDER TRAY (for Pedal Type Parking Brake) (See page [IP-25](#))

43. INSTALL INSTRUMENT PANEL HOLE COVER (for Lever Type Parking Brake) (See page [IP-25](#))


44. INSTALL FRONT PILLAR GARNISH LH

- (a) Install the 3 wire harness clamps (LH side only).

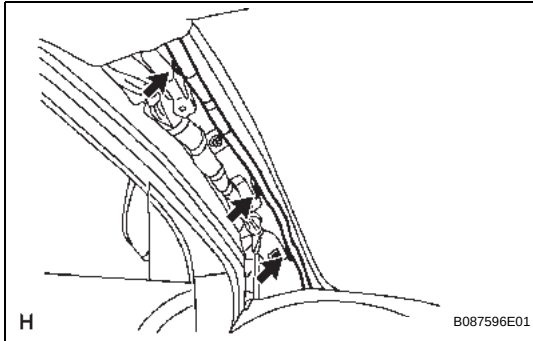

- (b) Engage the claw and clip, and install the front pillar garnish.

- (c) Tighten the 2 screws.

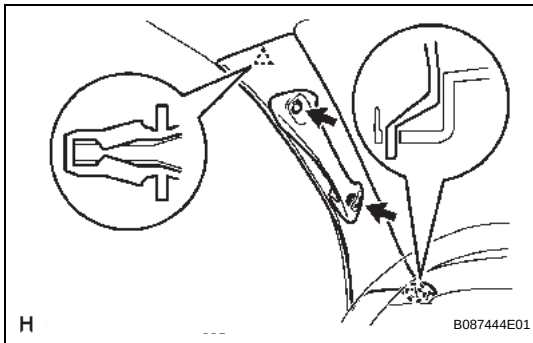

- (d) Engage the 2 claws and install the assist grip plug.


HINT:

Follow the same procedures as for the opposite side.

45. INSTALL FRONT PILLAR GARNISH RH

HINT:

Follow the same procedures as for the front pillar garnish LH.

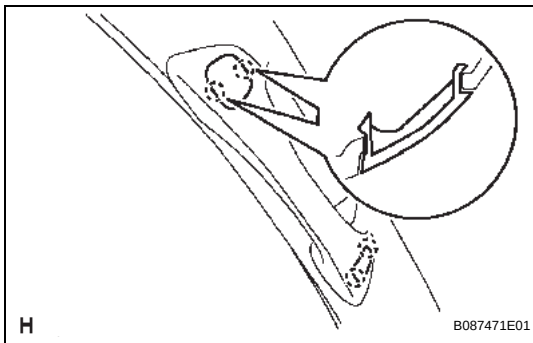


46. INSTALL REAR DOOR OPENING TRIM WEATHERSTRIP LH


- (a) Install the rear door opening trim weatherstrip.

47. INSTALL REAR DOOR OPENING TRIM WEATHERSTRIP RH

HINT:

Follow the same procedures as for the rear door opening trim weatherstrip.

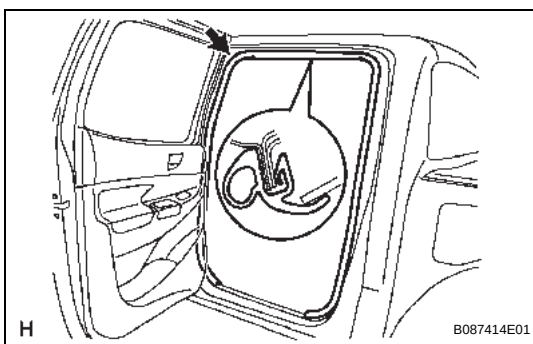

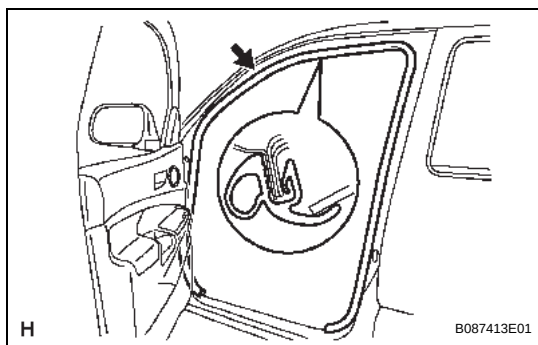


48. INSTALL FRONT DOOR OPENING TRIM WEATHERSTRIP LH

(a) Install the front door opening trim weatherstrip.

49. INSTALL FRONT DOOR OPENING TRIM WEATHERSTRIP RH

HINT:

Follow the same procedures as for the front door opening trim weatherstrip.

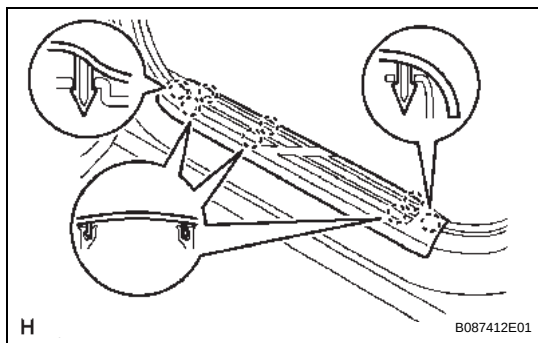


50. INSTALL REAR DOOR SCUFF PLATE LH

(a) Engage the 8 claws and install the rear door scuff plate.

51. INSTALL REAR DOOR SCUFF PLATE RH

HINT:

Follow the same procedures as for the rear door scuff plate LH.

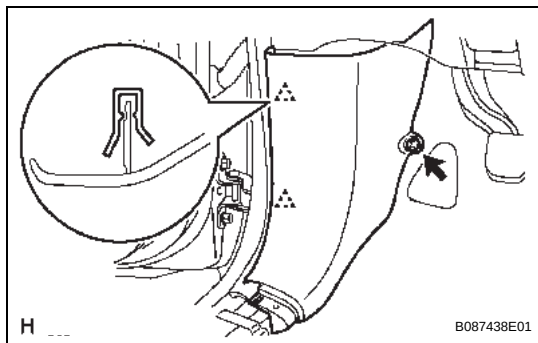

52. INSTALL COWL SIDE TRIM BOARD LH


(a) Engage the 2 clips and install the cowl side trim board.

(b) Install the clip.

53. INSTALL COWL SIDE TRIM BOARD RH

HINT:

Follow the same procedures as for the cowl side trim board LH.

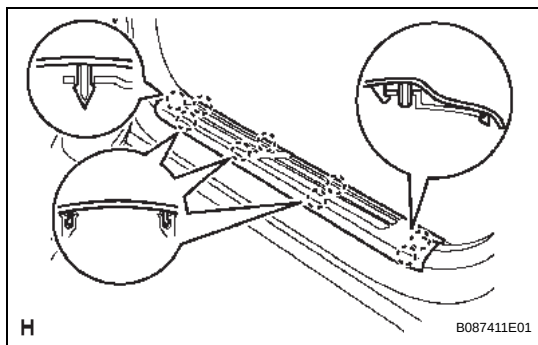

54. INSTALL FRONT DOOR SCUFF PLATE LH

(a) Engage the 9 claws and install the front door scuff plate.

55. INSTALL FRONT DOOR SCUFF PLATE RH

HINT:

Follow the same procedures as for the front door scuff plate LH.

56. INSTALL REAR SEAT BACK HINGE SUB-ASSEMBLY LH (See page [SE-77](#))

57. INSTALL REAR SEAT BACK HINGE SUB-ASSEMBLY RH

HINT:

Follow the same procedures as for the rear seat back hinge sub-assembly LH.

58. INSTALL FRONT FLOOR FOOTREST (See page [IR-1](#))

59. INSTALL REAR SEAT BACK ASSEMBLY LH (See page [SE-77](#))

60. INSTALL REAR SEAT BACK ASSEMBLY RH (See page [SE-90](#))

61. INSTALL REAR SEAT BACK HINGE COVER

- (a) for LH Side:
 - (1) Install the rear seat back hinge cover (See page [SE-78](#)).
- (b) for RH Side:
 - (1) Install the rear seat back hinge cover (See page [SE-90](#)).

62. INSTALL REAR SEAT CUSHION ASSEMBLY LH (See page [SE-78](#))**63. INSTALL REAR SEAT CUSHION ASSEMBLY RH (See page [SE-90](#))****64. INSTALL FRONT SEAT ASSEMBLY LH (See page [SE-34](#))****65. INSTALL FRONT SEAT ASSEMBLY RH**



- (a) for Separate Folding Seat Type:
 - (1) Install the front seat assembly RH (See page [SE-19](#)).
- (b) for Separate Seat Type Front Passenger Side:
 - (1) Install the front seat assembly RH (See page [SE-48](#)).

66. INSTALL SEAT TRACK COVER LH (See page [SE-34](#))**67. INSTALL SEAT TRACK COVER RH**


- (a) for Separate Folding Seat Type:
 - (1) Install the seat track cover RH (See page [SE-19](#)).
- (b) for Separate Seat Type Front Passenger Side:
 - (1) Install the seat track cover RH (See page [SE-48](#)).

68. INSTALL INNER REAR VIEW MIRROR ASSEMBLY (w/ EC Mirror)

- (a) Engage the 2 claws and install the inner rear view mirror cover.

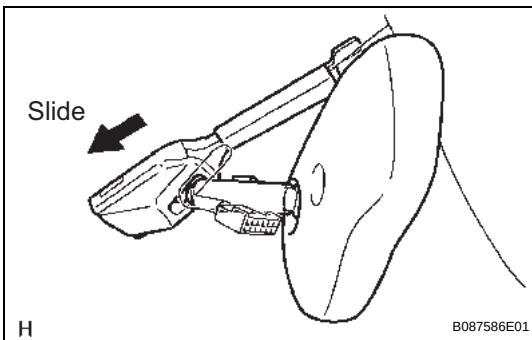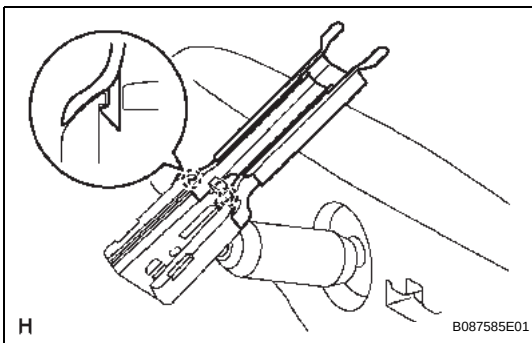

- (b) Slide and install the inner rear view mirror.

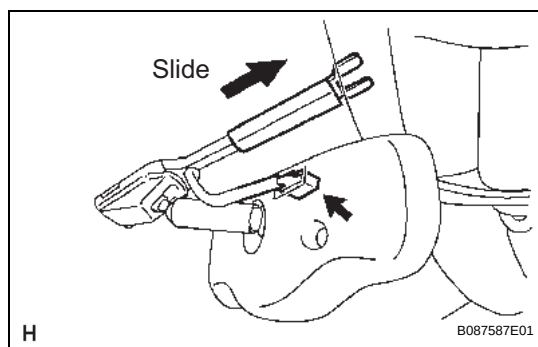

- (c) Slide the inner rear view mirror cover.
- (d) Connect the EC mirror connector.

69. CONNECT CABLE TO NEGATIVE BATTERY TERMINAL

Torque: 3.9 N*m (40 kgf*cm, 35 in.*lbf)


70. INSPECT SRS WARNING LIGHT

(See page [RS-28](#))


ROOF HEADLINING (for Regular Cab)


COMPONENTS

for Separate Seat Type:

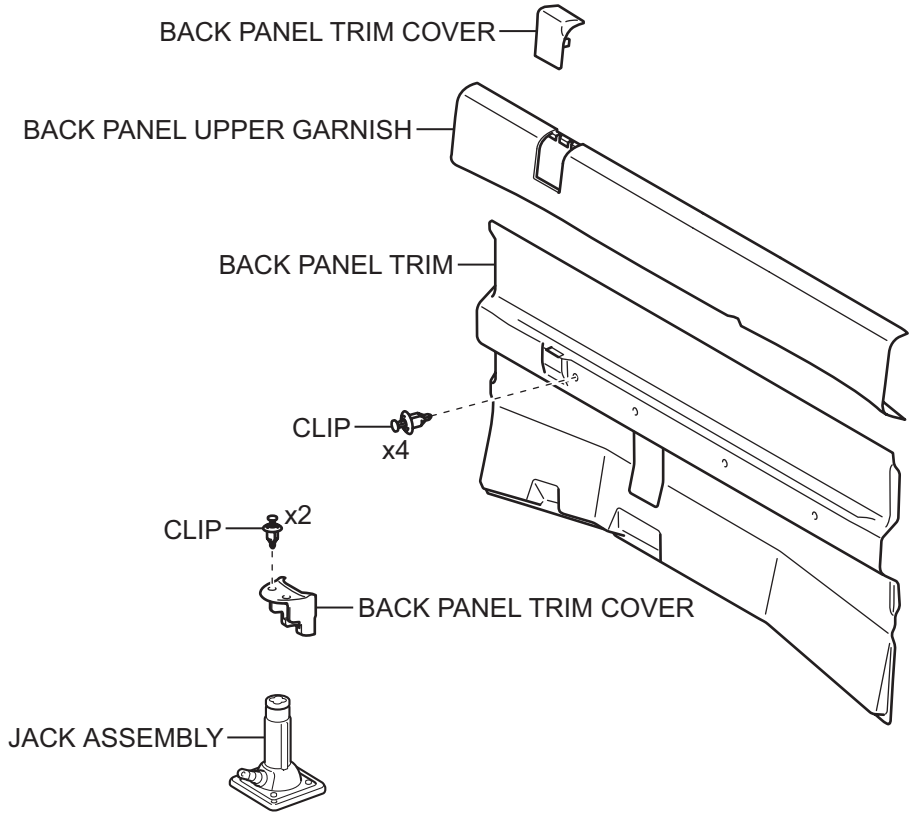


for Bench Seat Type:

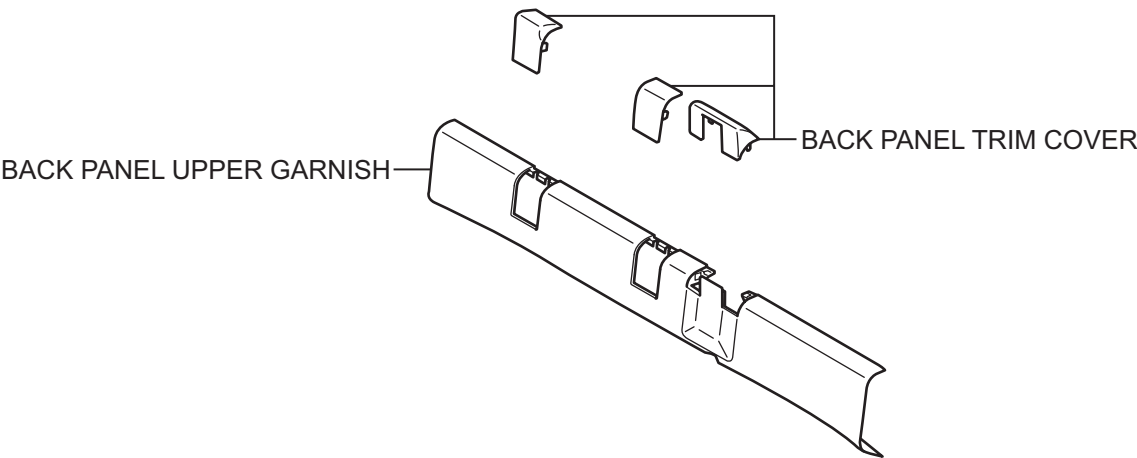

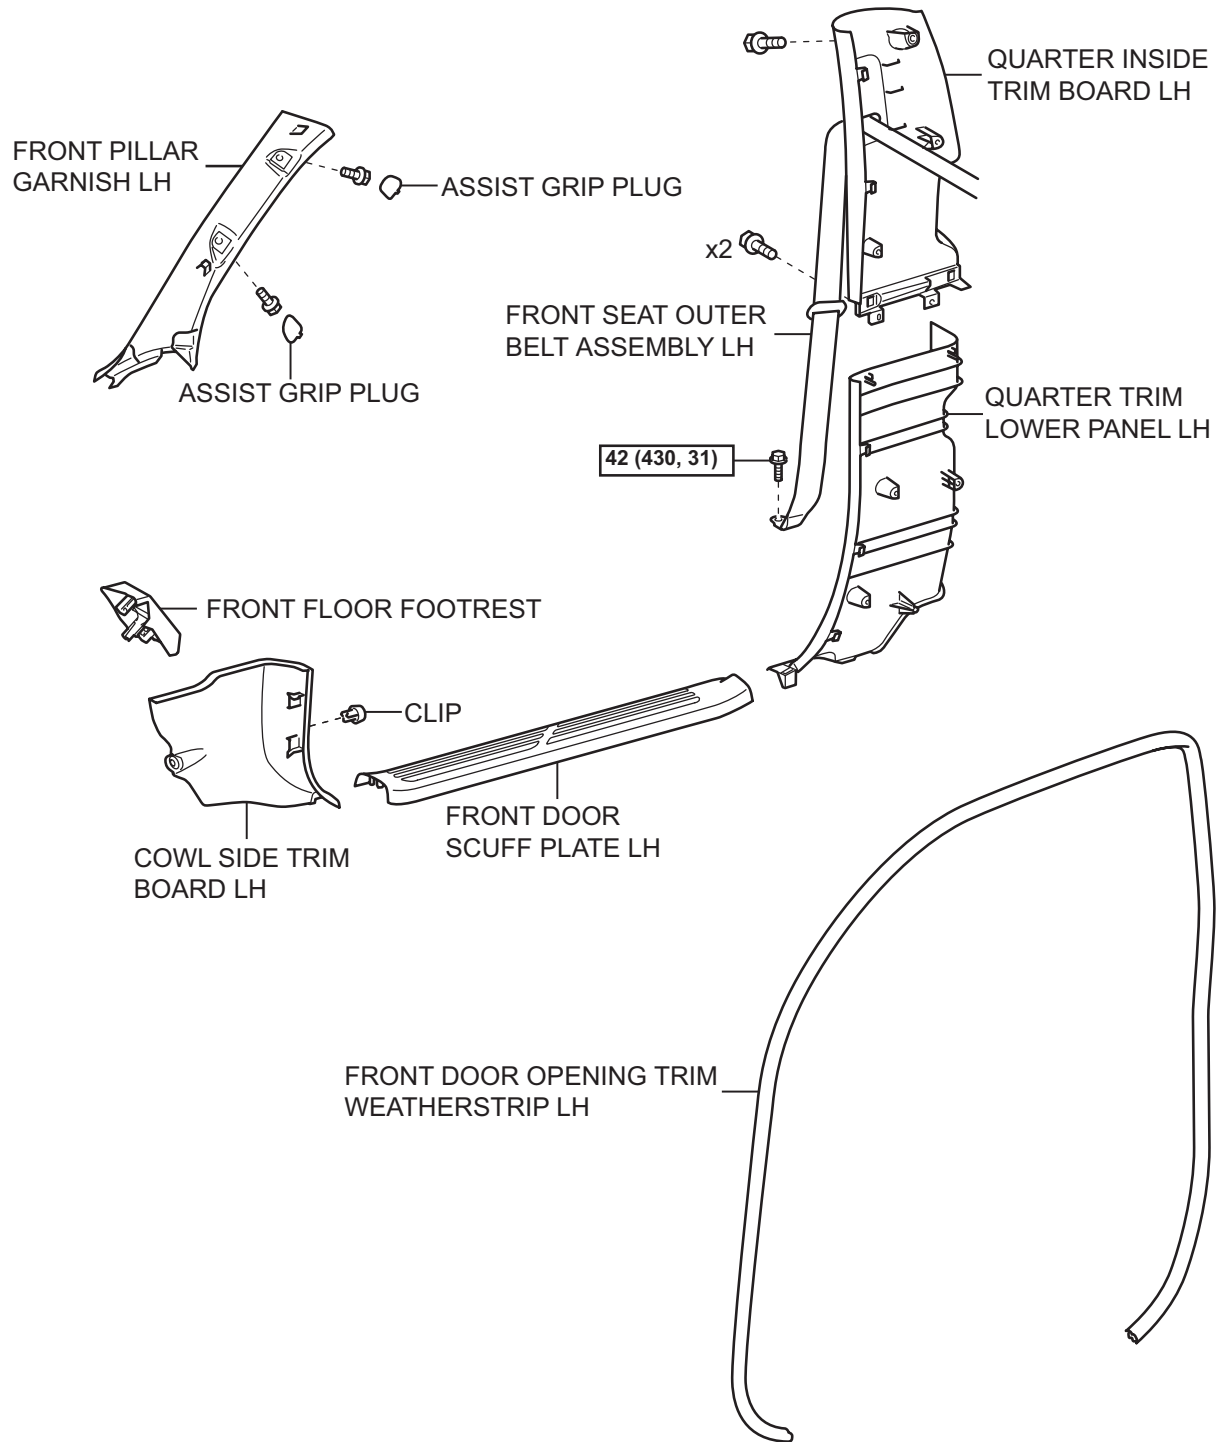


$\boxed{\text{N*m (kgf*cm, ft*lb)}} : \text{Specified torque}$

IR

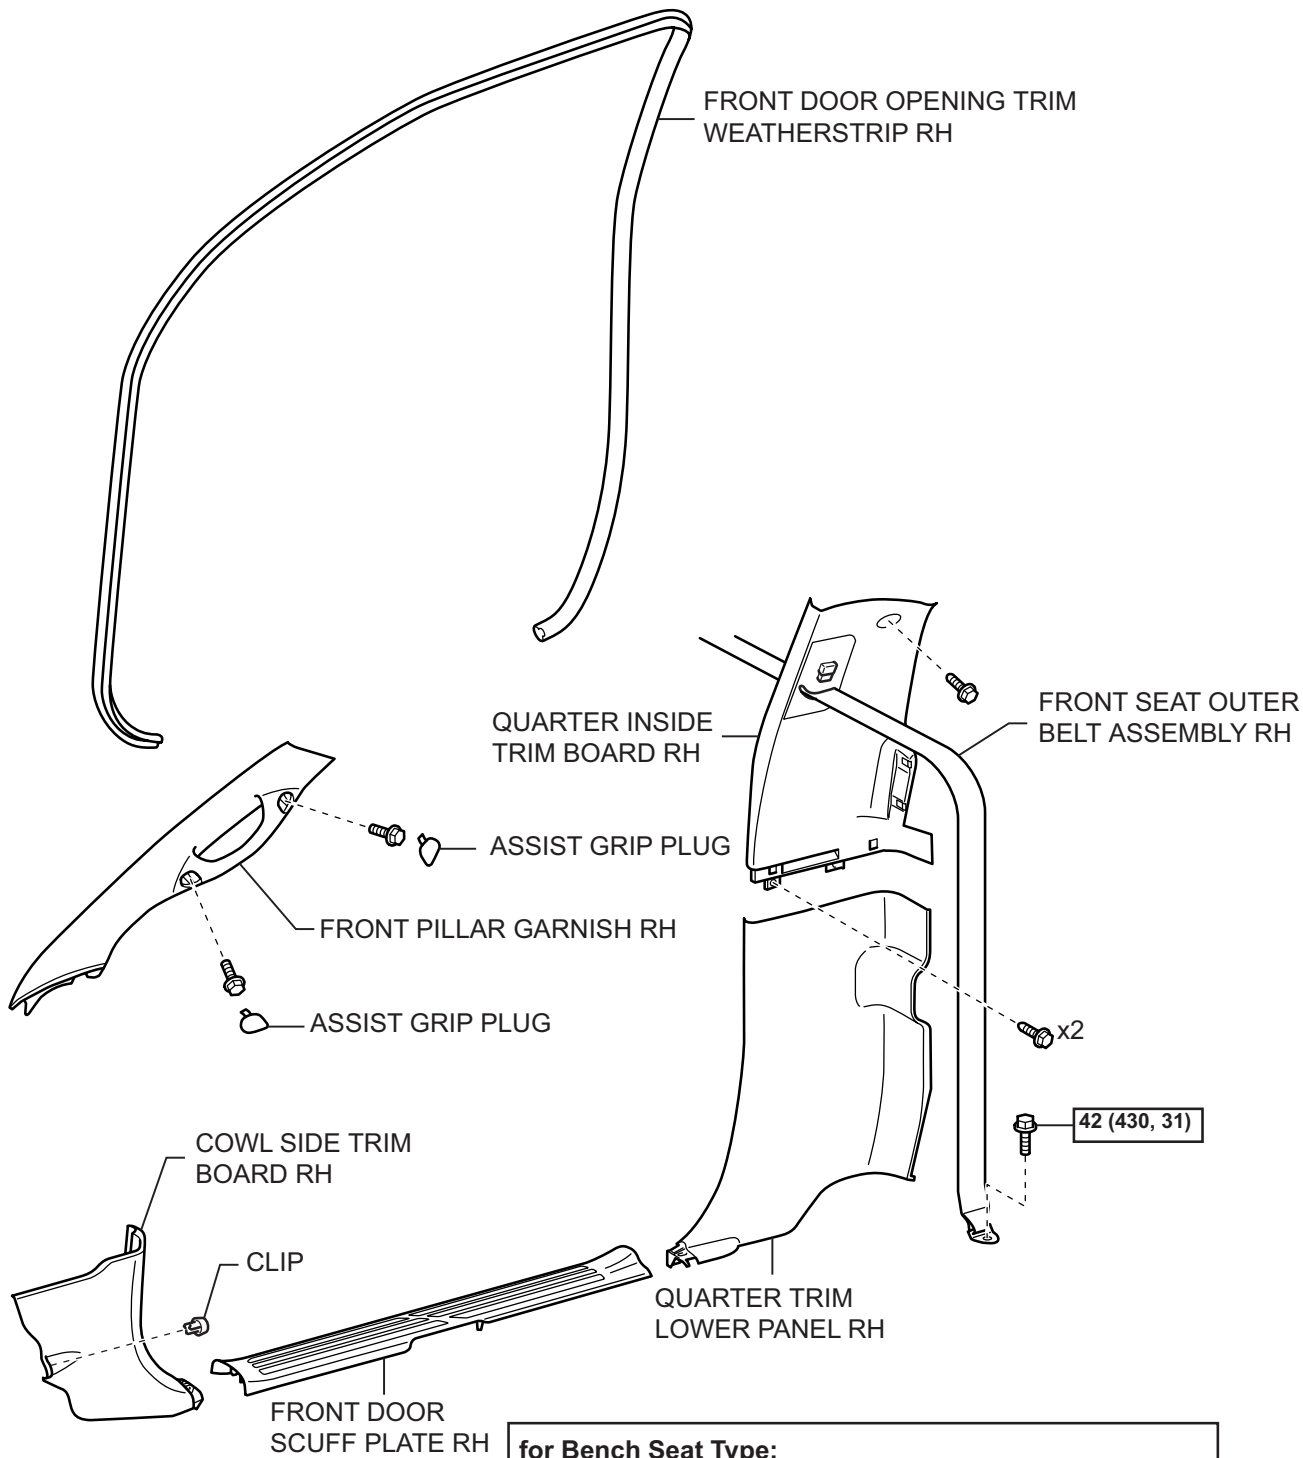


for Bench Seat Type:

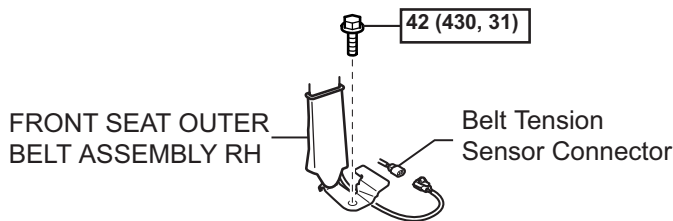


N*m (kgf*cm, ft*lb) : Specified torque

for Separate Seat Type:

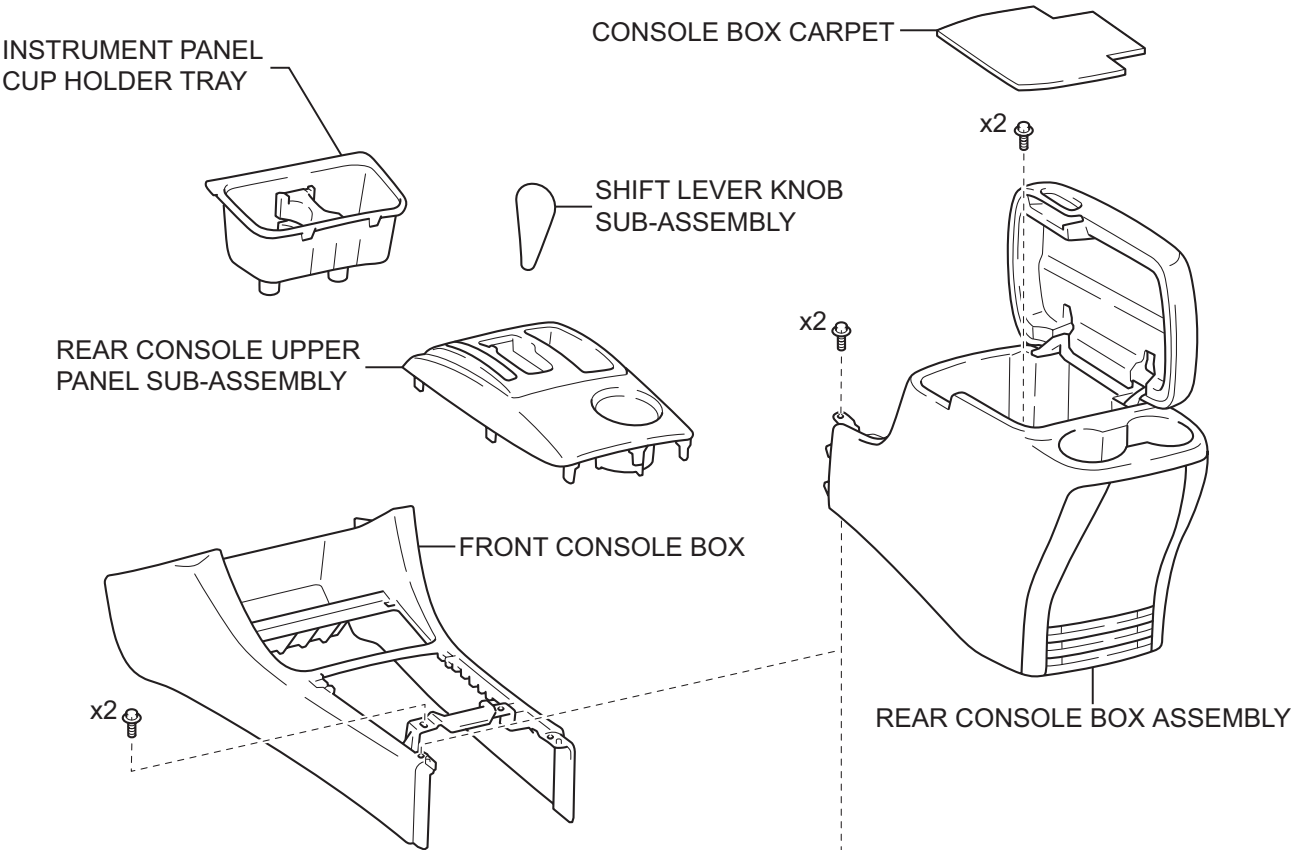


for Manual Transmission:

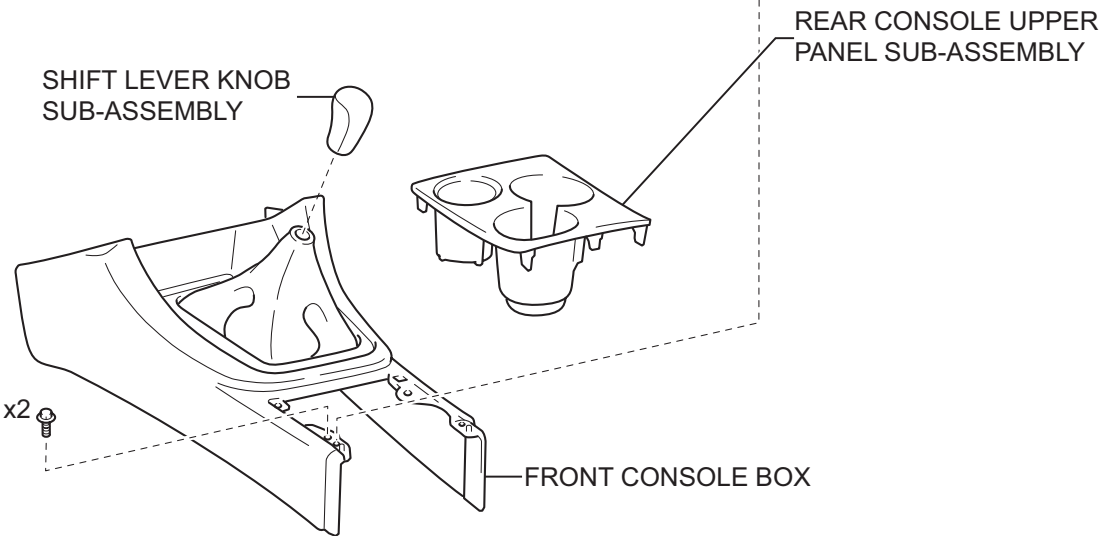



for Bench Seat Type:

for Automatic Transmission:

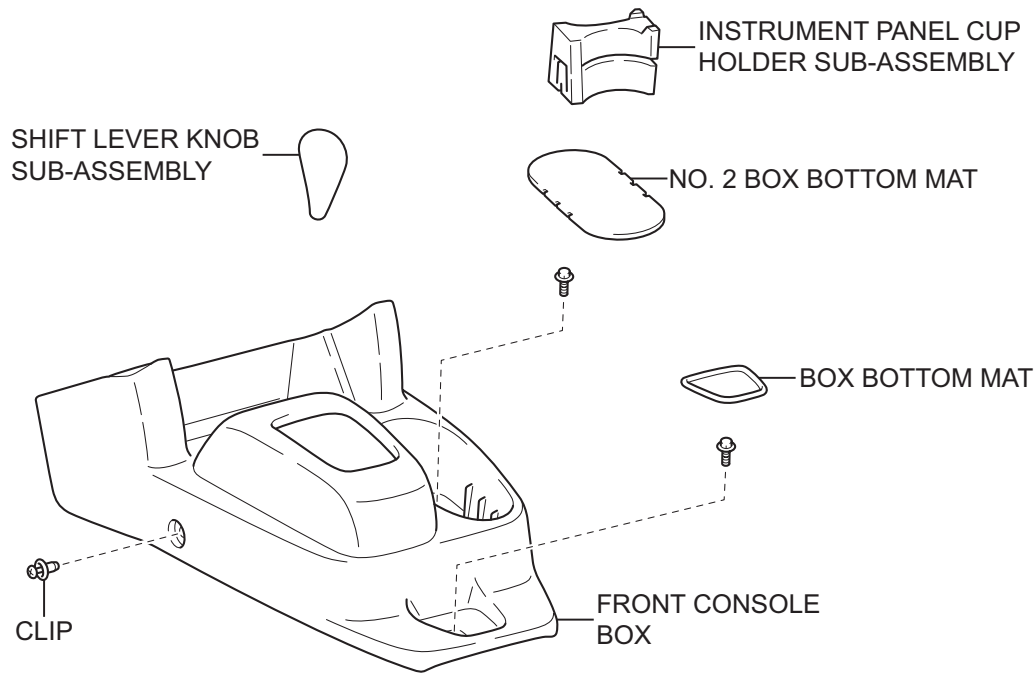


for Manual Transmission:

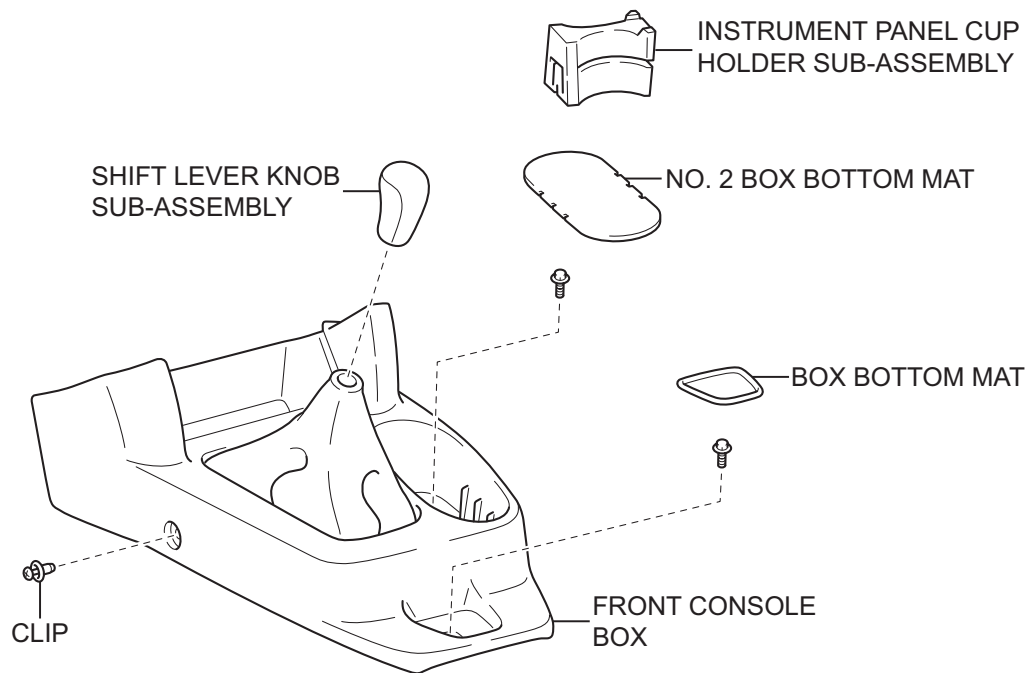

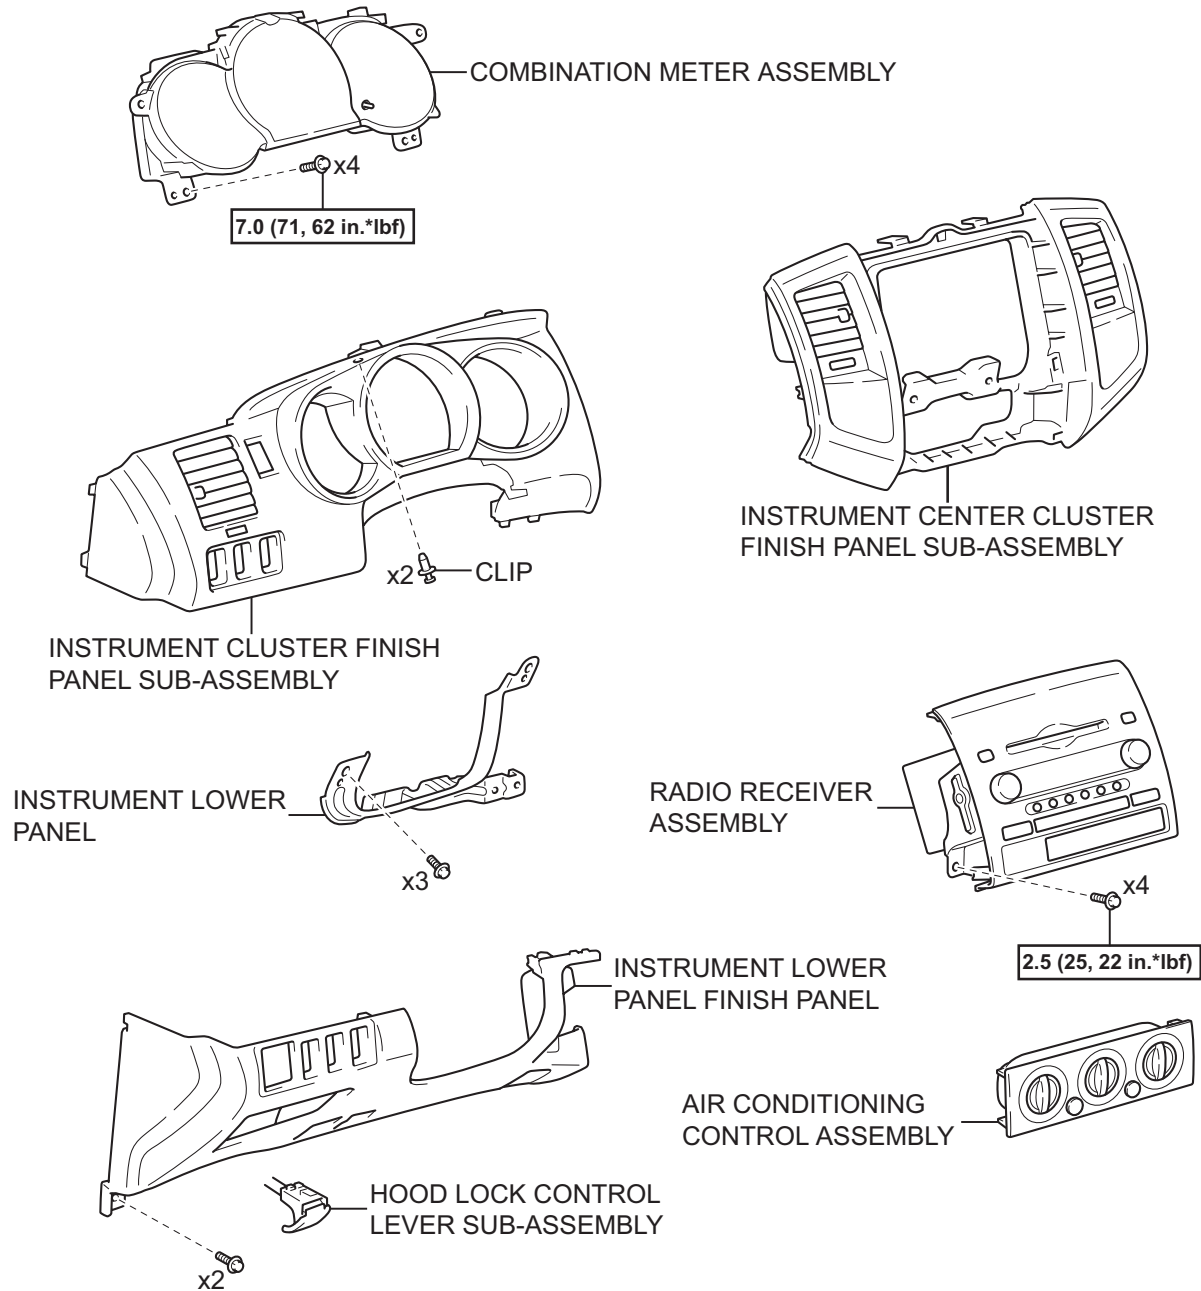

for Pedal Type Parking Brake:

 


for Lever Type Parking Brake:




N*m (kgf*cm, ft*lbf) : Specified torque

IR

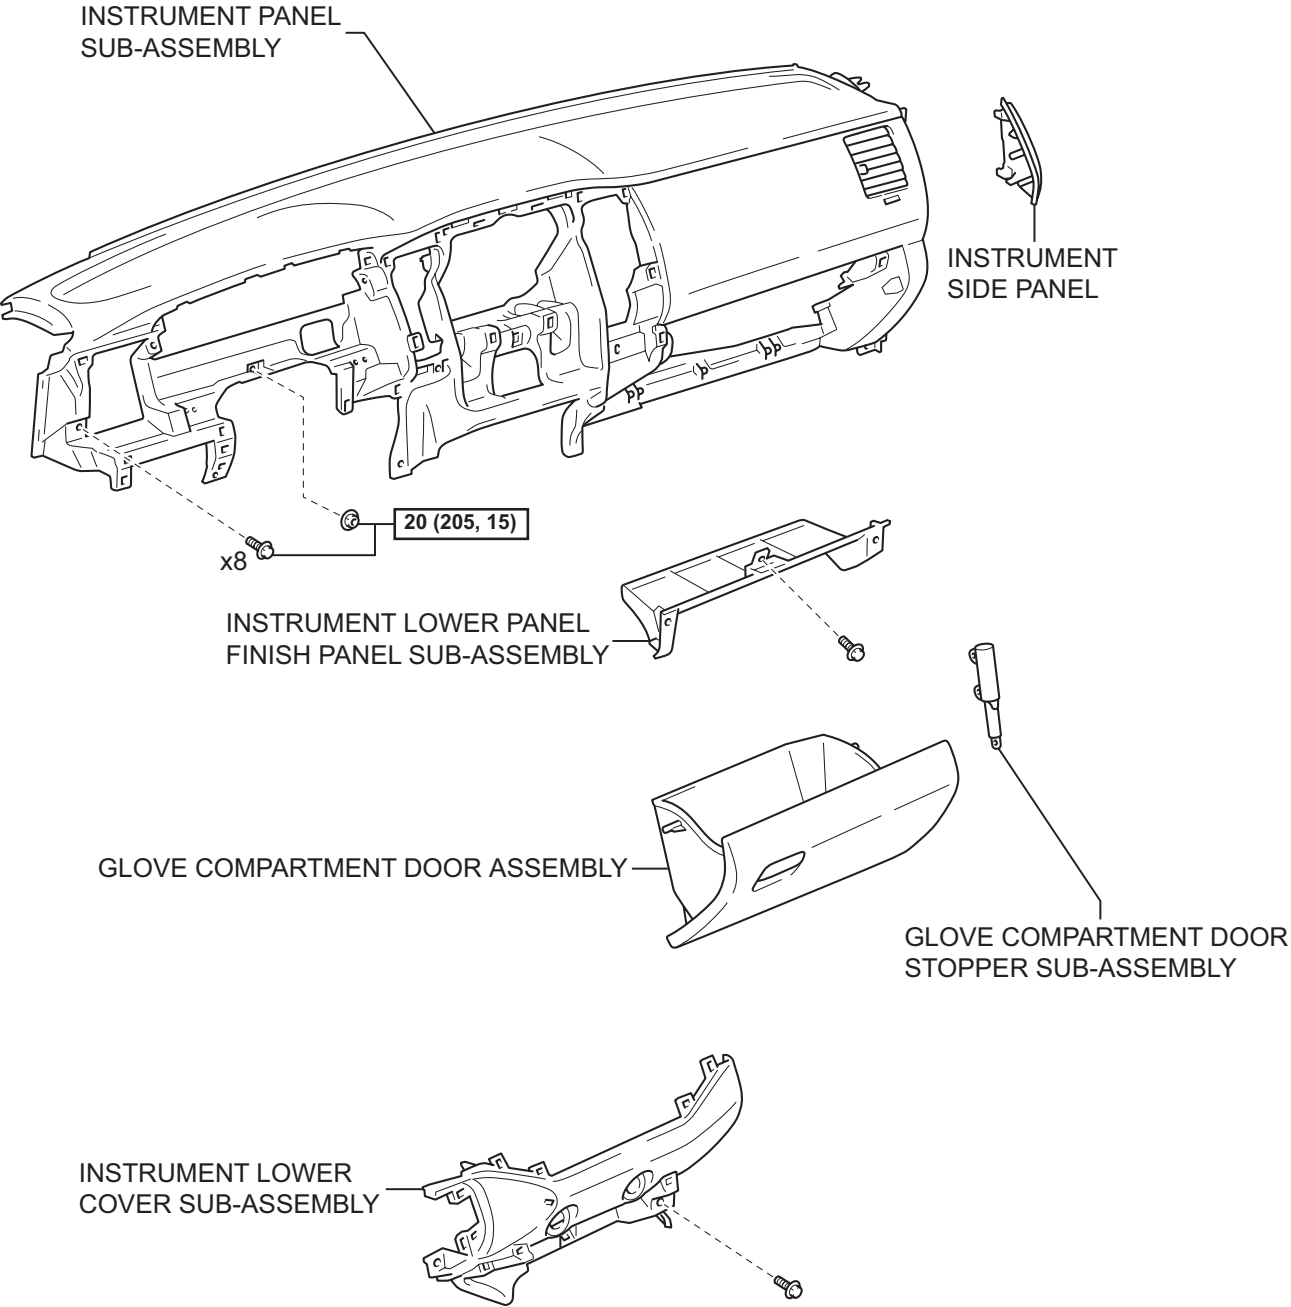

N*m (kgf*cm, ft*lbf) : Specified torque

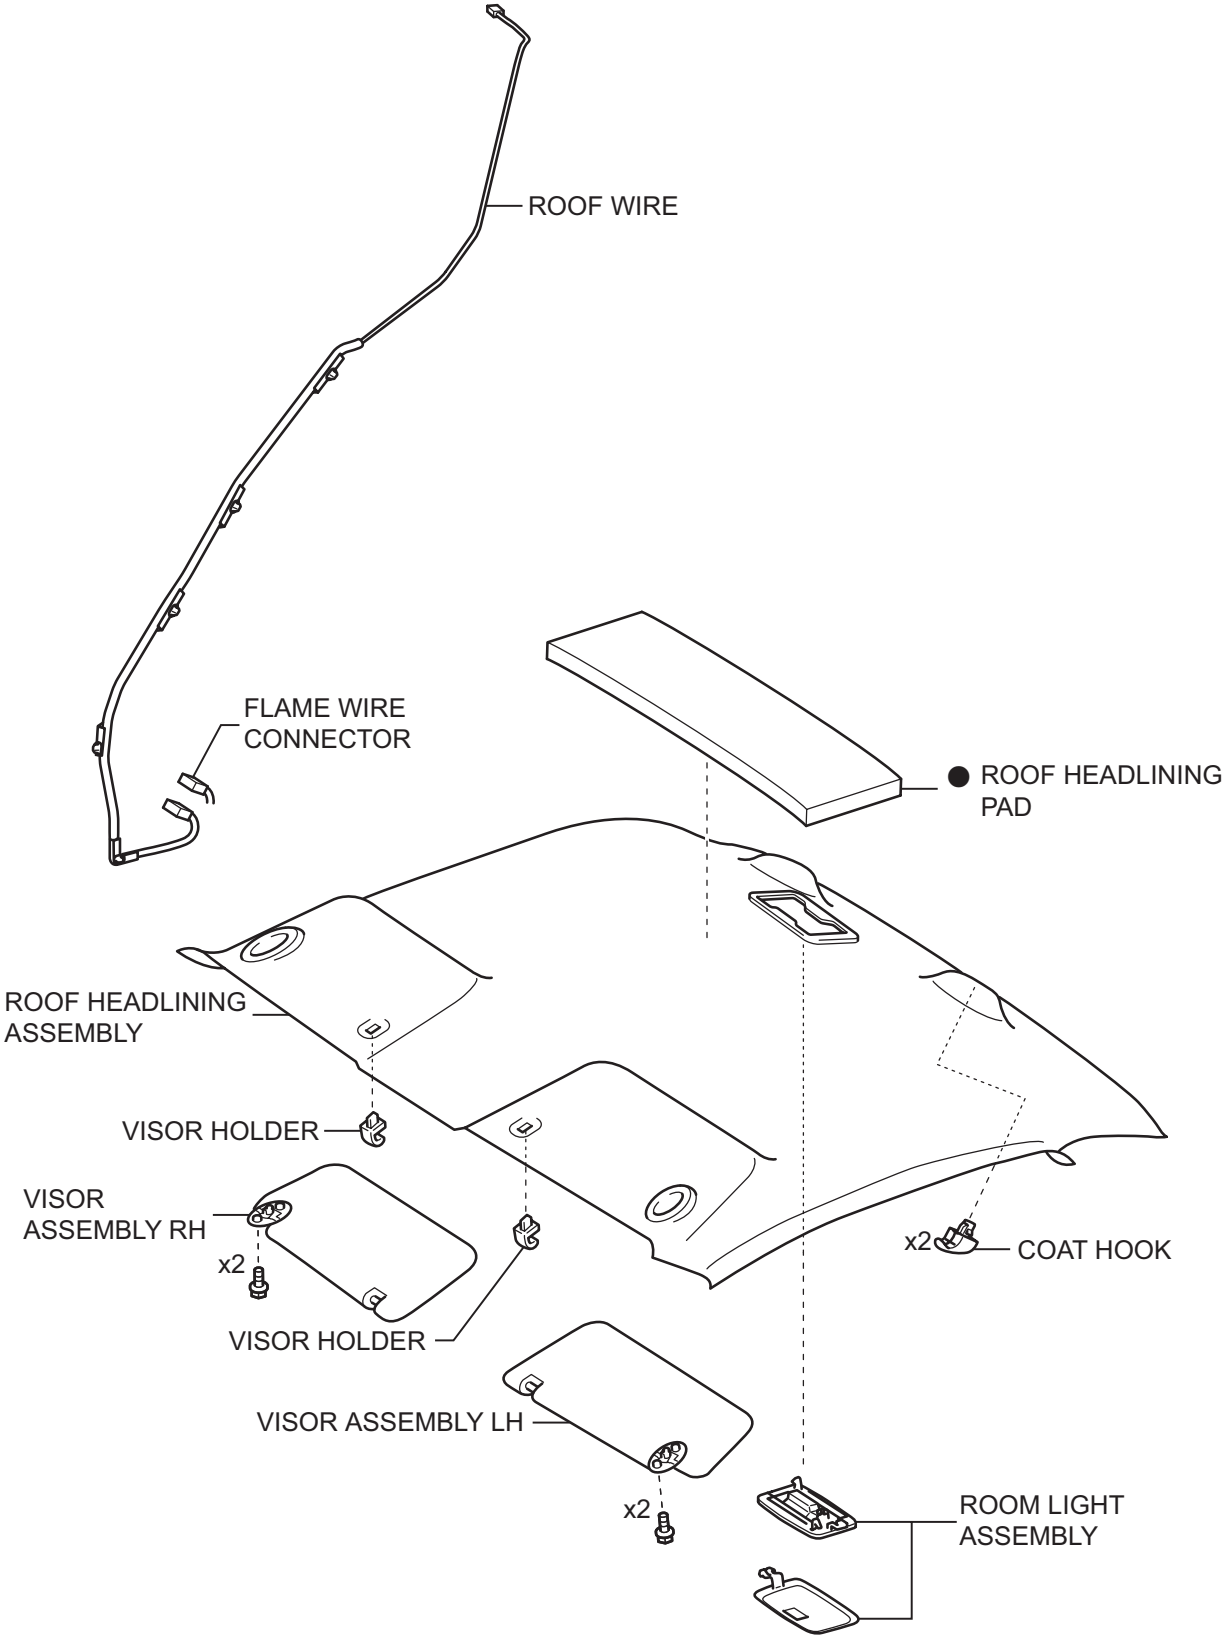

● Non-reusable part

REMOVAL

CAUTION:

Some of these service operations affect the SRS airbag system. Read the precautionary notices concerning the SRS airbag system before servicing (See page [RS-1](#)).

1. DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL

Wait for at least 90 seconds after disconnecting the cable to prevent the airbag from working.

2. REMOVE FRONT FLOOR FOOTREST (See page [IR-1](#))


3. REMOVE FRONT DOOR SCUFF PLATE LH

(a) Disengage the 8 claws and clip, and remove the front door scuff plate.

4. REMOVE FRONT DOOR SCUFF PLATE RH

HINT:

Follow the same procedures as for the front door scuff plate LH.

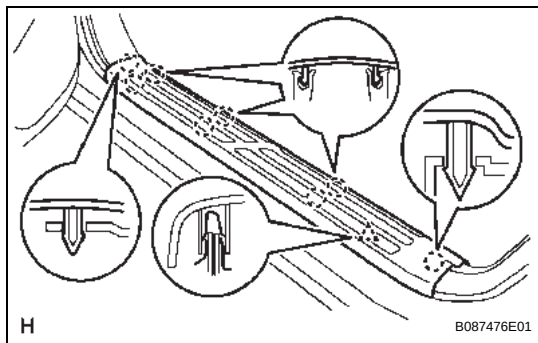

5. REMOVE COWL SIDE TRIM BOARD LH


(a) Remove the clip.

(b) Disengage the 2 clips and remove the cowl side trim board.

6. REMOVE COWL SIDE TRIM BOARD RH

HINT:

Follow the same procedures as for the cowl side trim board LH.

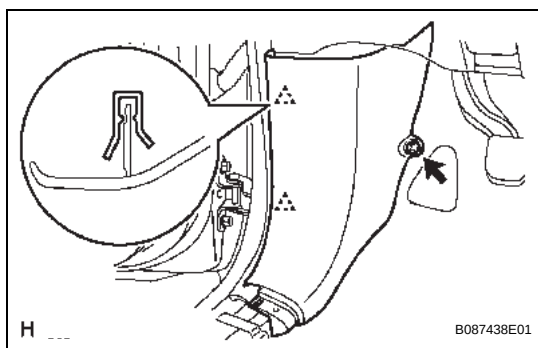


7. REMOVE FRONT DOOR OPENING TRIM WEATHERSTRIP LH


(a) Remove the front door opening trim weatherstrip.

8. REMOVE FRONT DOOR OPENING TRIM WEATHERSTRIP RH

HINT:

Follow the same procedures as for the front door opening trim weatherstrip LH.

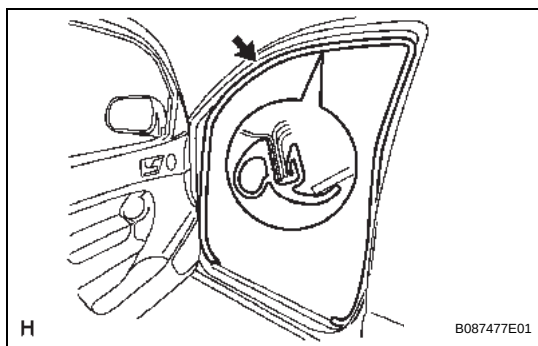

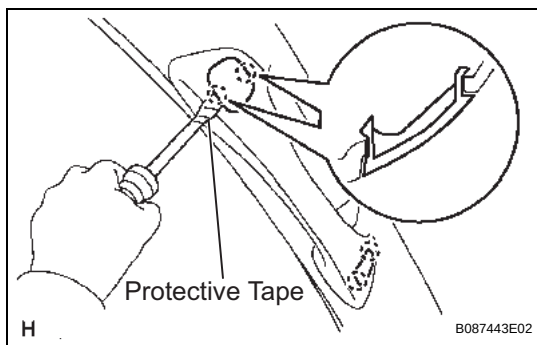


9. REMOVE FRONT PILLAR GARNISH LH


- (a) Using a screwdriver with its tip taped in protective tape, disengage the 2 claws and remove the assist grip plug.

HINT:

Follow the same procedures as for the opposite side.

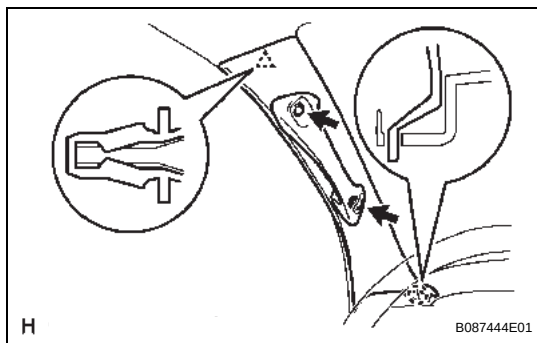

- (b) Remove the 2 screws.
- (c) Disengage the clip and claw and remove the front pillar garnish.

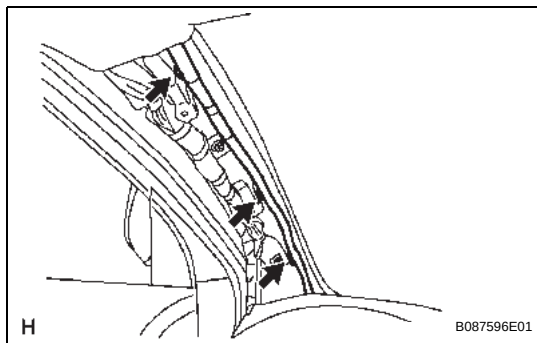

- (d) for LH Side:
 - (1) Using a clip remover, remove the 3 wire harness clamps.

10. REMOVE FRONT PILLAR GARNISH RH

HINT:

Follow the same procedures as for the front pillar garnish LH.

11. REMOVE INSTRUMENT PANEL UNDER TRAY (for Pedal Type Parking Brake) (See page [IP-9](#))

12. REMOVE INSTRUMENT PANEL HOLE COVER (for Lever Type Parking Brake) (See page [IP-9](#))

13. REMOVE REAR CONSOLE UPPER PANEL SUB-ASSEMBLY

- (a) for Automatic Transmission on Separate Seat Type:
 - (1) Remove the rear console upper panel sub-assembly (See page [IP-9](#)).
- (b) for Manual Transmission on Separate Seat Type:
 - (1) Remove the rear console upper panel sub-assembly (See page [IP-9](#)).

14. REMOVE REAR CONSOLE BOX ASSEMBLY (for Separate Seat Type) (See page [IP-10](#))

15. REMOVE INSTRUMENT PANEL CUP HOLDER TRAY (for Automatic Transmission on Separate Seat Type) (See page [IP-10](#))

16. REMOVE FRONT CONSOLE BOX

- (a) for Automatic Transmission on Separate Seat Type:
 - (1) Remove the front console box (See page [IP-10](#)).

- (b) for Manual Transmission on Separate Seat Type:
 - (1) Remove the front console box (See page [IP-11](#)).
- (c) for Automatic Transmission on Bench Seat Type:
 - (1) Remove the front console box (See page [IP-11](#)).
- (d) for Manual Transmission on Bench Seat Type:
 - (1) Remove the front console box (See page [IP-11](#)).

17. REMOVE AIR CONDITIONING CONTROL ASSEMBLY
(See page [IP-12](#))

18. REMOVE RADIO RECEIVER ASSEMBLY (See page [AV-69](#))

19. SEPARATE HOOD LOCK CONTROL LEVER SUB-ASSEMBLY (See page [ED-3](#))

20. REMOVE INSTRUMENT LOWER PANEL FINISH PANEL (See page [IP-12](#))

21. REMOVE INSTRUMENT CLUSTER FINISH PANEL SUB-ASSEMBLY (See page [IP-12](#))

22. REMOVE COMBINATION METER ASSEMBLY (See page [IP-13](#))

23. REMOVE INSTRUMENT CENTER CLUSTER FINISH PANEL SUB-ASSEMBLY (See page [IP-13](#))

24. REMOVE GLOVE COMPARTMENT DOOR ASSEMBLY (See page [IP-13](#))

25. REMOVE INSTRUMENT LOWER PANEL FINISH PANEL SUB-ASSEMBLY (See page [IP-14](#))

26. REMOVE INSTRUMENT LOWER PANEL (See page [IP-14](#))

27. REMOVE INSTRUMENT LOWER COVER SUB-ASSEMBLY (See page [IP-14](#))

28. REMOVE INSTRUMENT SIDE PANEL (See page [IP-14](#))

29. DISCONNECT PASSENGER AIRBAG CONNECTOR
(See page [RS-576](#))


30. REMOVE INSTRUMENT PANEL SUB-ASSEMBLY
(See page [IP-14](#))


31. REMOVE BACK PANEL TRIM COVER

- (a) for Separate Seat Type and Bench Seat Type:

HINT:
Follow the same procedures as for the opposite side (for Bench Seat Type).


 - (1) Disengage the 6 claws and remove the back panel trim cover.

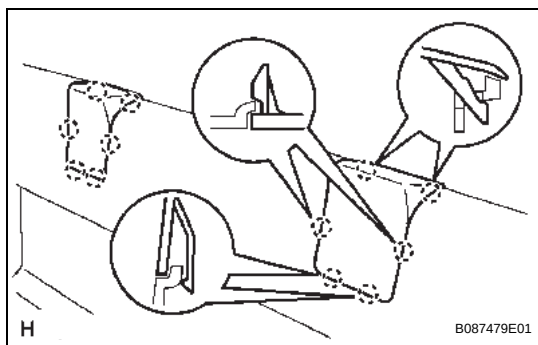

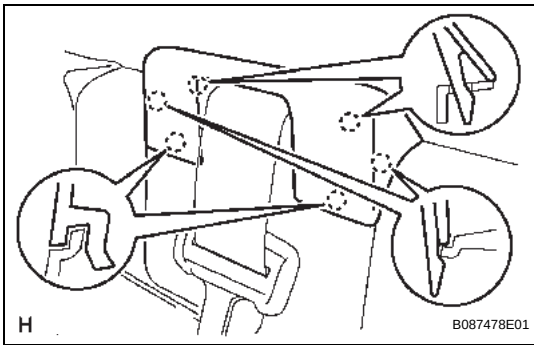

(b) for Bench Seat Type:


- (1) Disengage the 6 claws and remove the back panel trim cover.

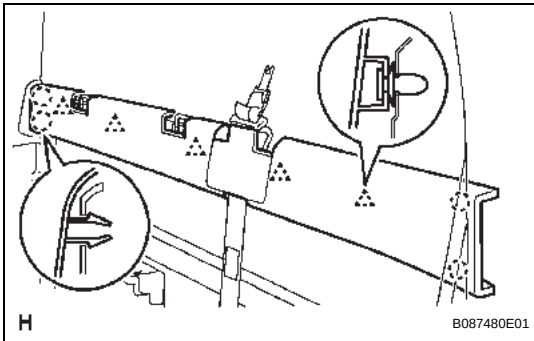

32. REMOVE BACK PANEL UPPER GARNISH


- (a) Disengage the 4 claws and 5 clips, and remove the back panel upper garnish.

33. REMOVE JACK ASSEMBLY (for Separate Seat Type)

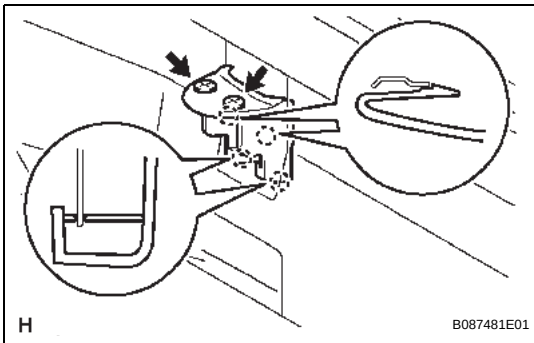


34. REMOVE BACK PANEL TRIM COVER (for Separate Seat Type)

- (a) Remove the 2 clips.
- (b) Disengage the 4 claws and remove the back panel trim cover.

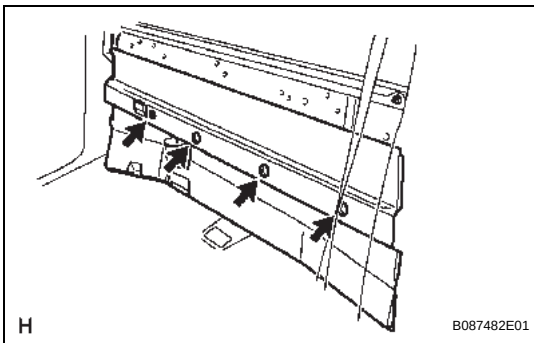

35. REMOVE BACK PANEL TRIM (for Separate Seat Type)

- (a) Remove the 4 clips and back panel trim.

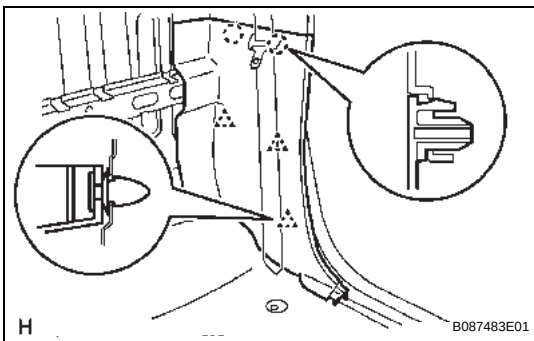


36. REMOVE QUARTER TRIM LOWER PANEL LH

- (a) Disengage the 2 claws and 3 clips, and remove the quarter trim lower panel.


37. REMOVE QUARTER TRIM LOWER PANEL RH

HINT:


Follow the same procedures as for the quarter trim lower panel LH.

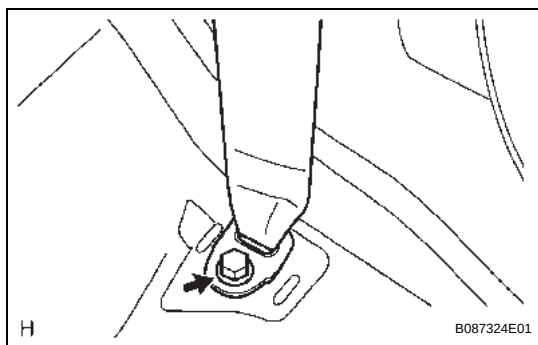**38. REMOVE QUARTER INSIDE TRIM BOARD LH**


- (a) for LH Side and Separate Seat Type RH side:
 (1) Remove the bolt and the floor anchor of the front seat outer belt.

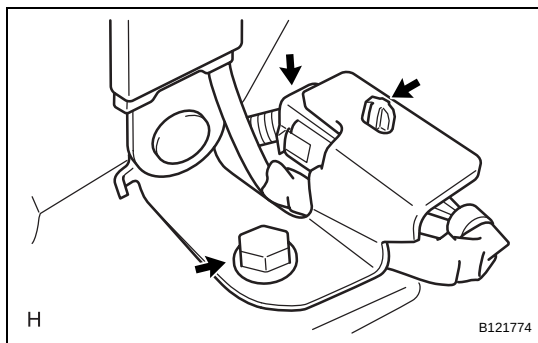

- (b) for Bench Seat Type RH Side:
 (1) Remove the bolt and the floor anchor of the front seat outer belt.
 (2) Disconnect the belt tension sensor connector.
 (3) Remove the wiring harness clamp.

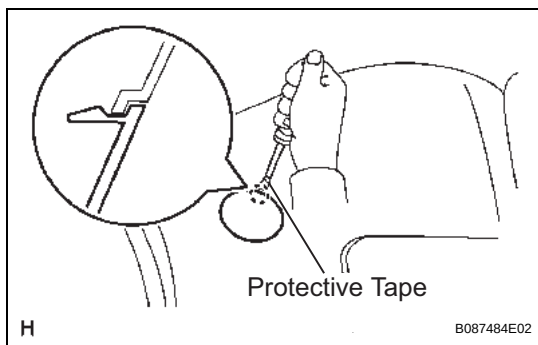

- (c) Using a screwdriver with its tip taped in protective tape, disengage the claw and open the cover.

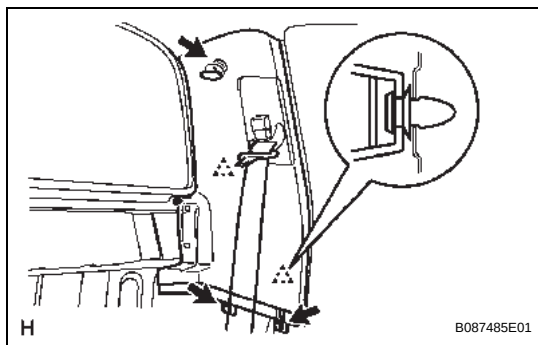


- (d) Remove the 3 screws.
 (e) Disengage the 2 clips and remove the quarter trim board.


39. REMOVE QUARTER INSIDE TRIM BOARD RH

HINT:


Follow the same procedures as for the quarter trim board LH.

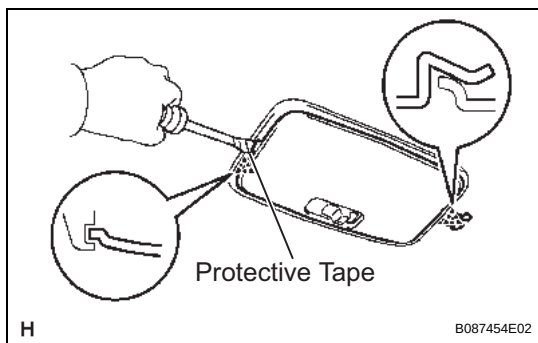**40. REMOVE ROOM LIGHT ASSEMBLY**

- (a) Using a screwdriver with its tip taped in protective tape, disengage the 2 claws and remove the room light lens.

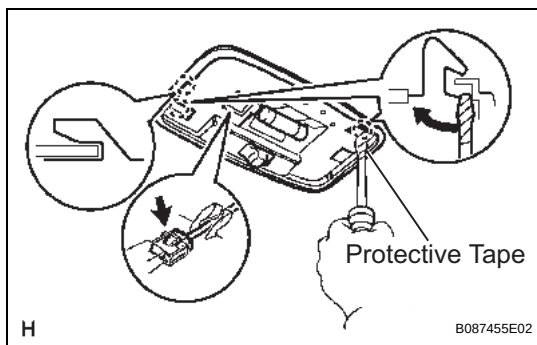

- (b) Using a screwdriver with its tip taped in protective tape, disengage the 3 claws.
- (c) Disconnect the room light connector and remove the room light.

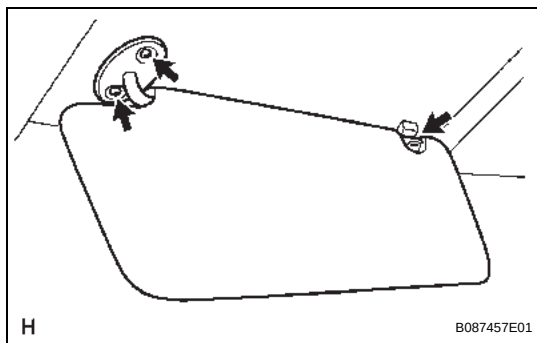


41. REMOVE VISOR ASSEMBLY LH

- (a) Remove the 2 screws.
- (b) Remove the visor from the visor holder.

42. REMOVE VISOR ASSEMBLY RH

HINT:

Follow the same procedures as for the visor assembly LH.

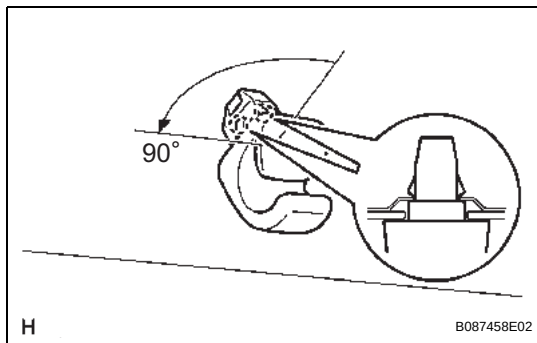


43. REMOVE VISOR HOLDER

HINT:

Follow the same procedures as for the opposite side.

- (a) Turn the visor holder 90° counterclockwise and remove it.

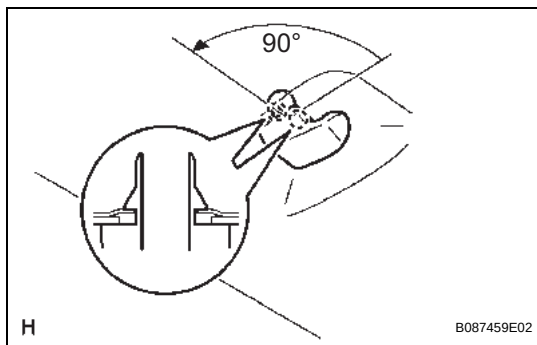


44. REMOVE COAT HOOK

HINT:


Follow the same procedures as for the opposite side.

- (a) Turn the coat hook 90° counterclockwise and remove it.

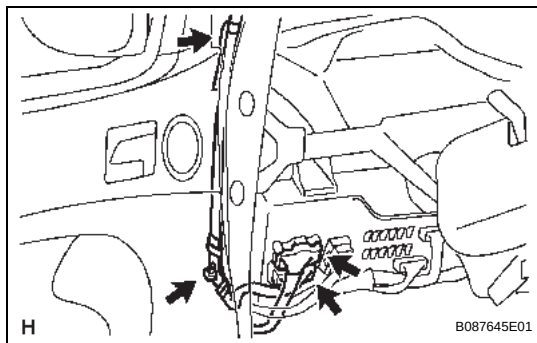


45. REMOVE ROOF HEADLINING ASSEMBLY

- (a) Disconnect the frame wire connector.
- (b) Disconnect the roof wire connector.
- (c) Using a clip remover, remove the 2 wire harness clamps.

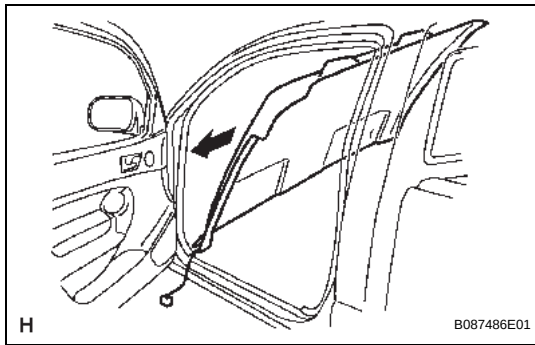


(d) Remove the roof headlining from the vehicle.

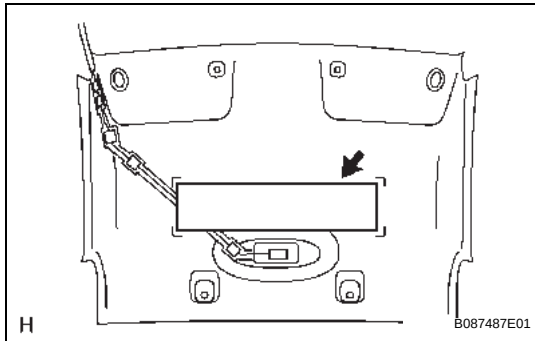

46. REMOVE ROOF HEADLINING PAD

(a) Remove the roof headlining pad from the roof headlining.

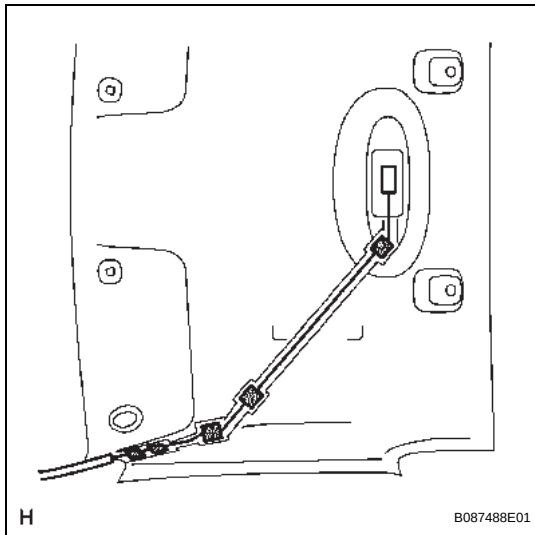

47. REMOVE ROOF WIRE

(a) Remove the 5 adhesive tapes and roof wire.


INSTALLATION

CAUTION:

Some of these service operations affect the SRS airbag system. Read the precautionary notices concerning the SRS airbag system before servicing (See page [RS-1](#)).


1. INSTALL ROOF WIRE

- (a) Install the roof wire with 5 new adhesive tapes, as shown in the illustration.

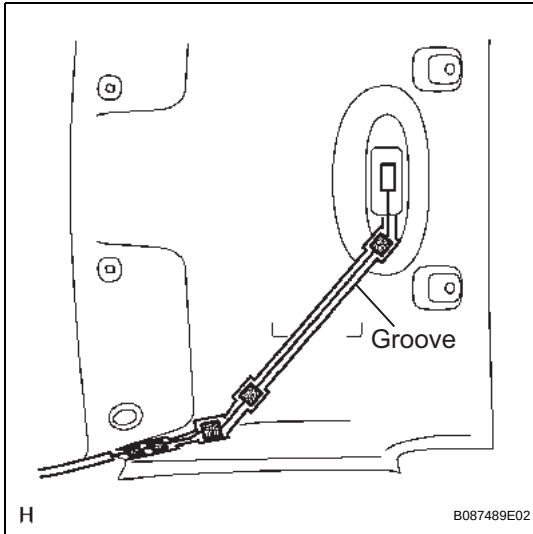


2. INSTALL ROOF HEADLINING PAD

- (a) Install a new roof headlining pad onto the roof headlining, as shown in the illustration.

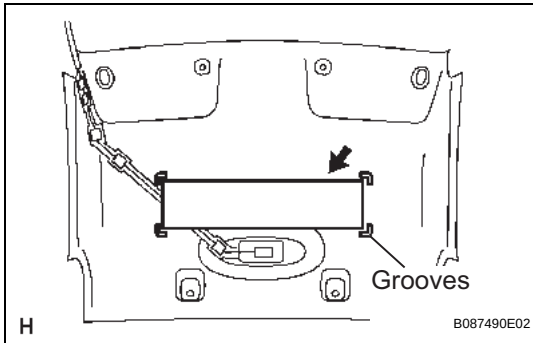



3. INSTALL ROOF HEADLINING ASSEMBLY

- (a) Install the roof headlining into the vehicle.

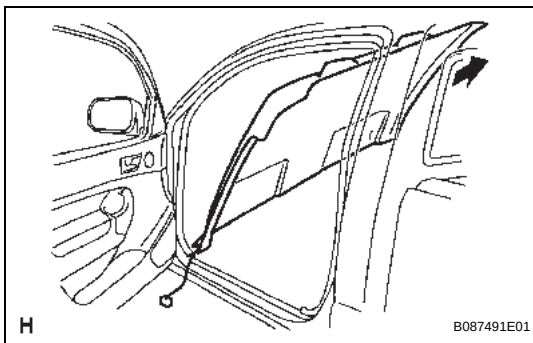

- (b) Install the 2 wire harness clamps.
- (c) Connect the roof wire connector.
- (d) Connect the frame wire connector.

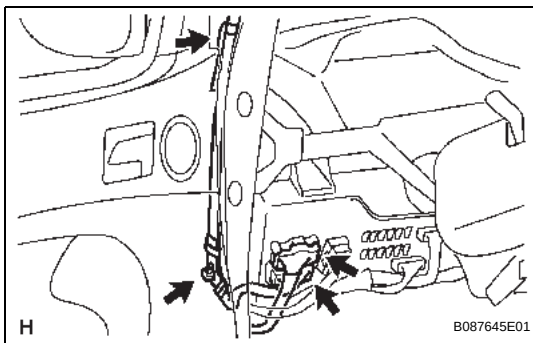


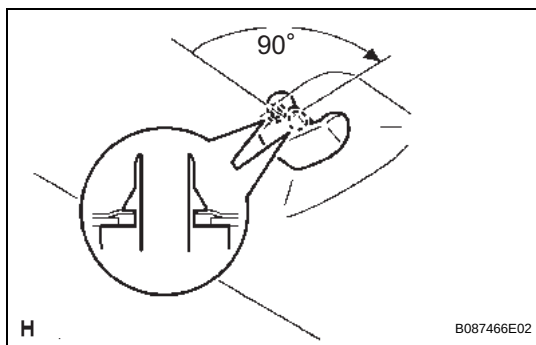**4. INSTALL COAT HOOK**

HINT:

Follow the same procedures as for the opposite side.


- (a) Turn the coat hook 90° clockwise and install it.

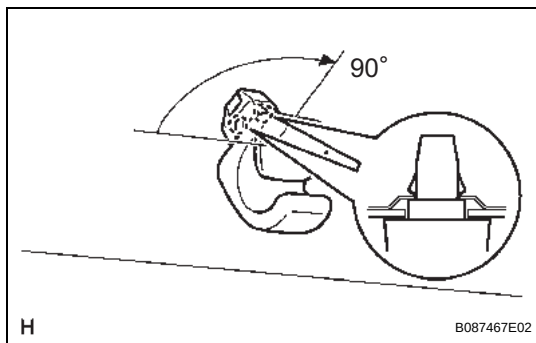**5. INSTALL VISOR HOLDER**

HINT:

Follow the same procedures as for the opposite side.

- (a) Turn the visor holder 90° clockwise and install it.

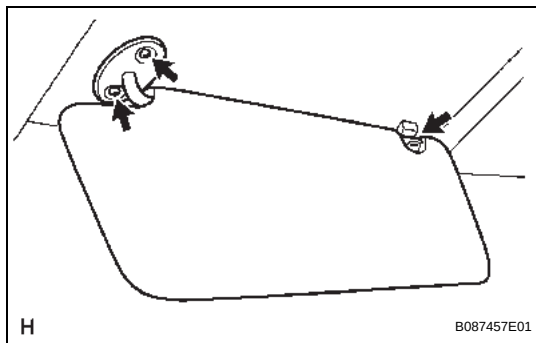
**6. INSTALL VISOR ASSEMBLY LH**

- (a) Install the visor into the visor holder.
(b) Install the 2 screws.


7. INSTALL VISOR ASSEMBLY RH

HINT:


Follow the same procedures as for the visor assembly LH.

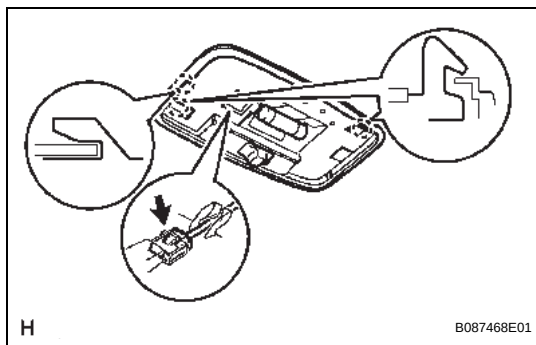**8. INSTALL ROOM LIGHT ASSEMBLY**

- (a) Connect the room light connector.
(b) Engage the 3 claws and install the room light.

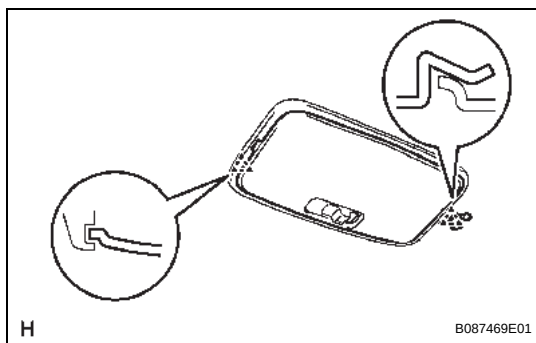


- (c) Engage the 2 claws and install the room light lens.

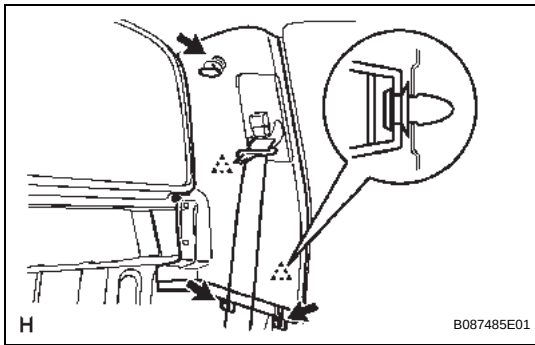


9. INSTALL QUARTER INSIDE TRIM BOARD LH

- Engage the 2 clips and install the quarter trim board.
- Tighten the 3 screws.

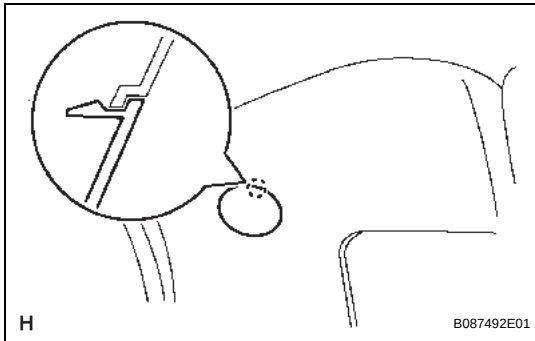

- Engage the claw and close the cover.

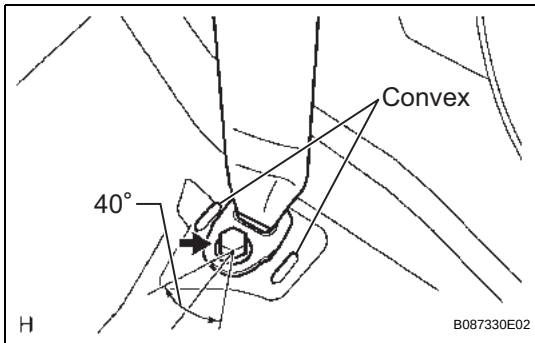


- for LH Side and Separate Seat Type RH Side:

- Install the floor anchor of the front seat outer belt with the bolt.

Torque: 42 N*m (430 kgf*cm, 31 ft.*lbf)

NOTICE:

- Make sure that the floor anchor of the front seat outer belt is oriented in the correct direction when installing.
- Be careful not to place the floor anchor of the front seat outer belt over the convex areas of the floor panel.

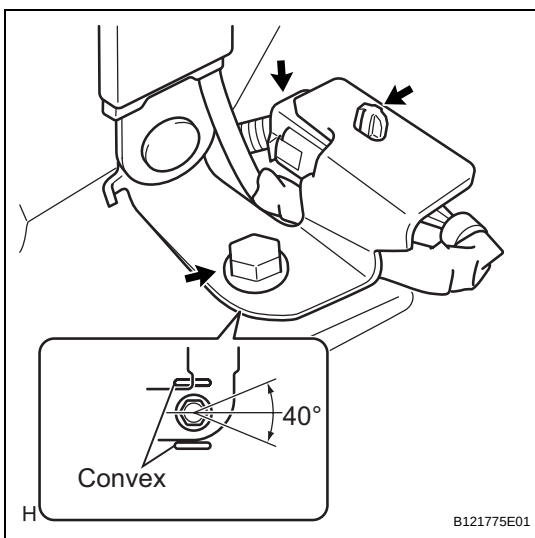

- for Bench Seat Type RH Side:

- Install the wiring harness clamp.
- Connect the belt tension sensor connector.
- Install the floor anchor of the front seat outer belt with the bolt.

Torque: 42 N*m (430 kgf*cm, 31 ft.*lbf)


NOTICE:

- Make sure that the floor anchor of the front seat outer belt is oriented in the correct direction when installing.
- Be careful not to place the floor anchor of the front seat outer belt over the convex areas of the floor panel.

10. INSTALL QUARTER INSIDE TRIM BOARD RH

HINT:

Follow the same procedures as for the quarter inside trim board LH.

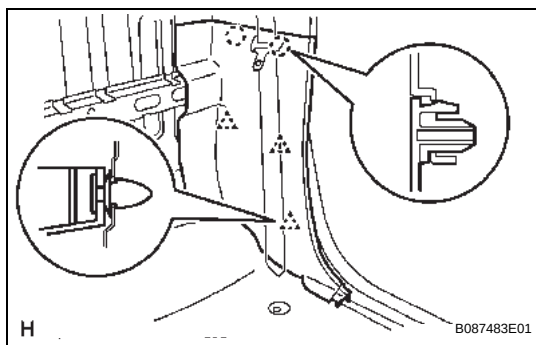
**11. INSTALL QUARTER TRIM LOWER PANEL LH**

- (a) Engage the 2 claws and 3 clips, and install the quarter trim lower panel.


12. INSTALL QUARTER TRIM LOWER PANEL RH

HINT:


Follow the same procedures as for the quarter trim lower panel LH.

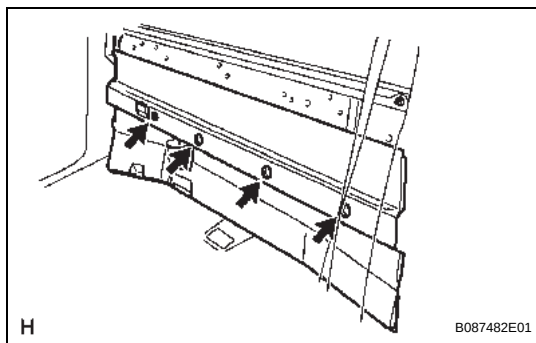**13. INSTALL BACK PANEL TRIM COVER (for Separate Seat Type)**


- (a) Install the back panel trim with the 4 clips.

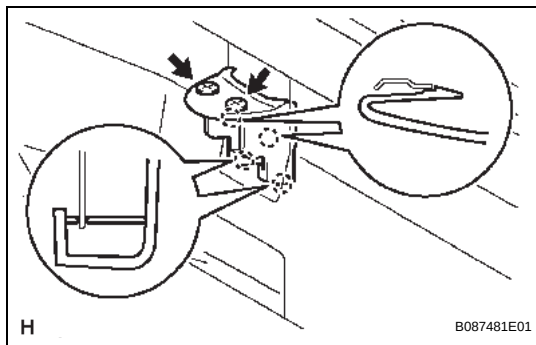**14. INSTALL BACK PANEL TRIM COVER (for Separate Seat Type)**

- (a) Engage the 4 claws and install the back panel trim cover.
(b) Install the 2 clips.

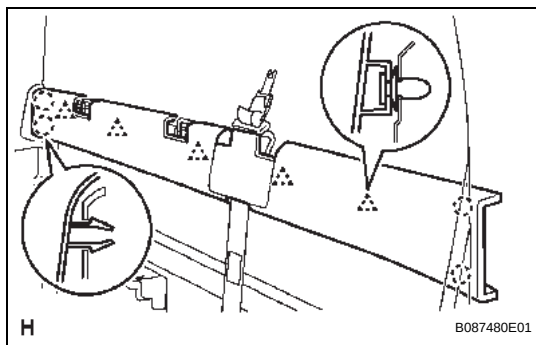15. INSTALL JACK ASSEMBLY (for Separate Seat Type)**16. INSTALL BACK PANEL UPPER GARNISH**

- (a) Engage the 4 claws and 5 clips, and install the back panel upper garnish.

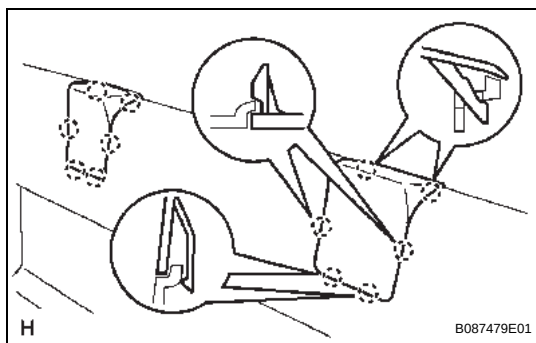
**17. INSTALL BACK PANEL TRIM COVER**

- (a) for Separate Seat Type and Bench Seat Type:

- (1) Engage the 6 claws and install the back panel trim cover.

HINT:

Follow the same procedures as for the opposite side (for Bench Seat Type).

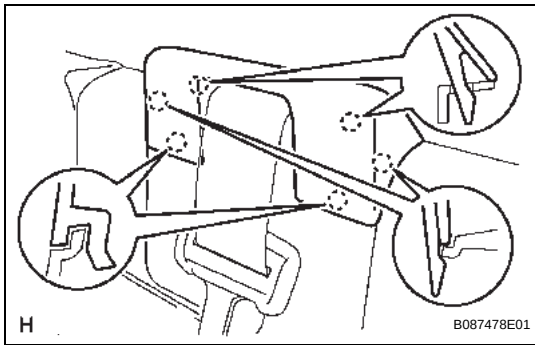

(b) for Bench Seat Type:

- (1) Engage the 6 claws and install the back panel trim cover.


18. **INSTALL INSTRUMENT PANEL SUB-ASSEMBLY** (See page [IP-18](#))
19. **CONNECT PASSENGER AIRBAG CONNECTOR**
20. **INSTALL INSTRUMENT SIDE PANEL** (See page [IP-20](#))
21. **INSTALL INSTRUMENT LOWER COVER SUB-ASSEMBLY** (See page [IP-20](#))
22. **INSTALL INSTRUMENT LOWER PANEL** (See page [IP-20](#))
23. **INSTALL INSTRUMENT LOWER PANEL FINISH PANEL SUB-ASSEMBLY** (See page [IP-20](#))
24. **INSTALL GLOVE COMPARTMENT DOOR ASSEMBLY** (See page [IP-20](#))
25. **INSTALL INSTRUMENT CENTER CLUSTER FINISH PANEL SUB-ASSEMBLY** (See page [IP-21](#))
26. **INSTALL COMBINATION METER ASSEMBLY** (See page [IP-21](#))
27. **INSTALL INSTRUMENT CLUSTER FINISH PANEL SUB-ASSEMBLY** (See page [IP-21](#))
28. **INSTALL INSTRUMENT LOWER PANEL FINISH PANEL** (See page [IP-22](#))
29. **CONNECT HOOD LOCK CONTROL LEVER SUB-ASSEMBLY** (See page [ED-8](#))
30. **INSTALL RADIO RECEIVER ASSEMBLY** (See page [AV-70](#))
31. **INSTALL AIR CONDITIONING CONTROL ASSEMBLY** (See page [IP-22](#))
32. **INSTALL FRONT CONSOLE BOX**
 - (a) for Automatic Transmission on Separate Seat Type:
 - (1) Install the front console box (See page [IP-24](#)).
 - (b) for Automatic Transmission on Bench Seat Type:
 - (1) Install the front console box (See page [IP-23](#)).
 - (c) for Manual Transmission on Separate Seat Type:
 - (1) Install the front console box (See page [IP-23](#)).
 - (d) for Manual Transmission on Bench Seat Type:
 - (1) Install the front console box (See page [IP-22](#)).
33. **INSTALL INSTRUMENT PANEL CUP HOLDER TRAY** (for Automatic Transmission on Separate Seat Type) (See page [IP-24](#))
34. **INSTALL REAR CONSOLE BOX ASSEMBLY** (for Separate Seat Type) (See page [IP-24](#))

35. INSTALL REAR CONSOLE UPPER PANEL SUB-ASSEMBLY


- (a) for Automatic Transmission on Separate Seat Type:
 - (1) Install the rear console upper panel sub-assembly (See page [IP-25](#)).
- (b) for Manual Transmission on Separate Seat Type:
 - (1) Install the rear console upper panel sub-assembly (See page [IP-25](#)).

36. INSTALL INSTRUMENT PANEL UNDER TRAY (for Pedal Type Parking Brake) (See page [IP-25](#))**37. INSTALL INSTRUMENT PANEL HOLE COVER (for Lever Type Parking Brake) (See page [IP-25](#))****38. INSTALL FRONT PILLAR GARNISH LH**

- (a) for LH Side:
 - (1) Install the 3 wire harness clamps.

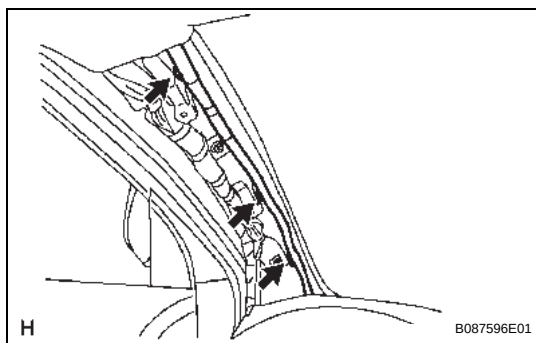

- (b) Engage the claw and clip, and install the front pillar garnish.
- (c) Tighten the 2 screws.

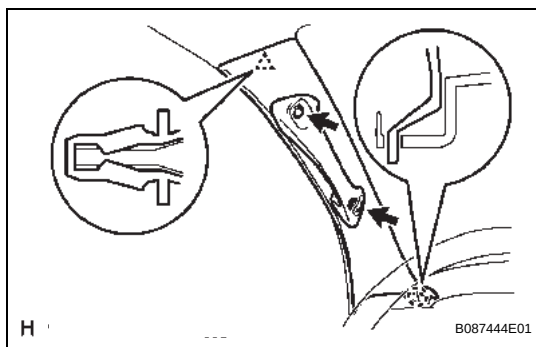



- (d) Engage the 2 claws and install the assist grip plug.

39. INSTALL FRONT PILLAR GARNISH RH

HINT:

Follow the same procedures as for the front pillar garnish LH.

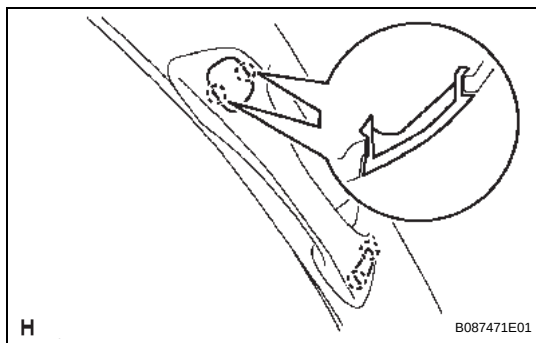

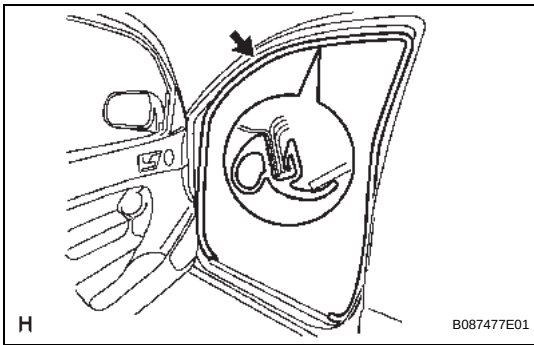


40. INSTALL FRONT DOOR OPENING TRIM WEATHERSTRIP LH

(a) Install the front door opening trim weatherstrip.

41. INSTALL FRONT DOOR OPENING TRIM WEATHERSTRIP RH

HINT:

Follow the same procedures as for the front door opening trim weatherstrip LH.

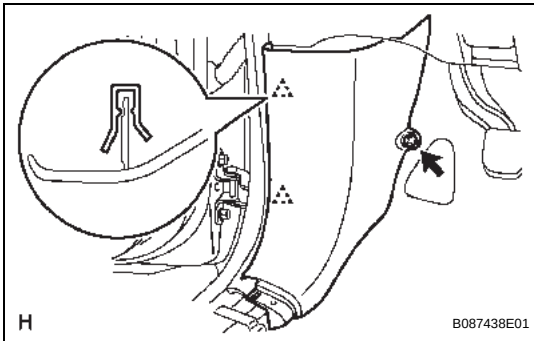

42. INSTALL COWL SIDE TRIM BOARD LH


(a) Engage the 2 clips and install the cowl side trim board.

(b) Install the clip.

43. INSTALL COWL SIDE TRIM BOARD RH

HINT:

Follow the same procedures as for the cowl side trim board LH.

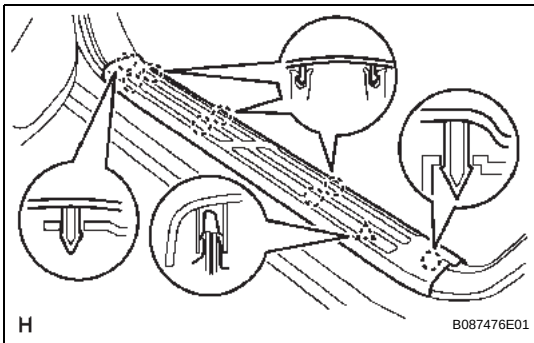

44. INSTALL FRONT DOOR SCUFF PLATE LH

(a) Engage the 8 claws and clip, and install the front door scuff plate.

45. INSTALL FRONT DOOR SCUFF PLATE RH

HINT:

Follow the same procedures as for the front door scuff plate LH.

46. INSTALL FRONT FLOOR FOOTREST (See page [IR-1](#))

47. CONNECT CABLE TO NEGATIVE BATTERY TERMINAL

Torque: 3.9 N*m (40 kgf*cm, 35 in.*lbf)


48. INSPECT SRS WARNING LIGHT


(See page [RS-28](#))

ROOF HEADLINING (for Access Cab)

COMPONENTS


IR

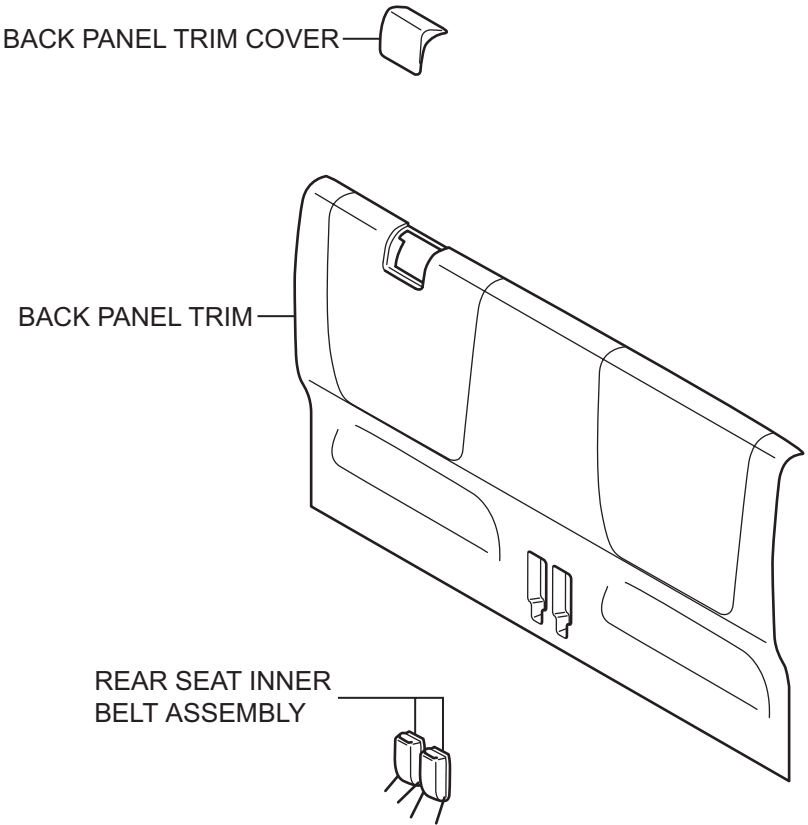

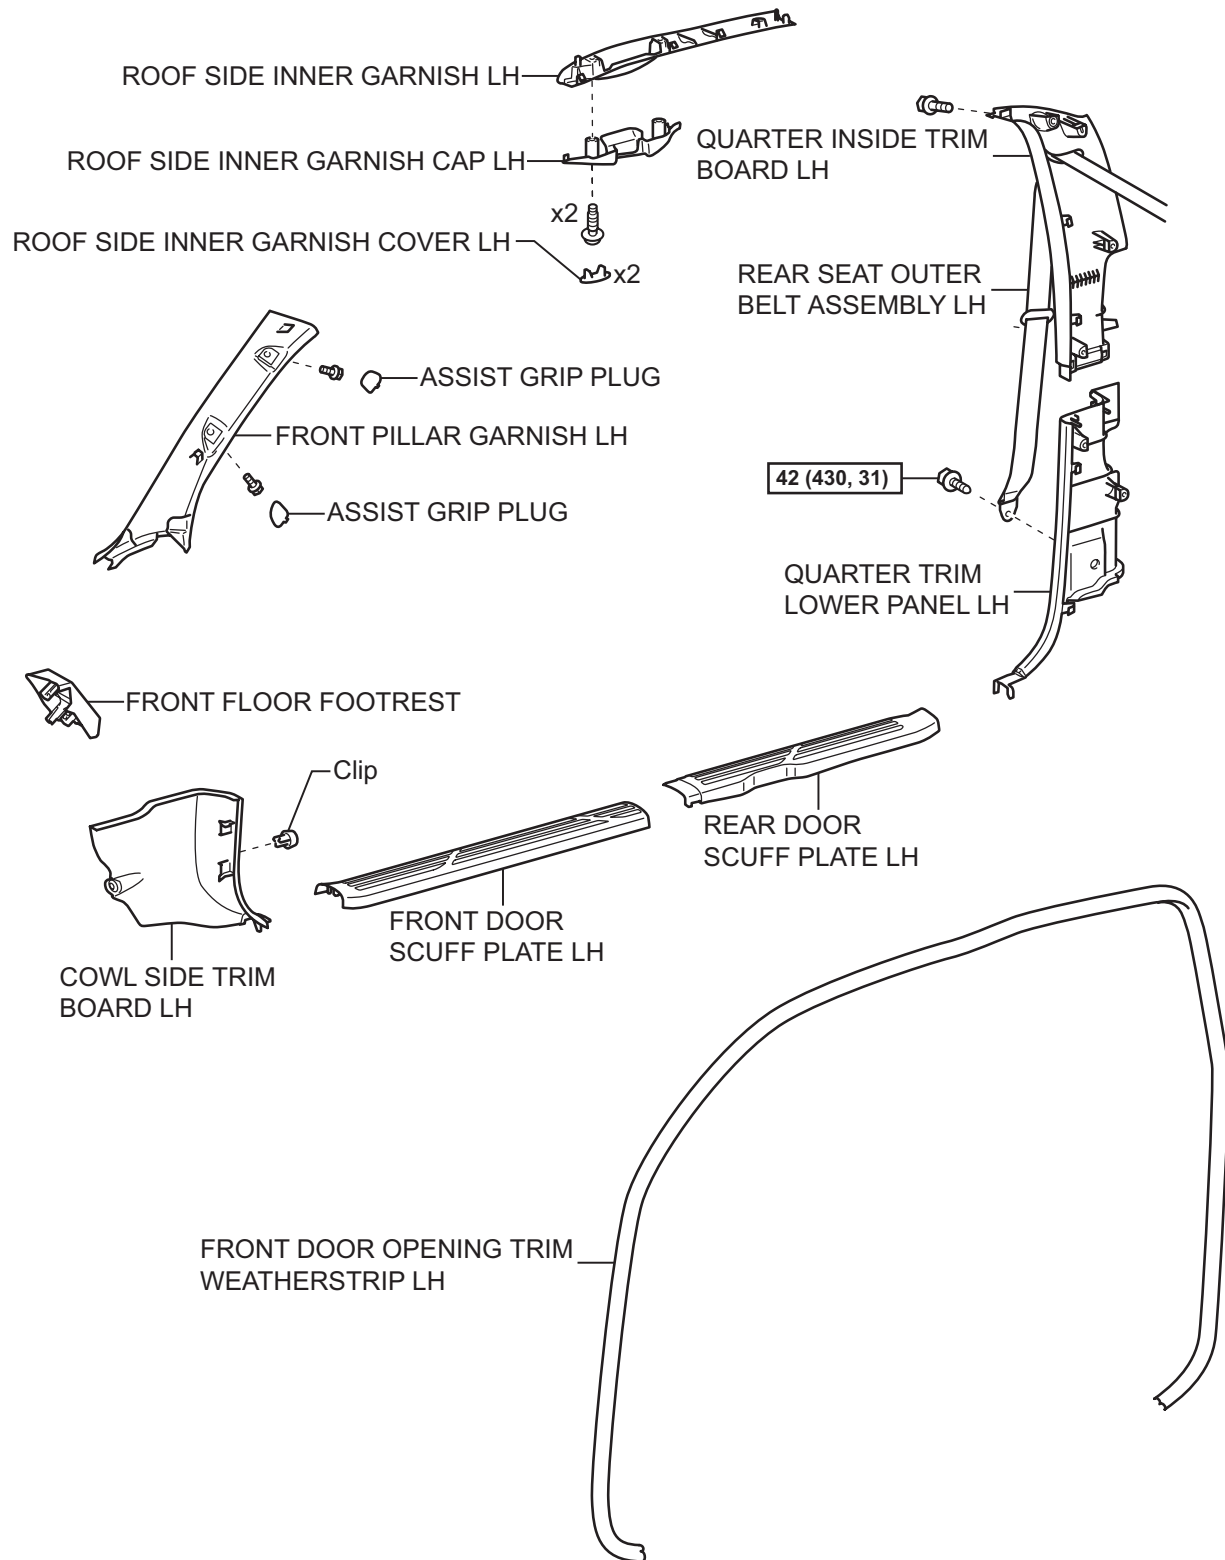


$\boxed{\text{N*m (kgf*cm, ft*lb)}} : \text{Specified torque}$


IR

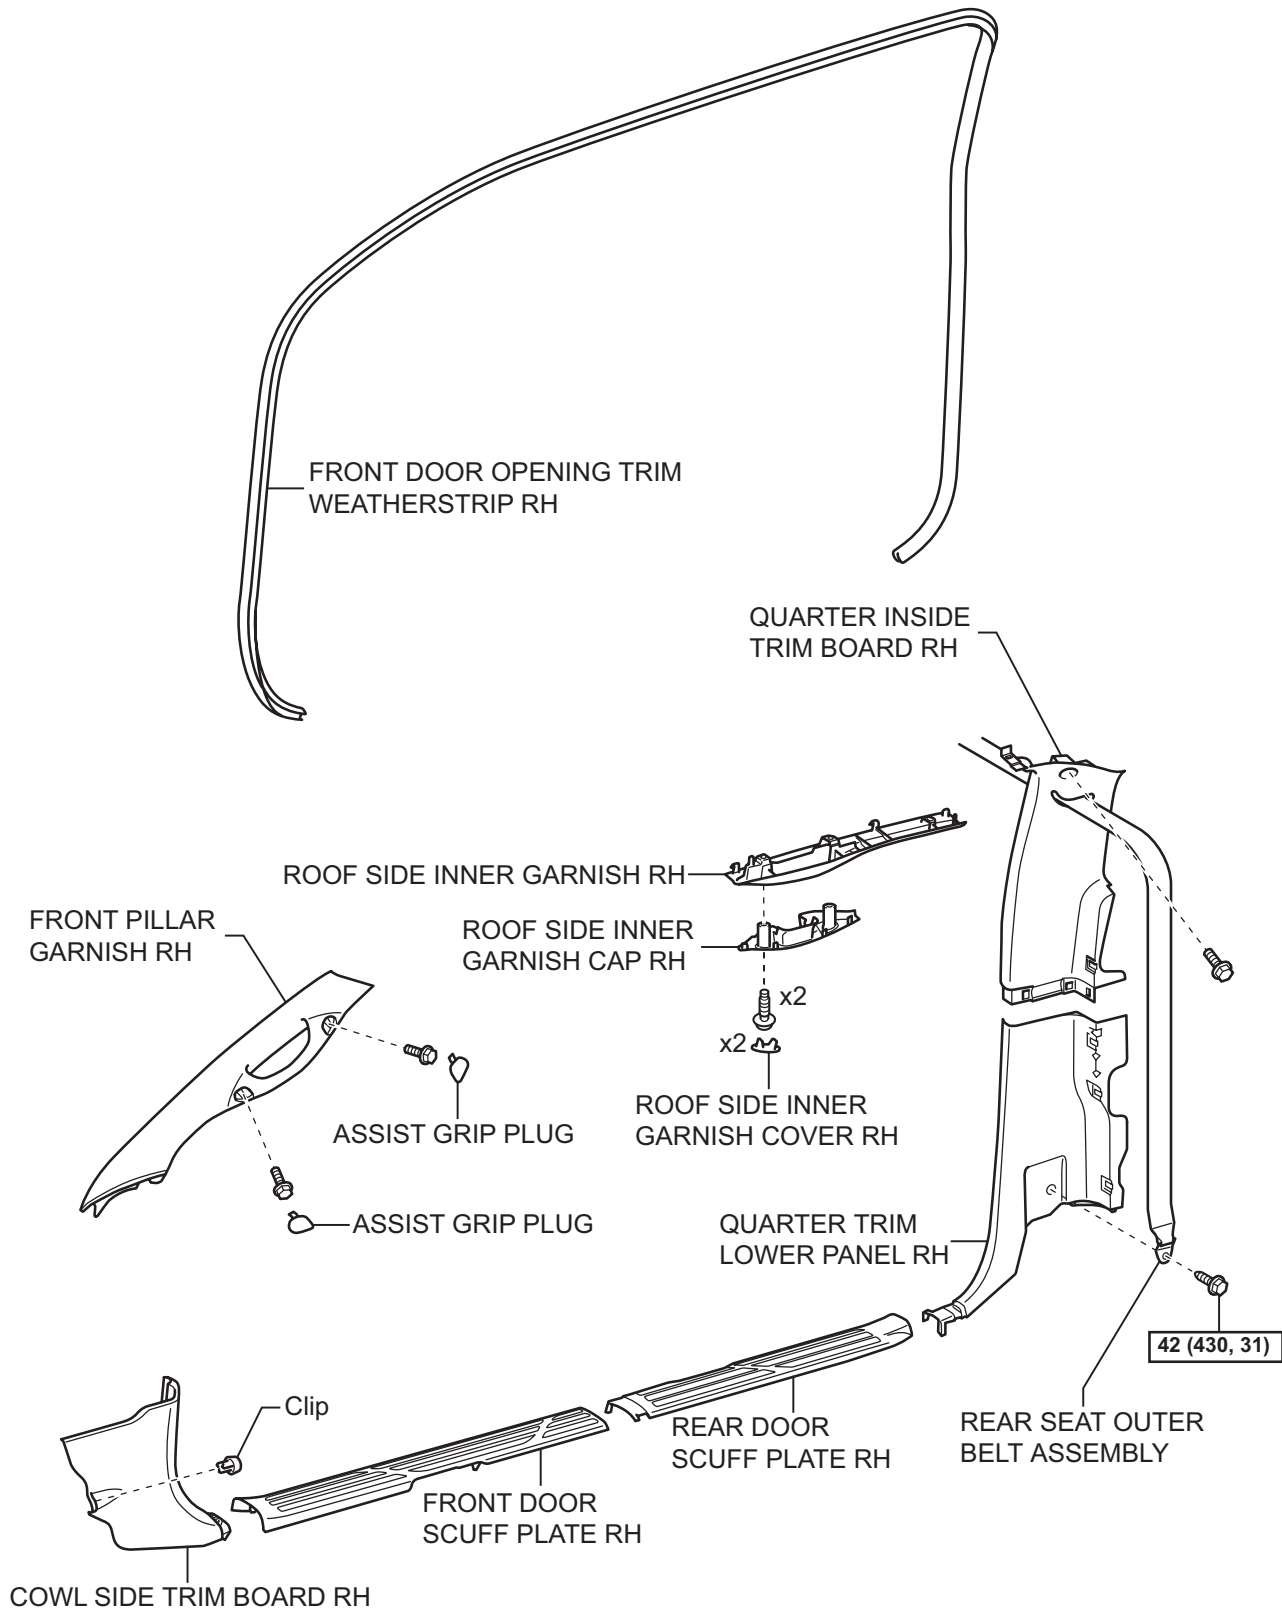









N*m (kgf*cm, ft*lbf) : Specified torque

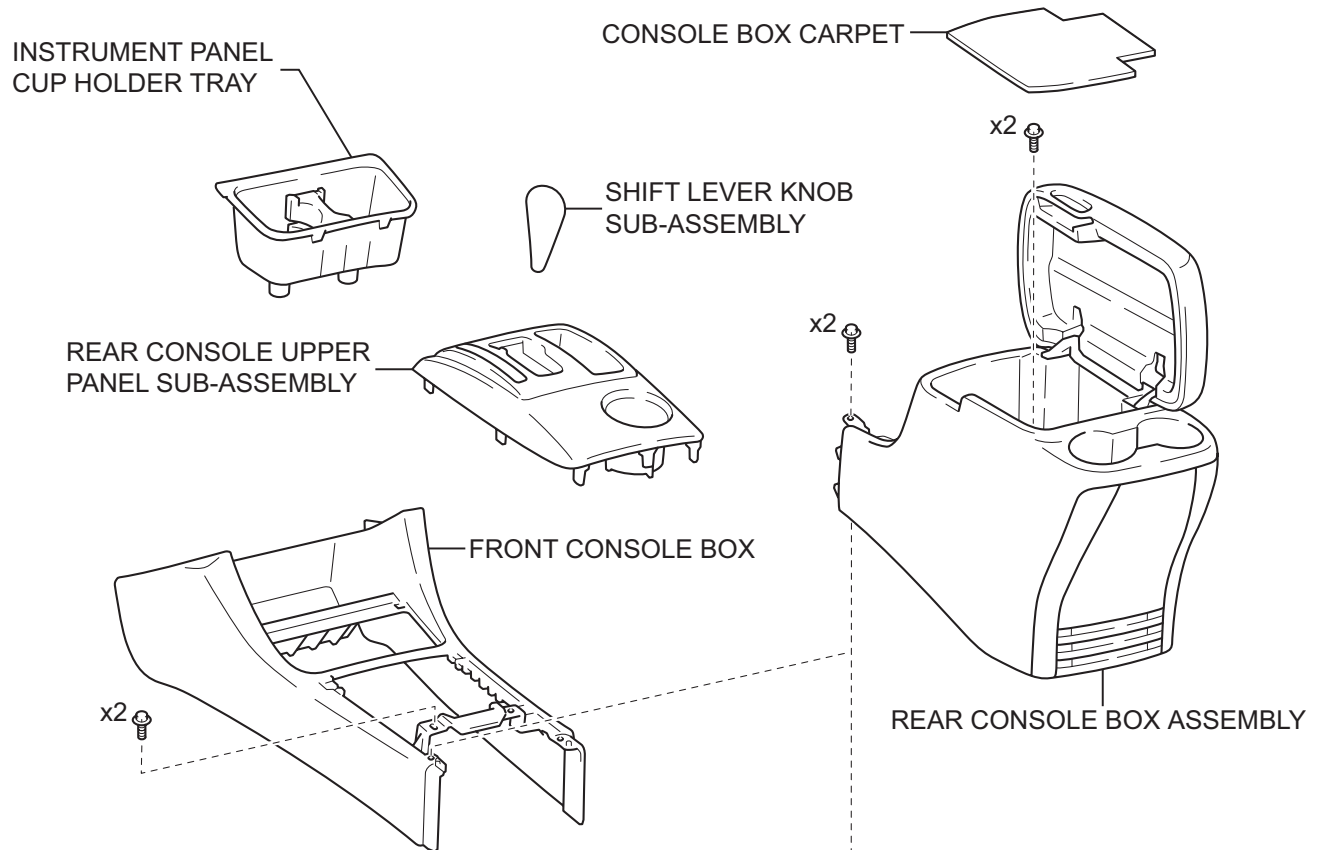


for Manual Transmission:

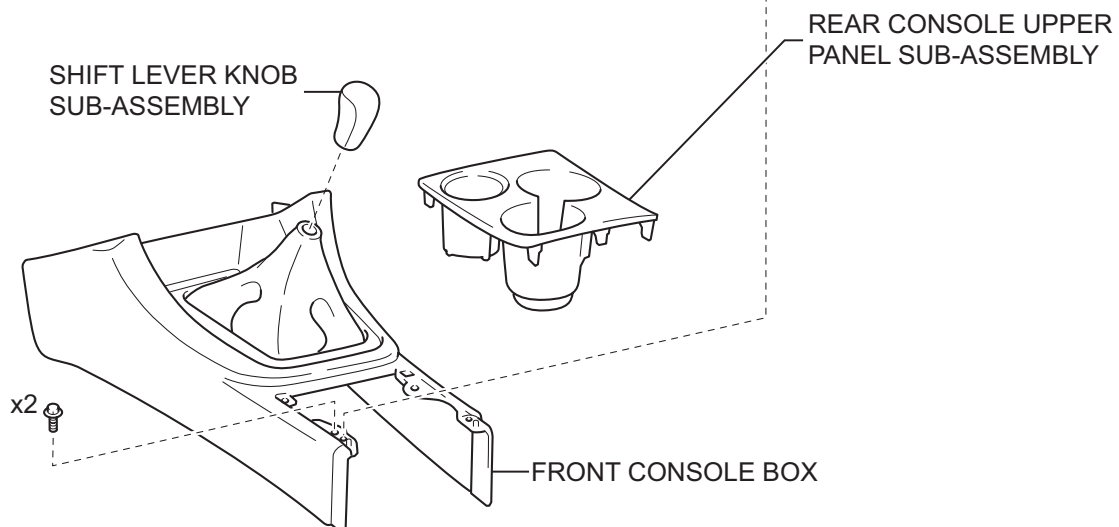


IR

 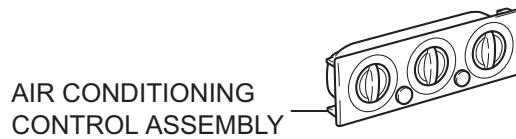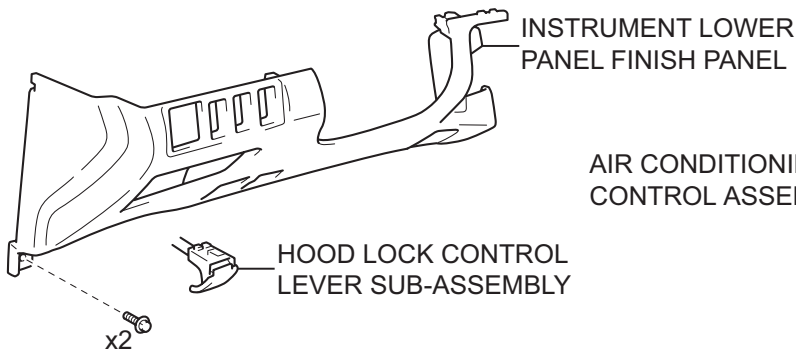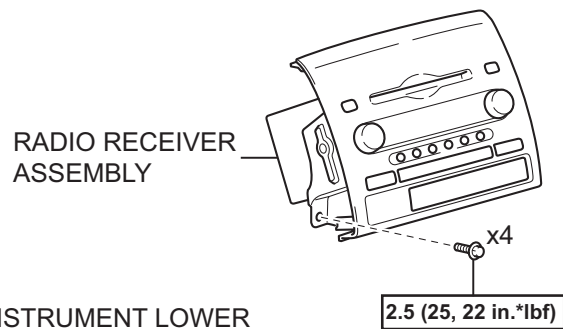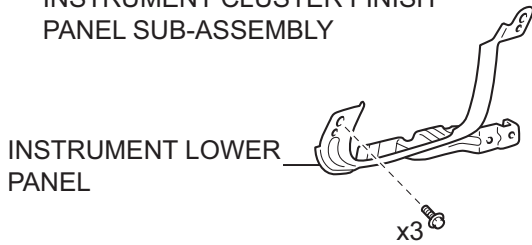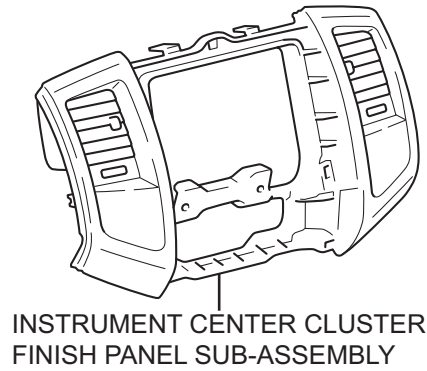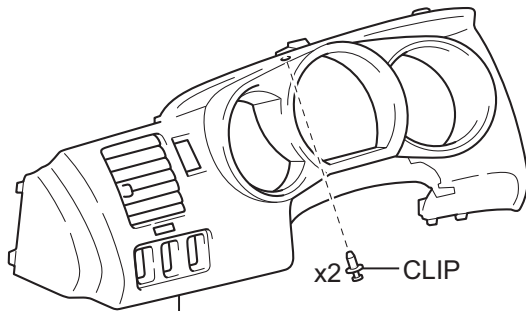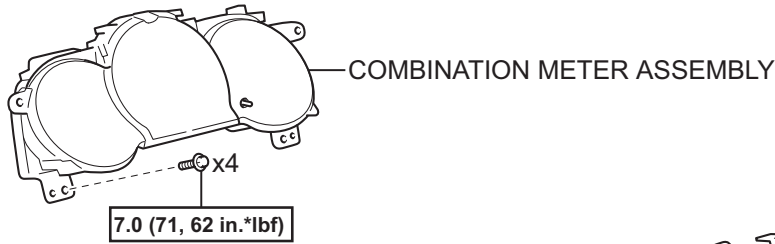


for Pedal Type Parking Brake:

 

for Lever Type Parking Brake:

 


N*m (kgf*cm, ft*lbf) : Specified torque

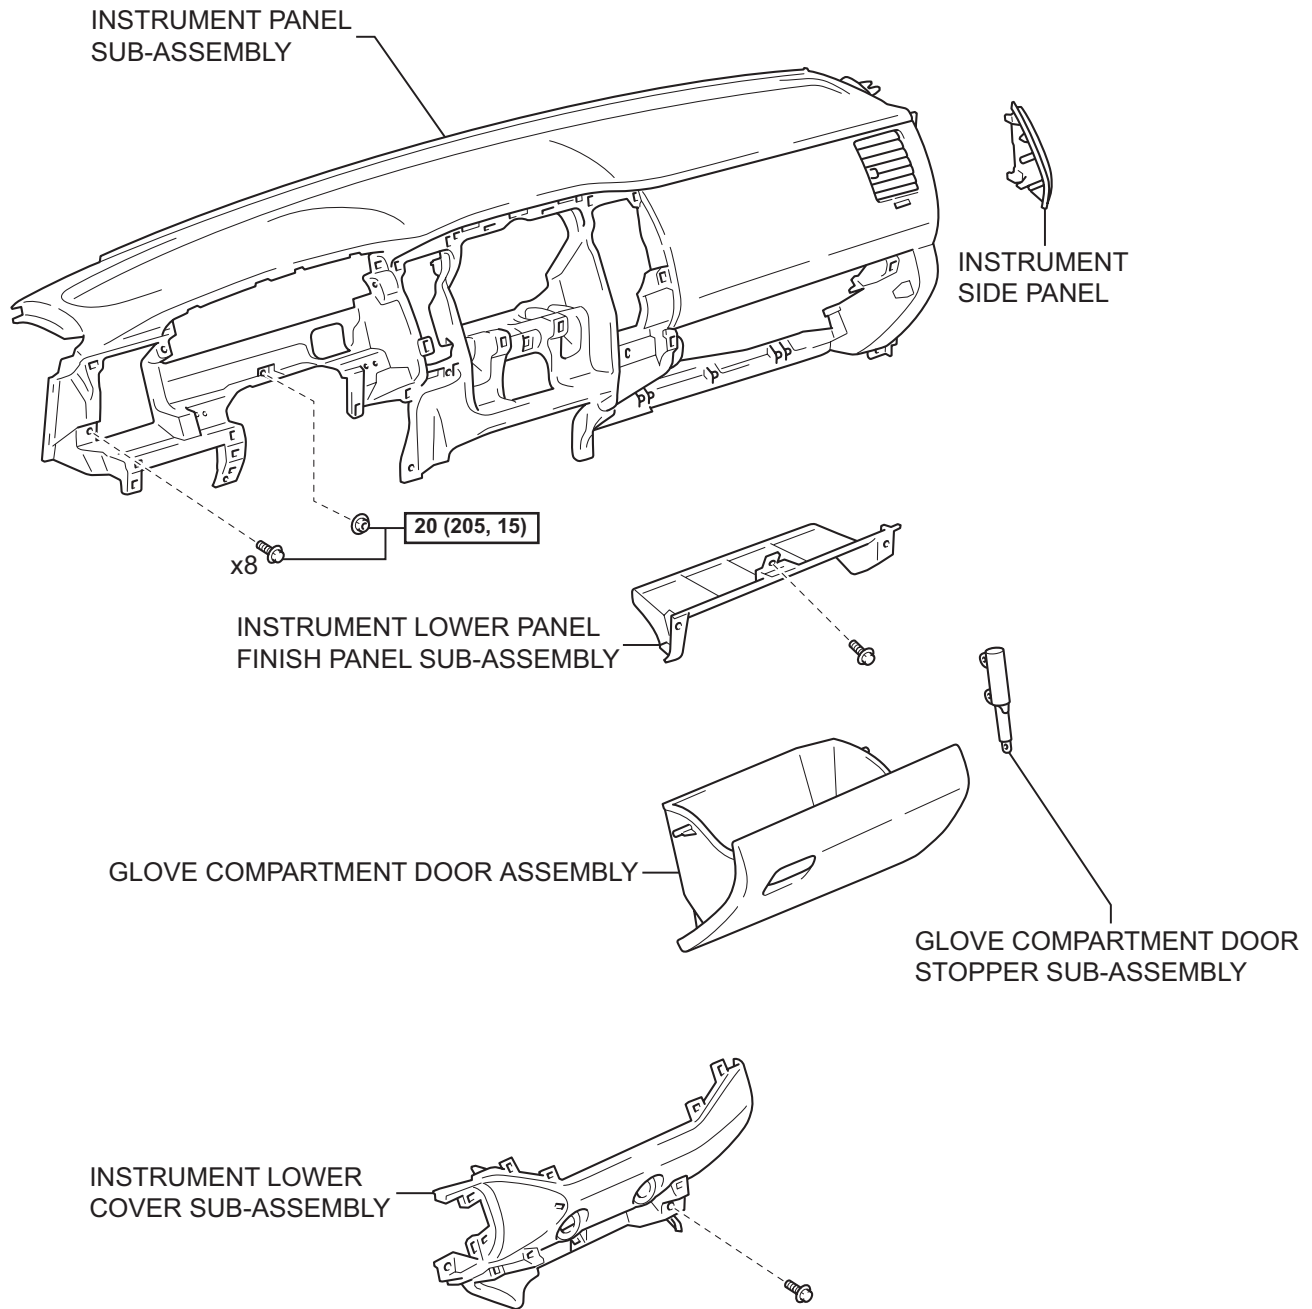

N*m (kgf*cm, ft*lbf) : Specified torque

IR

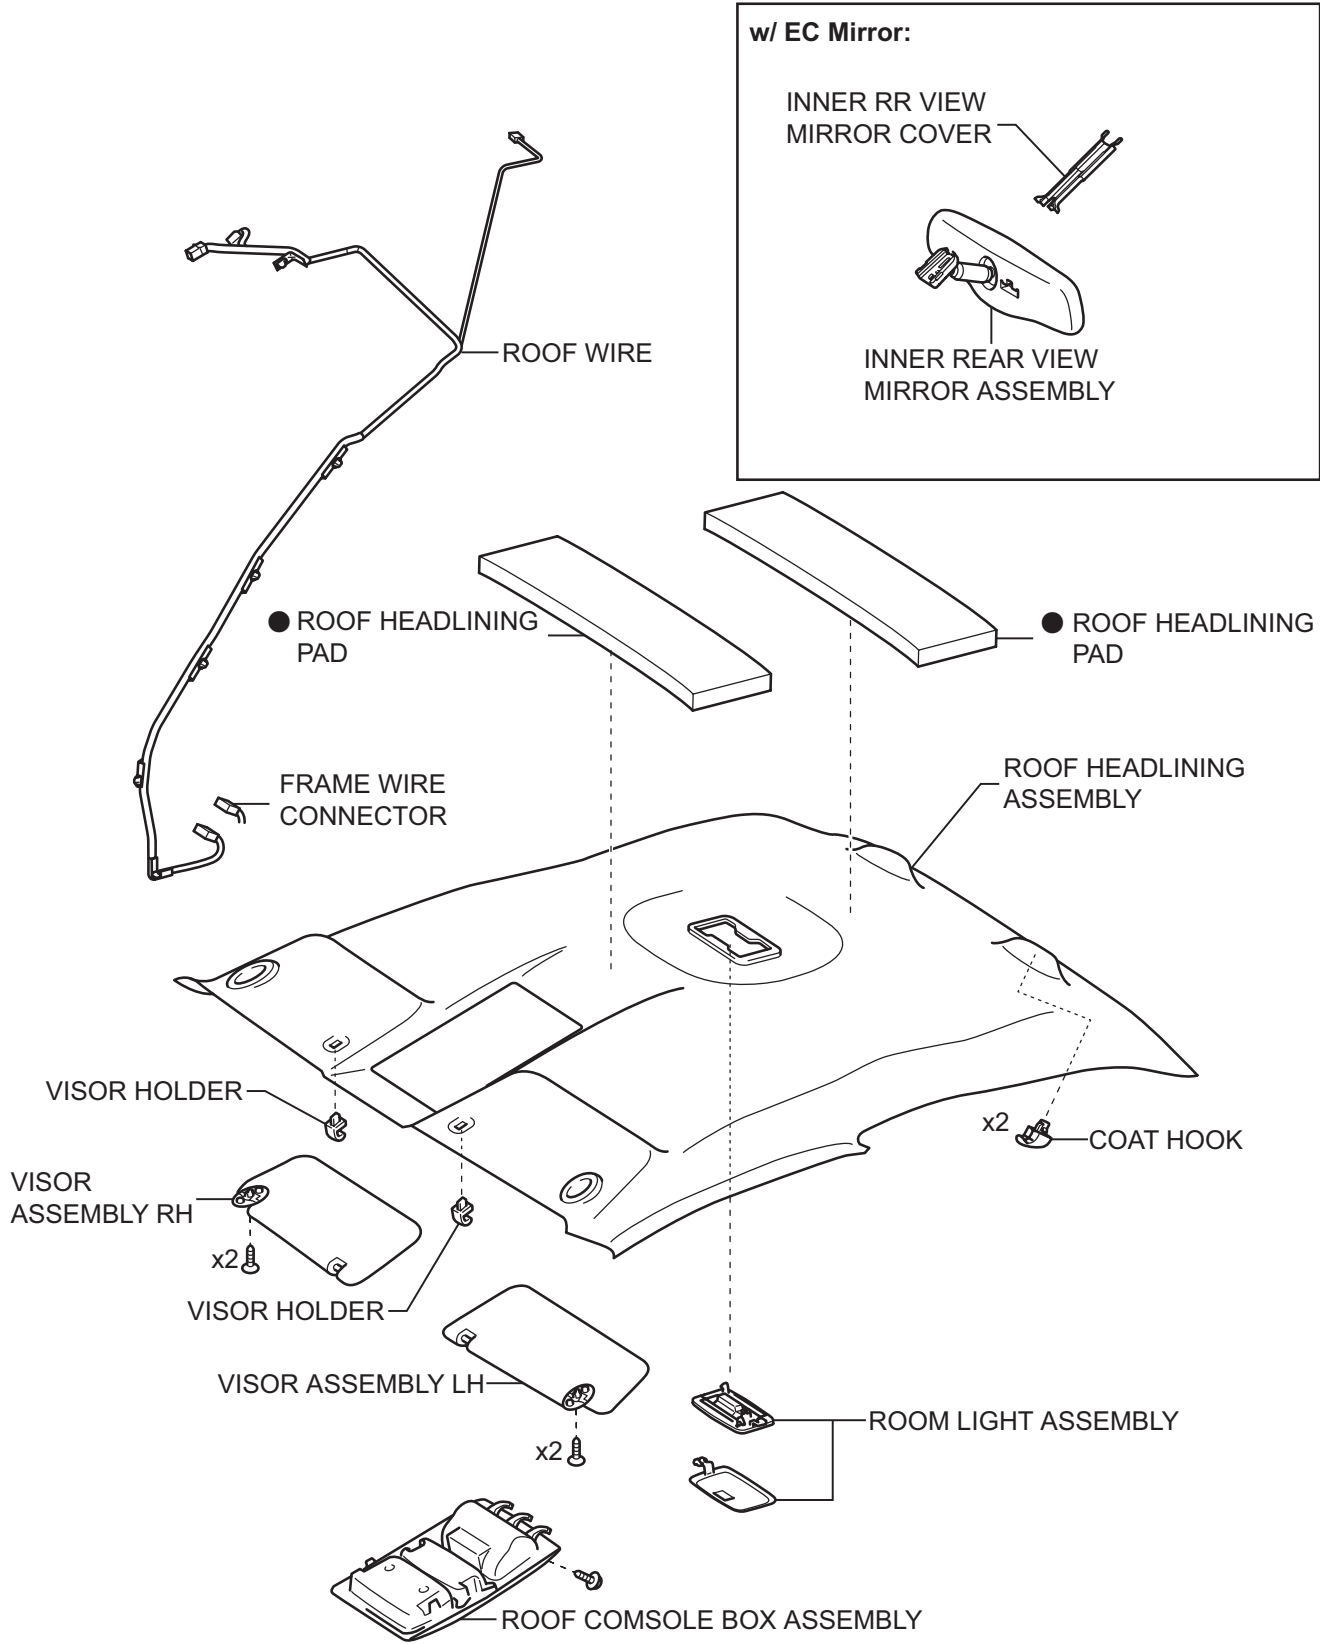


REMOVAL

CAUTION:

Some of these service operations affect the SRS airbag system. Read the precautionary notices concerning the SRS airbag system before servicing (See page [RS-1](#)).

1. **DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL**
Wait for at least 90 seconds after disconnecting the cable to prevent the airbag from working.
2. **REMOVE INNER REAR VIEW MIRROR ASSEMBLY (w/ EC Mirror)** (See page [IR-11](#))
3. **REMOVE FRONT FLOOR FOOTREST** (See page [IR-1](#))

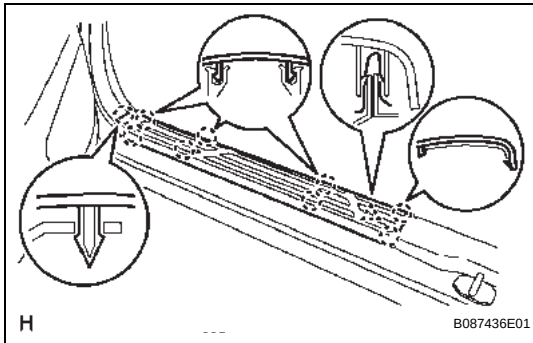


4. **REMOVE FRONT DOOR SCUFF PLATE LH**
(a) Disengage the 9 claws and clip, and remove the front door scuff plate.

5. **REMOVE FRONT DOOR SCUFF PLATE RH**

HINT:

Follow the same procedures as for the front door scuff plate LH.

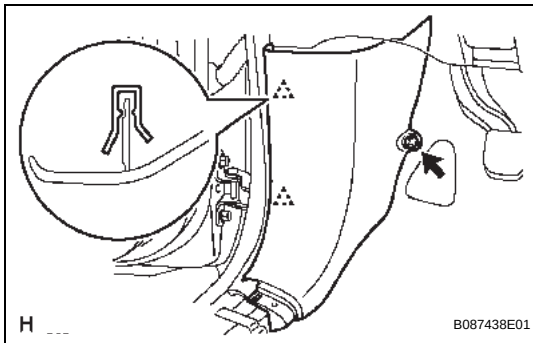


6. **REMOVE COWL SIDE TRIM BOARD LH**

- (a) Remove the clip.
- (b) Disengage the 2 clips and remove the cowl side trim board.

7. **REMOVE COWL SIDE TRIM BOARD RH**

HINT:

Follow the same procedures as for the cowl side trim board LH.

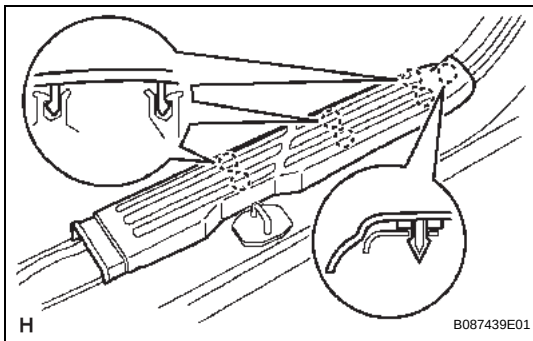


8. **REMOVE REAR DOOR SCUFF PLATE LH**

- (a) Disengage the 7 claws and remove the rear door scuff plate.

9. **REMOVE REAR DOOR SCUFF PLATE RH**

HINT:

Follow the same procedures as for the rear door scuff plate LH.

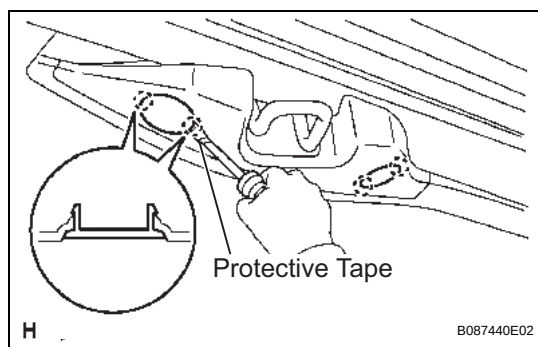
**10. REMOVE ROOF SIDE INNER GARNISH COVER LH****HINT:**

Follow the same procedures as for the opposite side.

- (a) Using a screwdriver with its tip taped in protective tape, disengage the 2 claws and remove the roof side inner garnish cover.

11. REMOVE ROOF SIDE INNER GARNISH COVER RH**HINT:**

Follow the same procedures as for the roof side inner garnish cover LH.

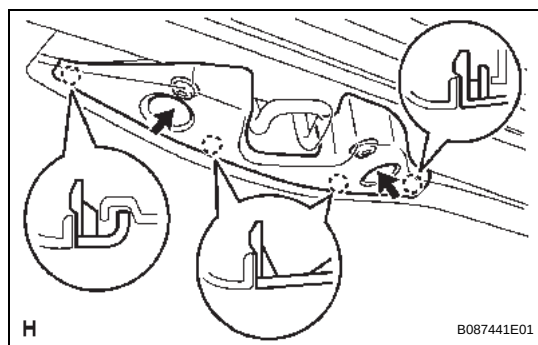
**12. REMOVE ROOF SIDE INNER GARNISH CAP LH**

- (a) Using a "Torx" socket wrench T30, remove the 2 screws.

- (b) Disengage the 4 claws and remove the roof side inner garnish cap.

13. REMOVE ROOF SIDE INNER GARNISH CAP RH**HINT:**


Follow the same procedures as for the roof side inner garnish cap LH.

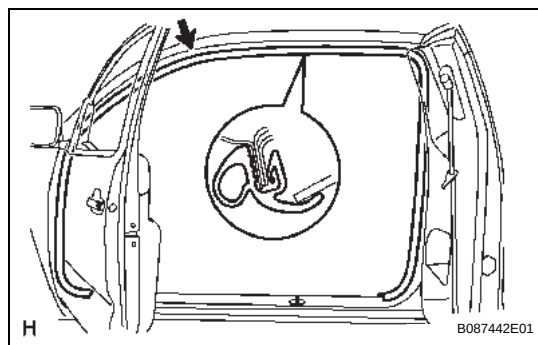**14. REMOVE FRONT DOOR OPENING TRIM WEATHERSTRIP LH**

- (a) Remove the front door opening trim weatherstrip.

15. REMOVE FRONT DOOR OPENING TRIM WEATHERSTRIP RH**HINT:**

Follow the same procedures as for the front door opening trim weatherstrip LH.

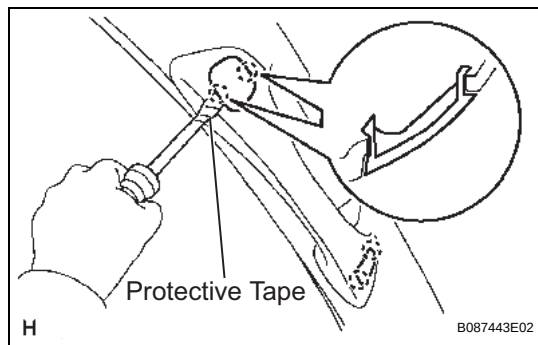**16. REMOVE FRONT PILLAR GARNISH LH**


- (a) Using a screwdriver with its tip taped in protective tape, disengage the 2 claws and remove the assist grip plug.


HINT:

Follow the same procedures as for the opposite side.

- (b) Remove the 2 screws.

- (c) Disengage the claw and clip, and remove the front pillar garnish.

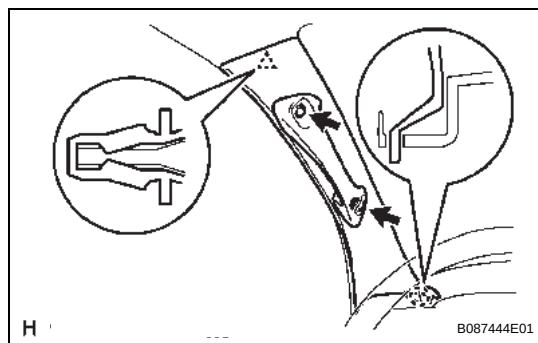

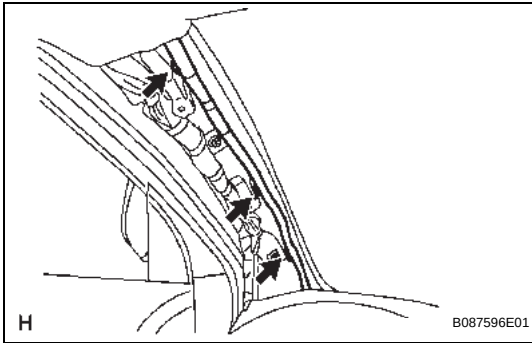

(d) for LH Side:

- (1) Using a clip remover, remove the 3 wire harness clamps.

17. REMOVE FRONT PILLAR GARNISH RH

HINT:

Follow the same procedures as for the front pillar garnish LH.

18. REMOVE INSTRUMENT PANEL UNDER TRAY (for Pedal Type Parking Brake) (See page [IP-9](#))

19. REMOVE INSTRUMENT PANEL HOLE COVER (for Lever Type Parking Brake) (See page [IP-9](#))

20. REMOVE REAR CONSOLE UPPER PANEL SUB-ASSEMBLY

(a) for Automatic Transmission:

- (1) Remove the rear console upper panel sub-assembly (See page [IP-9](#)).

(b) for Manual Transmission:

- (1) Remove the rear console upper panel sub-assembly (See page [IP-9](#)).

21. REMOVE REAR CONSOLE BOX ASSEMBLY (See page [IP-10](#))

22. REMOVE INSTRUMENT PANEL CUP HOLDER TRAY (for Automatic Transmission) (See page [IP-10](#))

23. REMOVE FRONT CONSOLE BOX

(a) for Automatic Transmission:

- (1) Remove the front console box (See page [IP-10](#)).

(b) for Manual Transmission:

- (1) Remove the front console box (See page [IP-11](#)).

24. REMOVE AIR CONDITIONING CONTROL ASSEMBLY (See page [IP-12](#))

25. REMOVE RADIO RECEIVER ASSEMBLY (See page [AV-69](#))

26. SEPARATE HOOD LOCK CONTROL LEVER SUB-ASSEMBLY (See page [ED-3](#))

27. REMOVE INSTRUMENT LOWER PANEL FINISH PANEL (See page [IP-12](#))

28. REMOVE INSTRUMENT CLUSTER FINISH PANEL SUB-ASSEMBLY (See page [IP-12](#))


29. REMOVE COMBINATION METER ASSEMBLY (See page [IP-13](#))

30. REMOVE INSTRUMENT CENTER CLUSTER FINISH PANEL SUB-ASSEMBLY (See page [IP-13](#))

31. REMOVE GLOVE COMPARTMENT DOOR ASSEMBLY (See page [IP-13](#))

32. REMOVE INSTRUMENT LOWER PANEL FINISH PANEL SUB-ASSEMBLY (See page [IP-14](#))
33. REMOVE INSTRUMENT LOWER PANEL (See page [IP-14](#))
34. REMOVE INSTRUMENT LOWER COVER SUB-ASSEMBLY (See page [IP-14](#))
35. REMOVE INSTRUMENT SIDE PANEL (See page [IP-14](#))
36. DISCONNECT PASSENGER AIRBAG CONNECTOR (See page [RS-576](#))
37. REMOVE INSTRUMENT PANEL SUB-ASSEMBLY (See page [IP-14](#))
38. REMOVE BACK PANEL TRIM COVER

- (a) Disengage the 6 claws and remove the back panel trim cover.

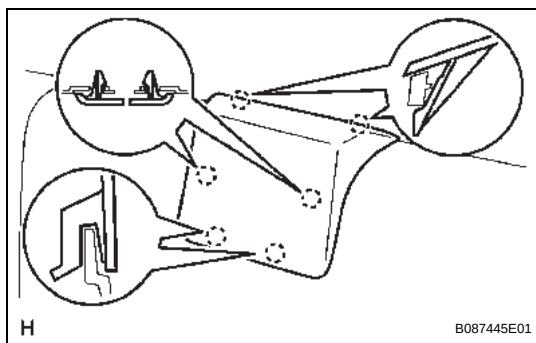


39. REMOVE REAR SEAT INNER BELT ASSEMBLY

HINT:


Follow the same procedures as for the opposite side.


- (a) Disengage the claw and remove the buckle of the rear seat belt inner.

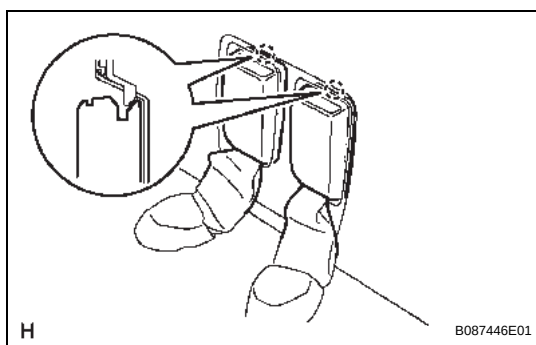

40. REMOVE BACK PANEL TRIM


- (a) Disengage the 8 claws and 14 clips, and remove the back panel trim.

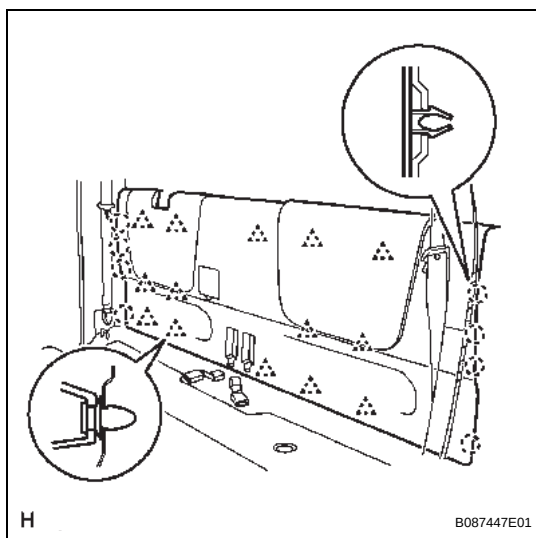

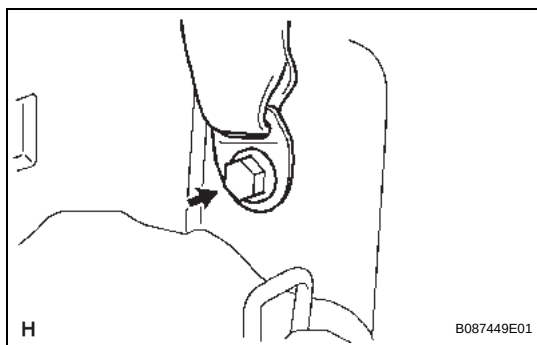

41. REMOVE QUARTER TRIM LOWER PANEL LH

- (a) Remove the bolt and floor anchor of the rear seat belt outer.

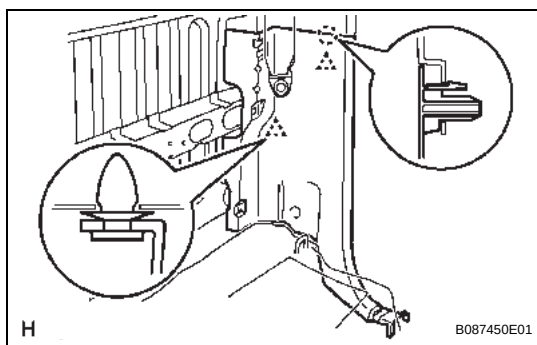


- (b) Disengage the claw and 2 clips, and remove the quarter trim lower panel.

42. REMOVE QUARTER TRIM LOWER PANEL RH

HINT:

Follow the same procedures as for the quarter trim lower panel LH.

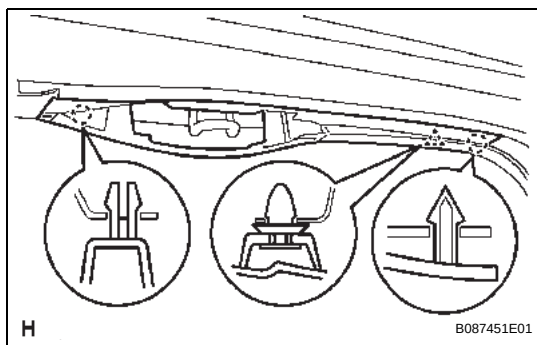


43. REMOVE ROOF SIDE INNER GARNISH LH

- (a) Disengage the 2 claws and clip, and remove the roof side inner garnish.

44. REMOVE ROOF SIDE INNER GARNISH RH


HINT:

Follow the same procedures as for the roof side inner garnish LH.

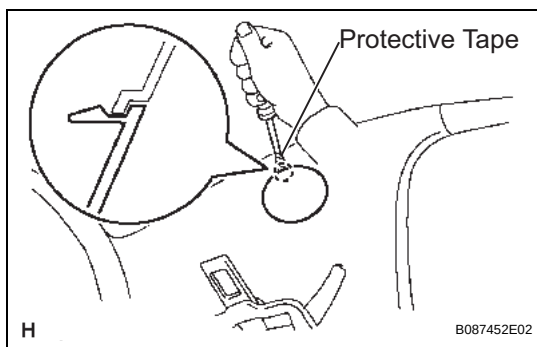

45. REMOVE QUARTER INSIDE TRIM BOARD LH

- (a) Using a screwdriver with its tip taped in protective tape, disengage the claw and open the cover.

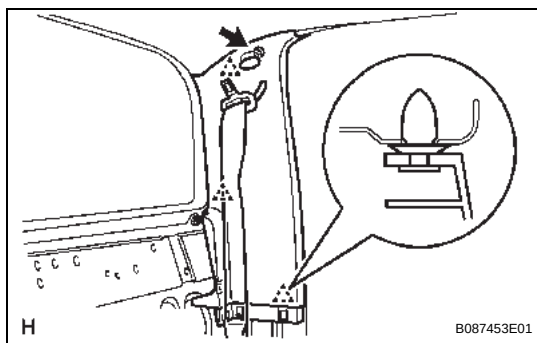


- (b) Remove the screw.
(c) Disengage the 3 clips and remove the quarter inside trim board.


46. REMOVE QUARTER INSIDE TRIM BOARD RH

HINT:

Follow the same procedures as for the quarter inside trim board LH.

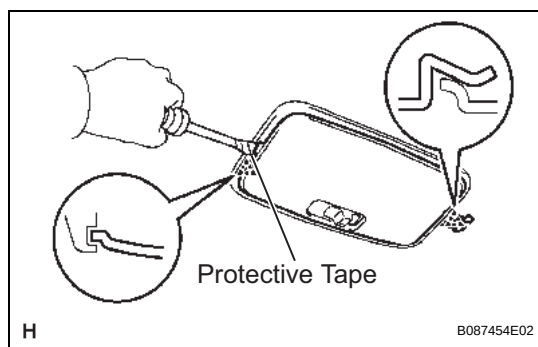
**47. REMOVE ROOM LIGHT ASSEMBLY**

- (a) Using a screwdriver with its tip taped in protective tape, disengage the 2 claws and remove the room light lens.

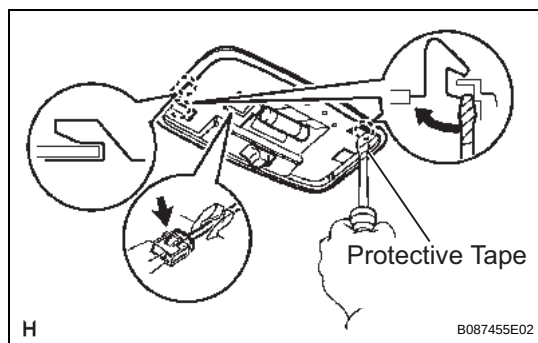


- (b) Using a screwdriver with its tip taped in protective tape, disengage the 2 claws.
- (c) Disconnect the room light connector and remove the room light.


IR

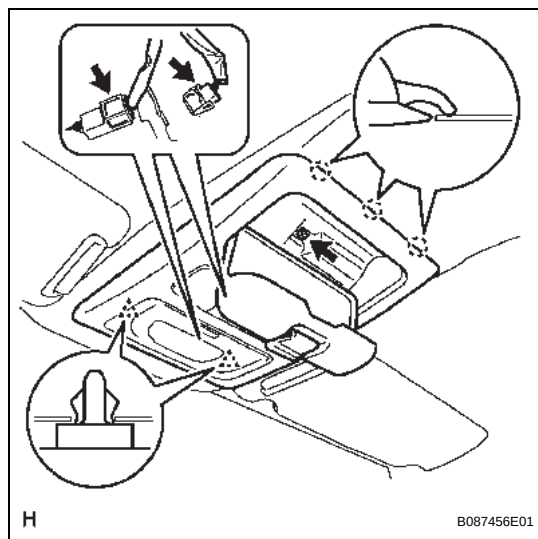**48. REMOVE ROOF CONSOLE BOX ASSEMBLY**

- (a) Remove the screw.
- (b) Disengage the 2 clips and 3 claws.
- (c) Disconnect the accessory meter connector and map lamp connector, and remove the roof console box.

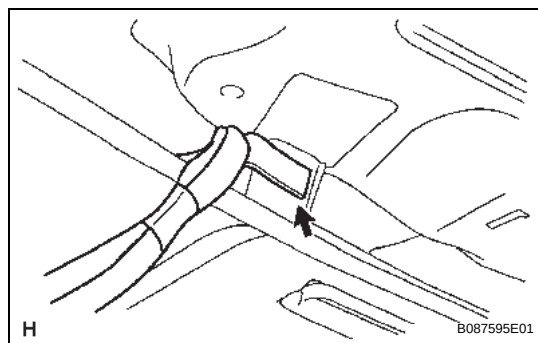

- (d) Using a clip remover, remove the wire harness clamp.

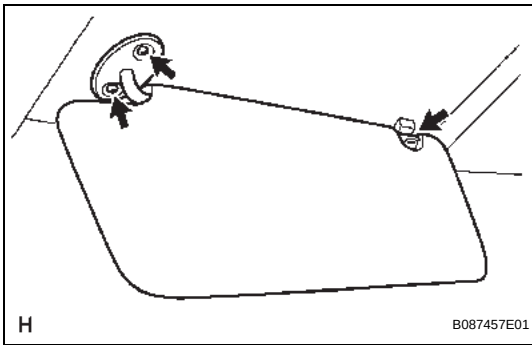


49. REMOVE VISOR ASSEMBLY LH

- (a) Remove the 2 screws.
- (b) Remove the visor from the visor holder.

50. REMOVE VISOR ASSEMBLY RH

HINT:

Follow the same procedures as for the visor assembly LH.

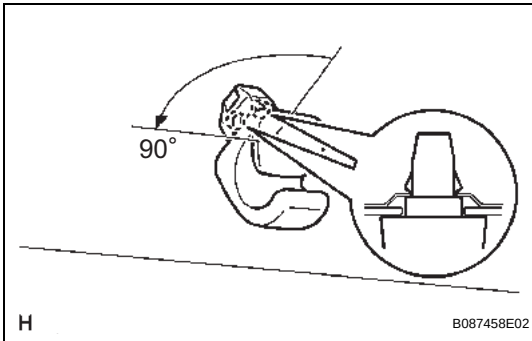


51. REMOVE VISOR HOLDER

HINT:

Follow the same procedures as for the opposite side.

- (a) Turn the visor holder 90° counterclockwise and remove it.

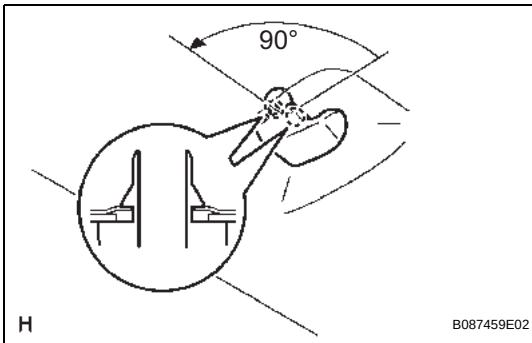


52. REMOVE COAT HOOK

HINT:

Follow the same procedures as for the opposite side.


- (a) Turn the coat hook 90° counterclockwise and remove it.

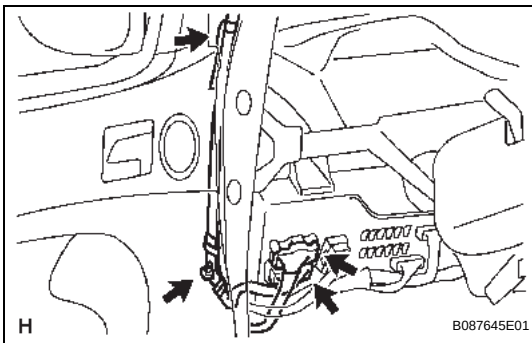


53. REMOVE ROOF HEADLINING ASSEMBLY


- (a) Disconnect the frame wire connector.
- (b) Disconnect the roof wire connector.
- (c) Using a clip remover, remove the 2 wire harness clamps.

- (d) Remove the roof headlining from the vehicle.

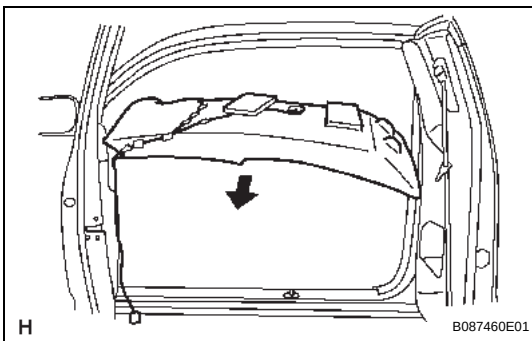

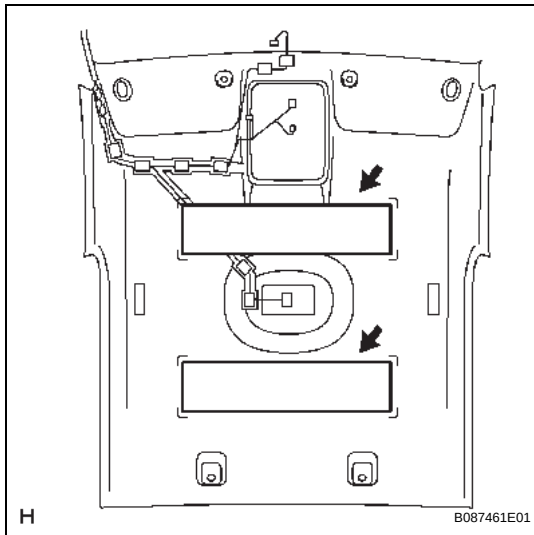**54. REMOVE ROOF HEADLINING PAD**

- (a) Remove the 2 roof headlining pads from the roof headlining.

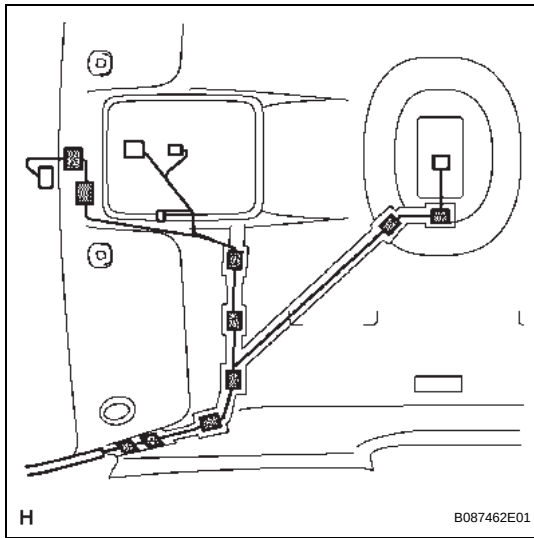**55. REMOVE ROOF WIRE**

- (a) w/ EC mirror:
(1) Remove the 10 adhesive tapes and roof wire.
- (b) w/o EC mirror:
(1) Remove the 8 tapes and roof wire.


INSTALLATION

CAUTION:


Some of these service operations affect the SRS airbag system. Read the precautionary notices concerning the SRS airbag system before servicing (See page [RS-1](#)).

1. INSTALL ROOF WIRE


- (a) w/ EC Mirror:
 - (1) Install the roof wire with 10 new adhesive tapes, as shown in the illustration.
- (b) w/o EC Mirror:
 - (1) Install the roof wire with 8 new tapes, as shown in the illustration.

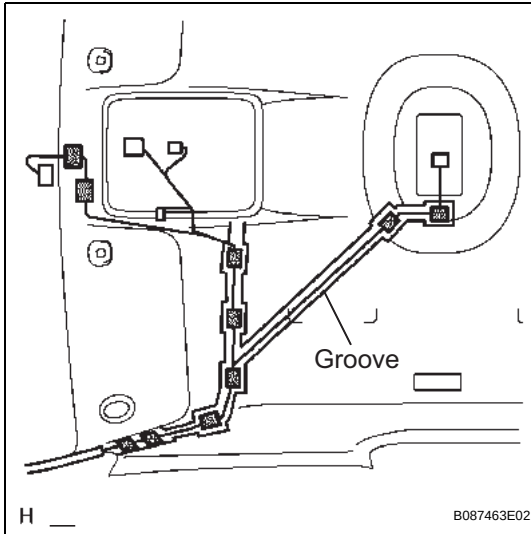
**2. INSTALL ROOF HEADLINING PAD**

- (a) Install the 2 new roof headlining pads onto the roof headlining, as shown in the illustration.

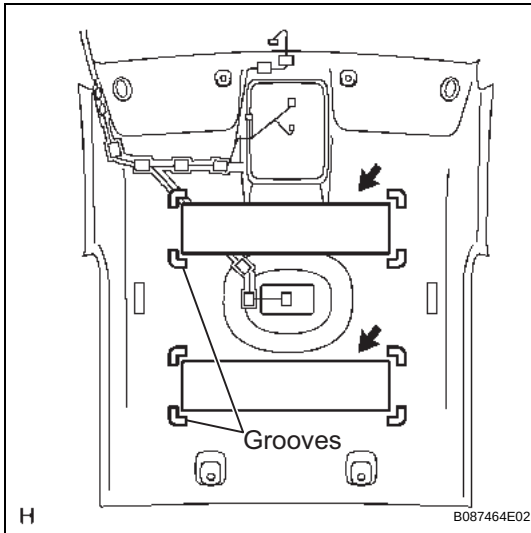
**3. INSTALL ROOF HEADLINING ASSEMBLY**

- (a) Install the roof headlining into the vehicle.

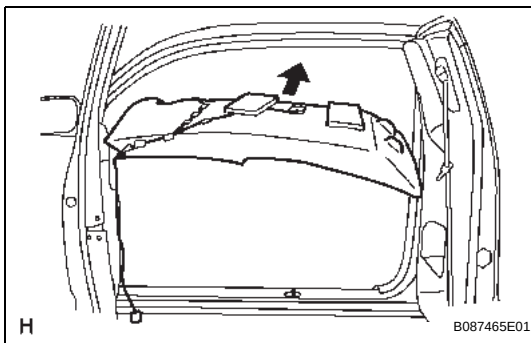

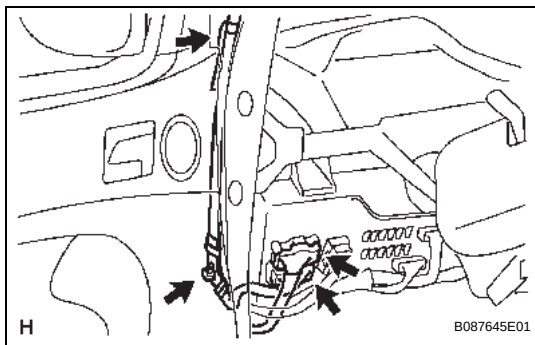

- (b) Install the 2 wire harness clamps.
- (c) Connect the roof wire connector.
- (d) Connect the frame wire connector.

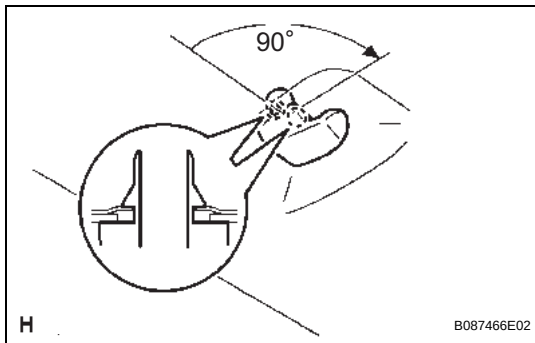


4. INSTALL COAT HOOK

HINT:

Follow the same procedures as for the opposite side.

- (a) Turn the coat hook 90° clockwise and install it.

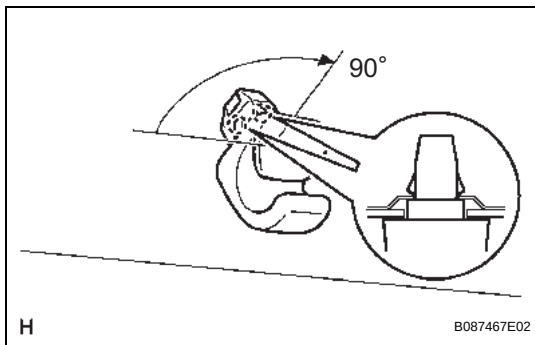


5. INSTALL VISOR HOLDER

HINT:

Follow the same procedures as for the opposite side.

- (a) Turn the visor holder 90° clockwise and install it.

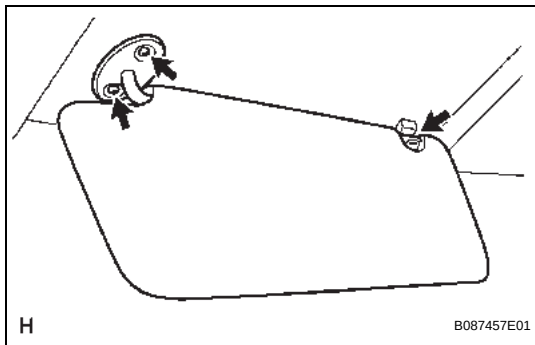


6. INSTALL VISOR ASSEMBLY LH

- (a) Install the visor into the visor holder.
- (b) Tighten the 2 screws.

7. INSTALL VISOR ASSEMBLY RH


HINT:

Follow the same procedures as for the visor assembly LH.

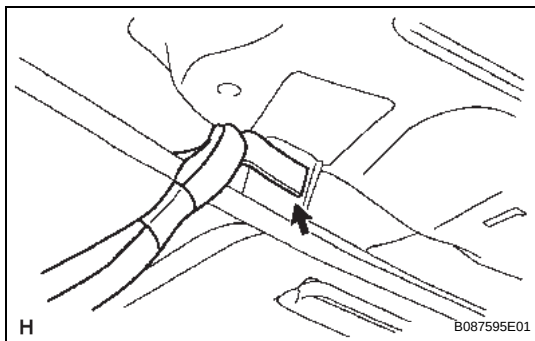


8. INSTALL ROOF CONSOLE BOX ASSEMBLY

- (a) Install the wire harness clamp.

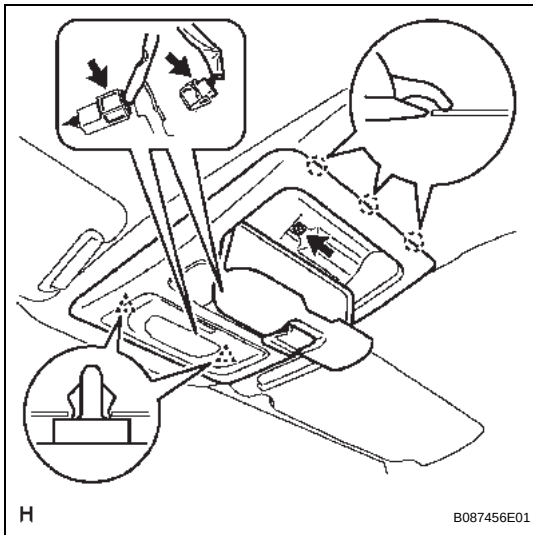


- (b) Connect the accessory meter connector and map lamp connector.
- (c) Engage the 2 clips and 3 claws and install the map lamp.
- (d) Tighten the screw.

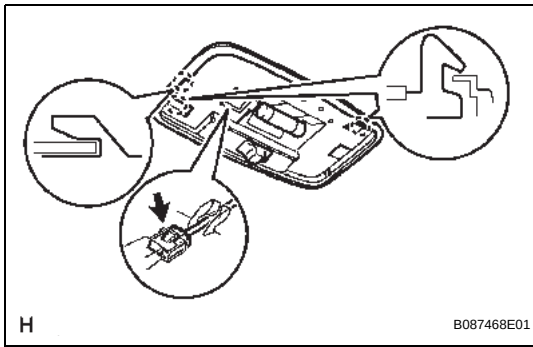


9. INSTALL ROOM LIGHT ASSEMBLY

- (a) Connect the room light connector.
- (b) Engage the 3 claws and install the room light.

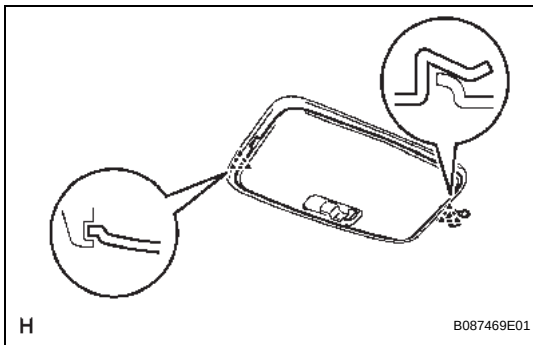


- (c) Engage the 2 claws and install the room light lens.

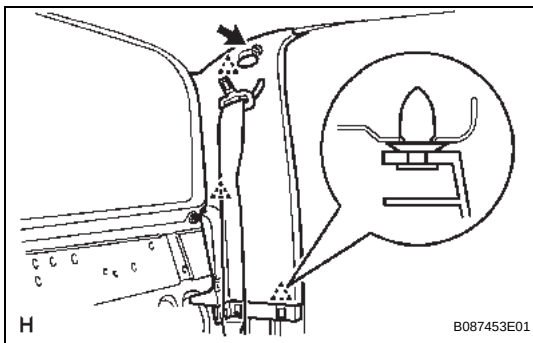

10. INSTALL QUARTER INSIDE TRIM BOARD LH

- (a) Engage the 3 clips and install the quarter inside trim board.
- (b) Tighten the screw.

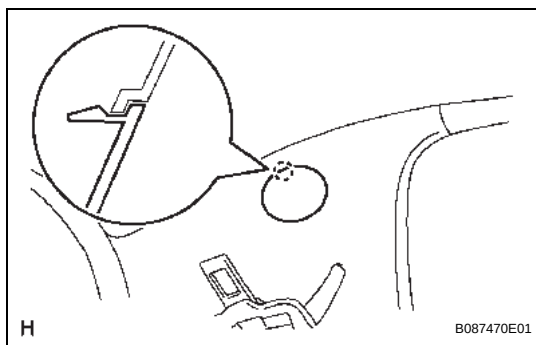


(c) Engage the claw and close the cover.

11. INSTALL QUARTER INSIDE TRIM BOARD RH

HINT:

Follow the same procedures as for the quarter inside trim board LH.

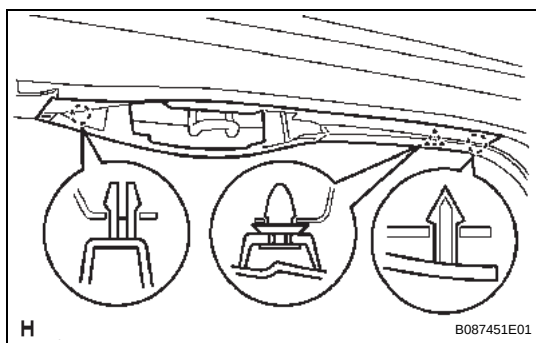


12. INSTALL ROOF SIDE INNER GARNISH LH

(a) Engage the 2 claws and clip, and install the roof side inner garnish.

13. INSTALL ROOF SIDE INNER GARNISH RH


HINT:

Follow the same procedures as for the roof side inner garnish LH.

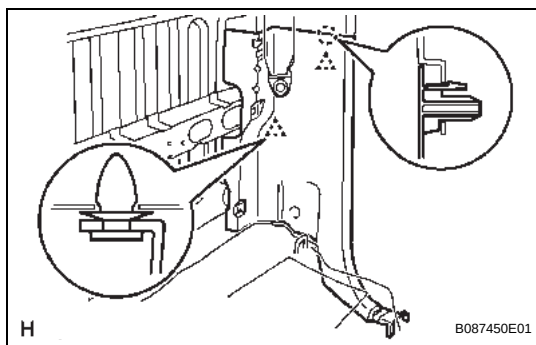

14. INSTALL QUARTER TRIM LOWER PANEL LH

(a) Engage the claw and 2 clips, and install the quarter trim lower panel.

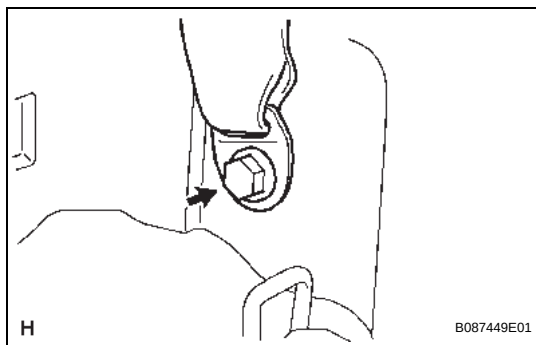


(b) Install the floor anchor of the rear seat belt outer with the bolt.

Torque: 42 N*m (430 kgf*cm, 31 ft.*lbf)

15. INSTALL QUARTER TRIM LOWER PANEL RH


HINT:

Follow the same procedures as for the quarter trim lower panel LH.

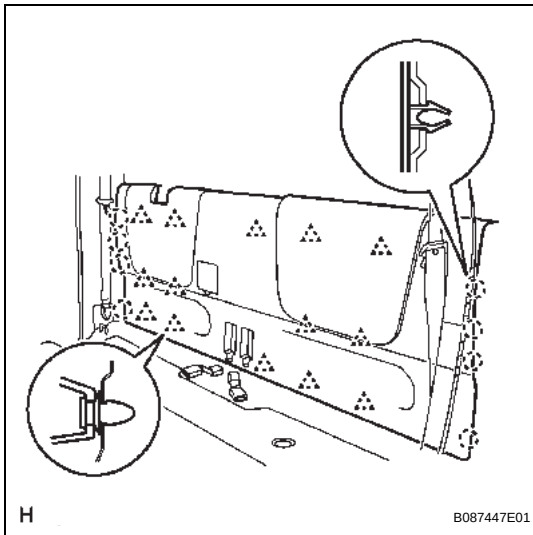

16. INSTALL BACK PANEL TRIM

- (a) Engage the 8 claws and 14 clips, and install the back panel trim.

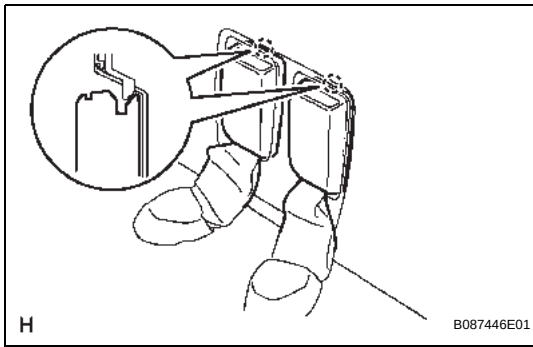


17. INSTALL REAR SEAT INNER BELT ASSEMBLY

HINT:

Follow the same procedures as for the opposite side.

- (a) Engage the claw and install the buckle of the rear seat belt inner.

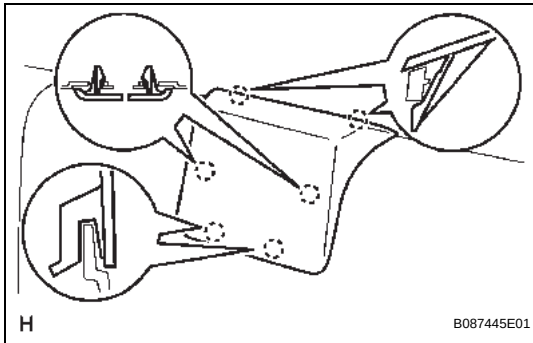

18. INSTALL BACK PANEL TRIM COVER

- (a) Engage the 6 claws and install the back panel trim cover.

19. INSTALL INSTRUMENT PANEL SUB-ASSEMBLY (See page [IP-18](#))

20. CONNECT PASSENGER AIRBAG CONNECTOR

21. INSTALL INSTRUMENT SIDE PANEL (See page [IP-20](#))

22. INSTALL INSTRUMENT LOWER COVER SUB-ASSEMBLY (See page [IP-20](#))

23. INSTALL INSTRUMENT LOWER PANEL (See page [IP-20](#))

24. INSTALL INSTRUMENT LOWER PANEL FINISH PANEL SUB-ASSEMBLY (See page [IP-20](#))


25. INSTALL GLOVE COMPARTMENT DOOR ASSEMBLY (See page [IP-20](#))


26. INSTALL INSTRUMENT CENTER CLUSTER FINISH PANEL SUB-ASSEMBLY (See page [IP-21](#))

27. INSTALL COMBINATION METER ASSEMBLY (See page [IP-21](#))


28. INSTALL INSTRUMENT CLUSTER FINISH PANEL SUB-ASSEMBLY (See page [IP-21](#))

29. **INSTALL INSTRUMENT LOWER PANEL FINISH PANEL** (See page [IP-22](#))
30. **CONNECT HOOD LOCK CONTROL LEVER SUB-ASSEMBLY** (See page [ED-8](#))
31. **INSTALL RADIO RECEIVER ASSEMBLY** (See page [AV-70](#))
32. **INSTALL AIR CONDITIONING CONTROL ASSEMBLY** (See page [IP-22](#))
33. **INSTALL FRONT CONSOLE BOX**
 - (a) for Automatic Transmission:
 - (1) Install the front console box (See page [IP-24](#)).
 - (b) for Manual Transmission:
 - (1) Install the front console box (See page [IP-23](#)).
34. **INSTALL INSTRUMENT PANEL CUP HOLDER TRAY (for Automatic Transmission)** (See page [IP-24](#))
35. **INSTALL REAR CONSOLE BOX ASSEMBLY** (See page [IP-24](#))
36. **INSTALL REAR CONSOLE UPPER PANEL SUB-ASSEMBLY**
 - (a) for Automatic Transmission:
 - (1) Install the rear console upper panel sub-assembly (See page [IP-25](#)).
 - (b) for Manual Transmission:
 - (1) Install the rear console upper panel sub-assembly (See page [IP-25](#)).
37. **INSTALL INSTRUMENT PANEL UNDER TRAY (for Pedal Type Parking Brake)** (See page [IP-25](#))
38. **INSTALL INSTRUMENT PANEL HOLE COVER (for Lever Type Parking Brake)** (See page [IP-25](#))
39. **INSTALL FRONT PILLAR GARNISH LH**
 - (a) for LH Side:
 - (1) Install the 3 wire harness clamps.

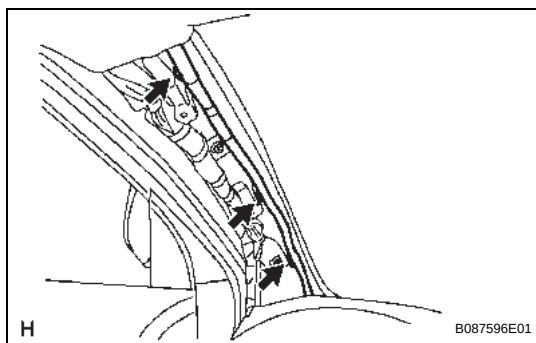

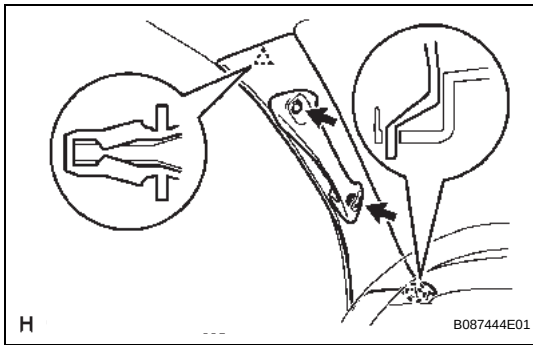


- (b) Engage the claw and clip, and install the front pillar garnish.
- (c) Tighten the 2 screws.

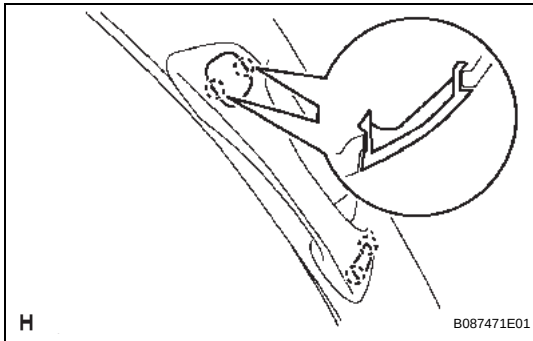

- (d) Engage the 2 claws and install the assist grip plug.
HINT:
Follow the same procedures as for the opposite side.

40. INSTALL FRONT PILLAR GARNISH RH

- HINT:
Follow the same procedures as for the front pillar garnish LH.

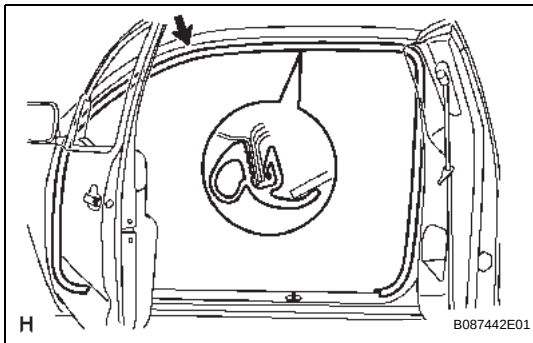


41. INSTALL FRONT DOOR OPENING TRIM WEATHERSTRIP LH

- (a) Install the front door opening trim weatherstrip.

42. INSTALL FRONT DOOR OPENING TRIM WEATHERSTRIP RH

- HINT:
Follow the same procedures as for the front door opening trim weatherstrip LH.

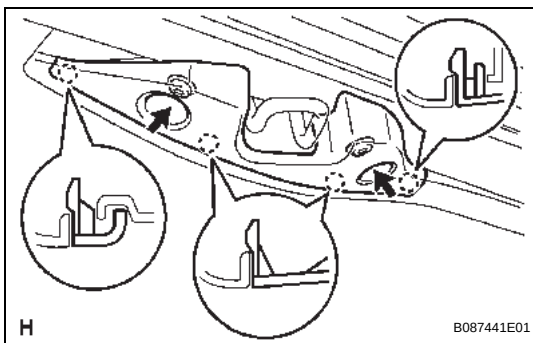


43. INSTALL ROOF SIDE INNER GARNISH CAP LH

- (a) Engage the 4 claws and install the roof side inner garnish cap.
- (b) Using a "Torx" socket wrench T30, tighten the 2 screws.

44. INSTALL ROOF SIDE INNER GARNISH CAP RH

- HINT:
Follow the same procedures as for the roof side inner garnish cap LH.

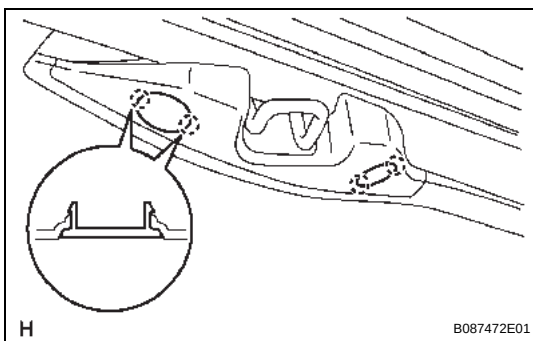


45. INSTALL ROOF SIDE INNER GARNISH COVER LH

- HINT:
Follow the same procedures as for the opposite side.
- (a) Engage the 2 claws and install the roof side inner garnish cover.

46. INSTALL ROOF SIDE INNER GARNISH COVER RH

- HINT:
Follow the same procedures as for the roof side inner garnish cover LH.

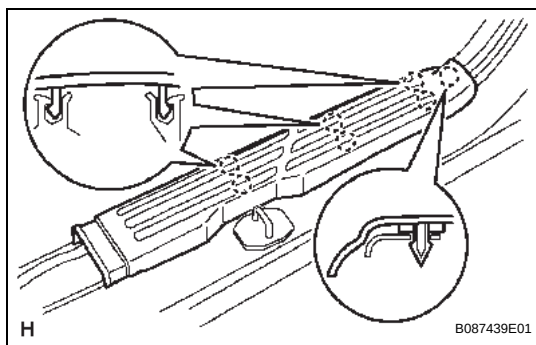
**47. INSTALL REAR DOOR SCUFF PLATE LH**

- (a) Engage the 7 claws and install the rear door scuff plate.

48. INSTALL REAR DOOR SCUFF PLATE RH

HINT:

Follow the same procedures as for the rear door scuff plate LH.

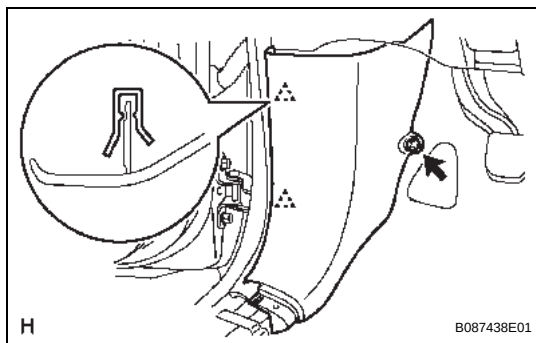**49. INSTALL COWL SIDE TRIM BOARD LH**


- (a) Engage the 2 clips and install the cowl side trim board.
(b) Install the clip.

50. INSTALL COWL SIDE TRIM BOARD RH

HINT:

Follow the same procedures as for the cowl side trim board LH.

IR

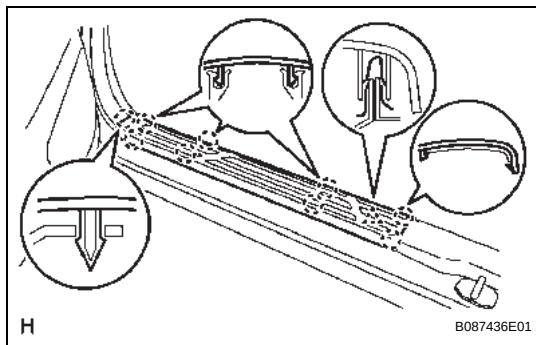**51. INSTALL FRONT DOOR SCUFF PLATE LH**

- (a) Engage the 9 claws and clip, and install the front door scuff plate.

52. INSTALL FRONT DOOR SCUFF PLATE RH

HINT:

Follow the same procedures as for the front door scuff plate LH.

53. INSTALL FRONT FLOOR FOOTREST (See page [IR-1](#))**54. INSTALL INNER REAR VIEW MIRROR ASSEMBLY (w/ EC Mirror) (See page [IR-30](#))****55. CONNECT CABLE TO NEGATIVE BATTERY TERMINAL**

Torque: 3.9 N*m (40 kgf*cm, 35 in.*lbf)

56. INSPECT SRS WARNING LIGHT

(See page [RS-28](#))