



SYSTEM DIAGRAM

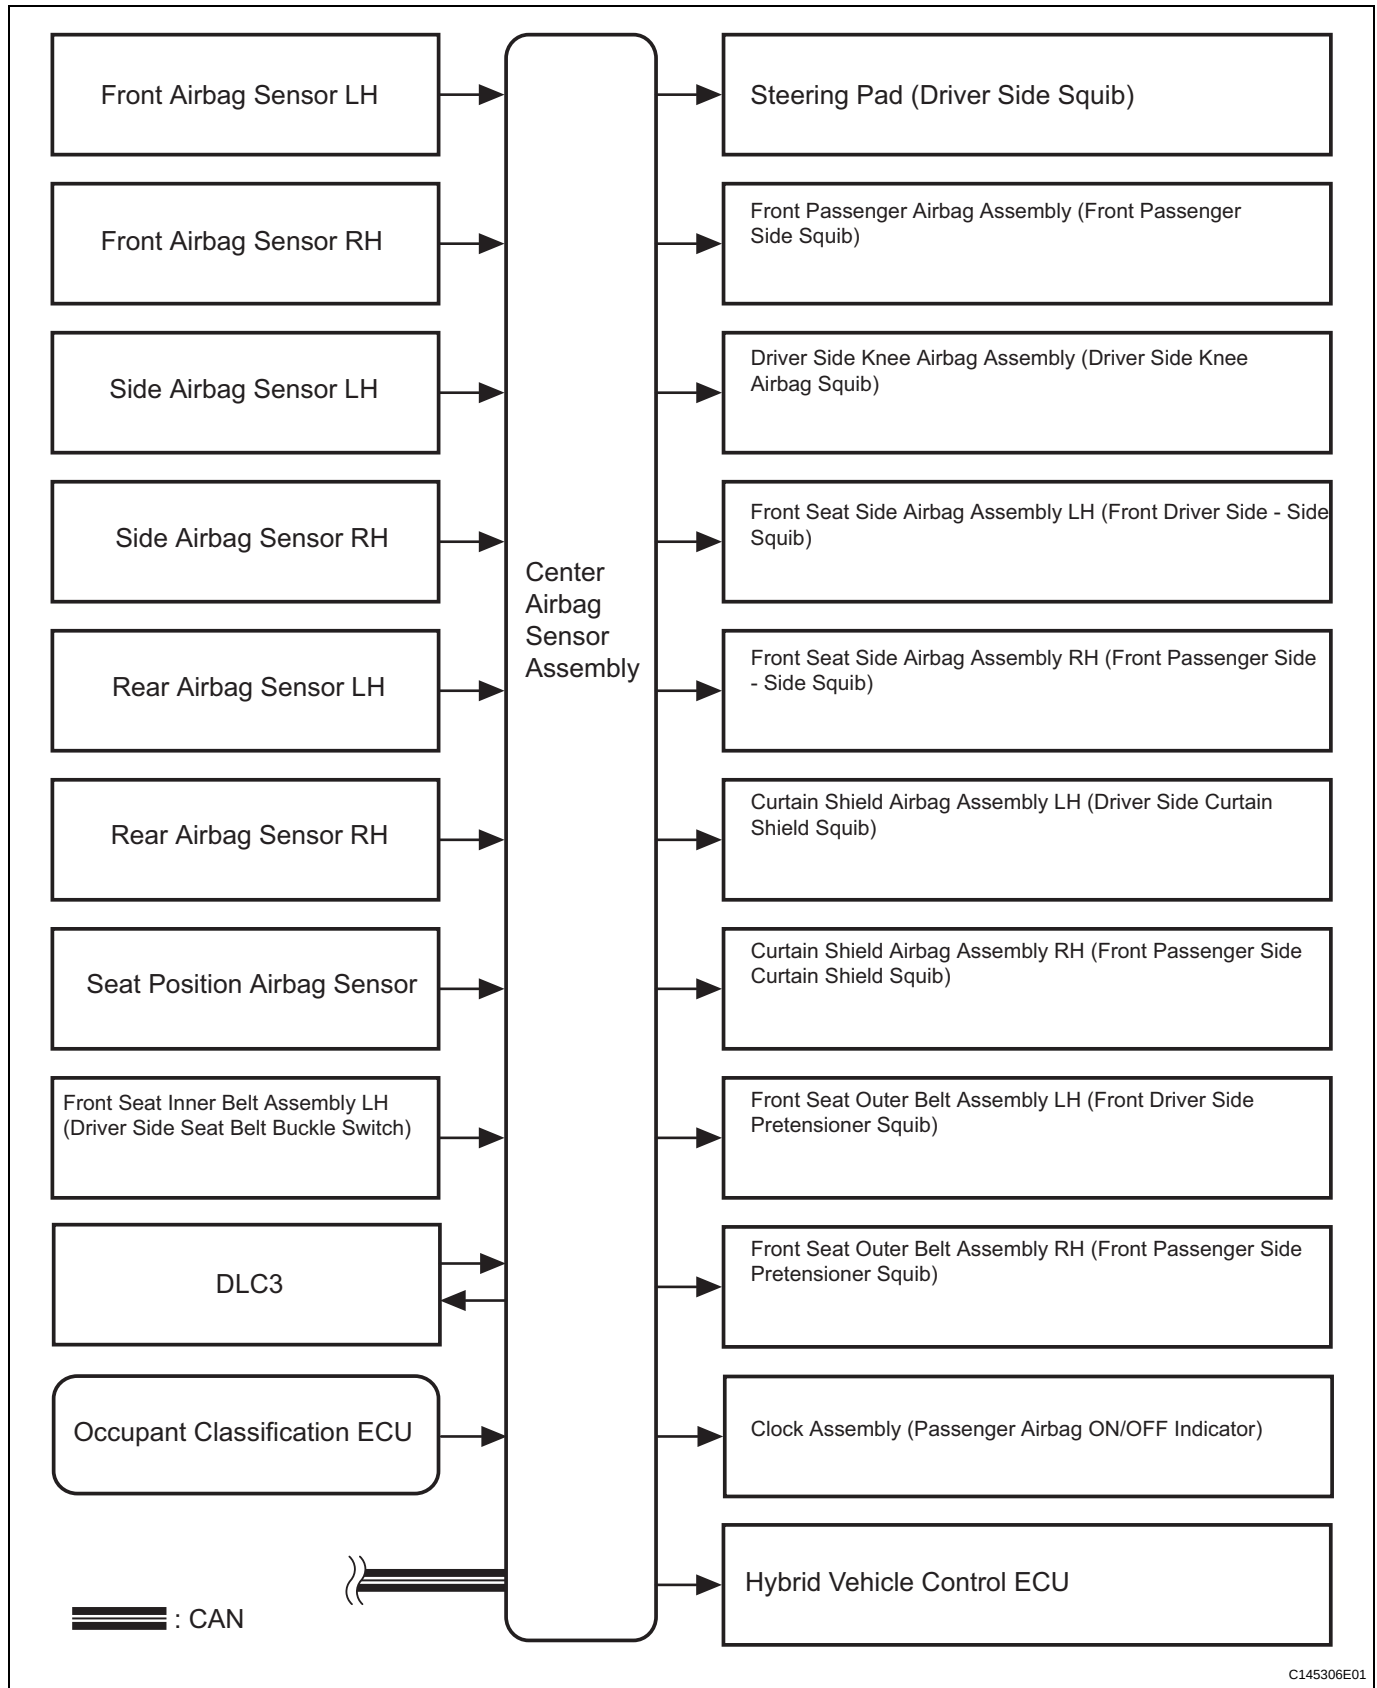

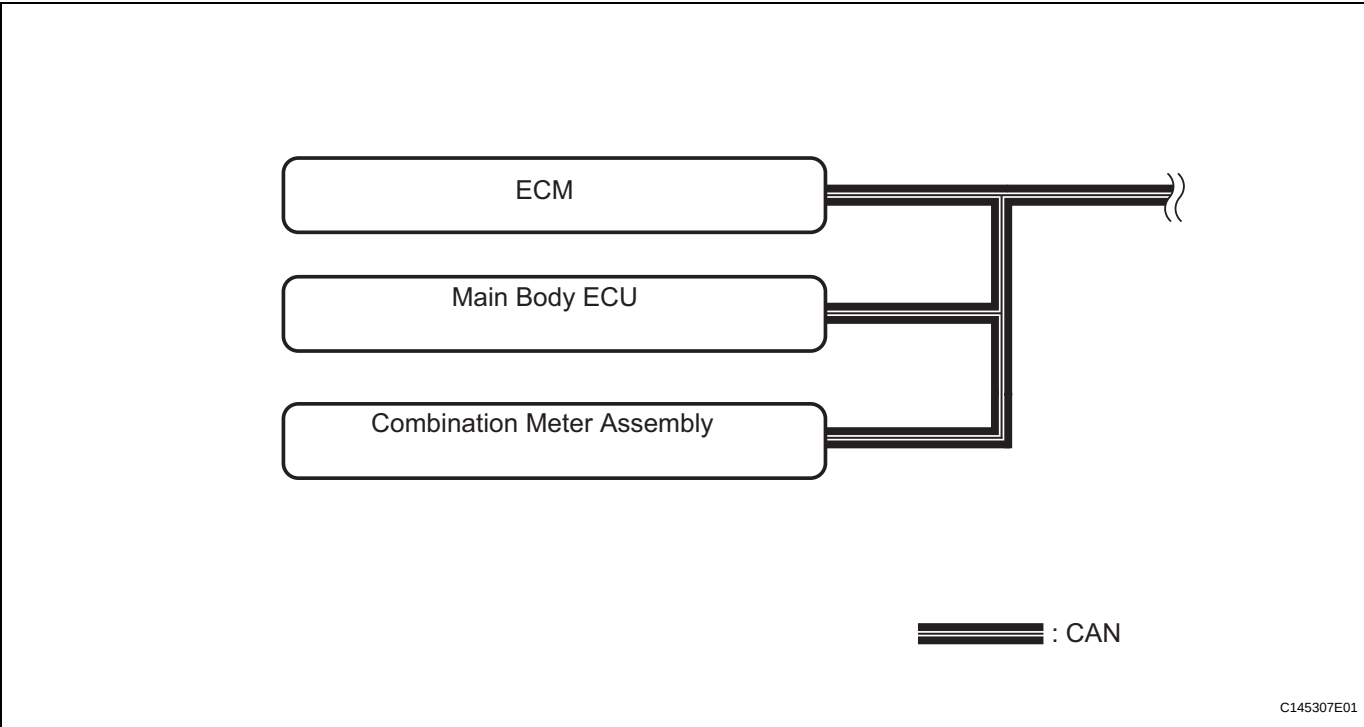

Transmitting ECU (Transmitter)	Receiving ECU	Signals	Communication method
Center Airbag Sensor Assembly	Hybrid Vehicle Control ECU	Crash detection signal	CAN
Center Airbag Sensor Assembly	Main Body ECU	Driver seat buckle switch signal	
Center Airbag Sensor Assembly	Combination Meter Assembly	- SRS warning light ON demand signal - SRS warning light blink demand signal - Passenger seat occupant detection signal - Passenger seat buckle switch signal - Diagnosis signal (DTC)	
Combination Meter Assembly	Center Airbag Sensor Assembly	- Vehicle speed signal - Meter diagnoses polling signal	
Hybrid Vehicle Control ECU	Center Airbag Sensor Assembly	- Accelerator opening angle information - Accelerator opening angle signal - Shift position signal - Test mode signal - Stop signal	
ECM	Center Airbag Sensor Assembly	Engine speed signal	