

PROBLEM SYMPTOMS TABLE

HINT:


Proceed to the troubleshooting for each circuit in the table below.

AIRBAG SYSTEM:

Symptom	Suspected Area	See page
The SRS warning light goes off after the primary check, but comes on.	SRS Warning Light Remains ON	RS-222
With the power switch on (IG), the SRS warning light sometimes comes on after approximately 6 seconds.	SRS Warning Light Remains ON	RS-222
The SRS warning light always comes on even when DTC is not output.	SRS Warning Light Remains ON	RS-222
With the power switch on (IG), the SRS warning light does not come on.	SRS Warning Light does not Come On	RS-227
Although an SRS warning light operates normally, DTC or a normal system code is not displayed.	Diagnosis Circuit	RS-230
Although terminals TC and CG of DLC3 are not connected, DTC or a normal system code is displayed.	Diagnosis Circuit	RS-230

TERMINALS OF ECU

1. CENTER AIRBAG SENSOR ASSEMBLY

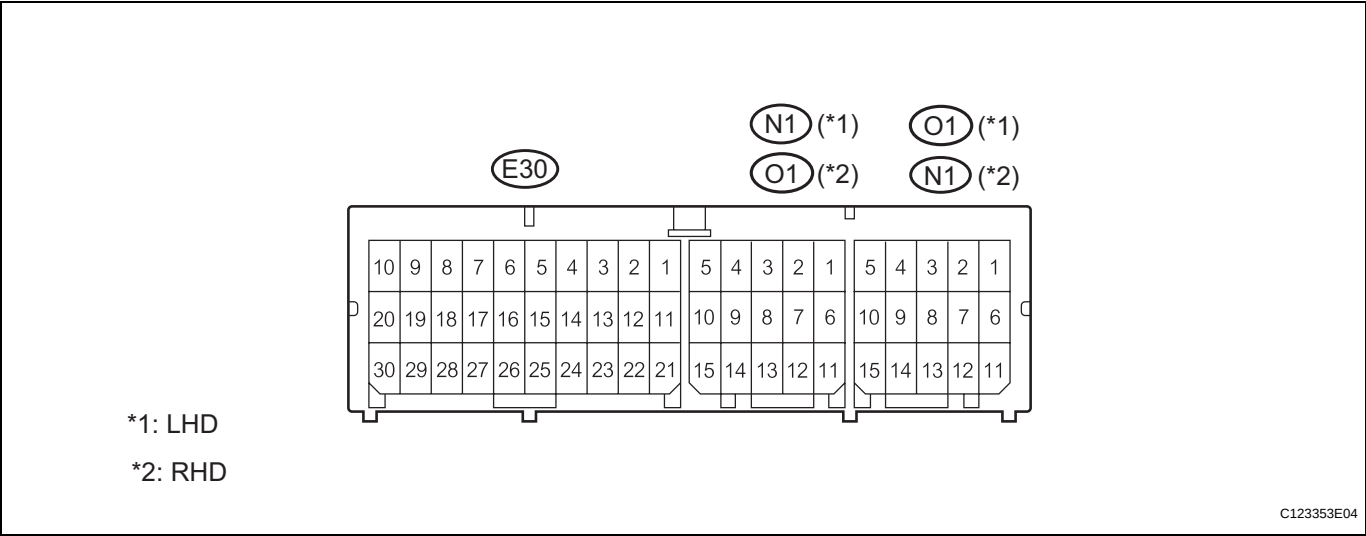

Terminal No.	Terminal Symbol	Destination
E30-1	P2+	Front passenger airbag assembly (Front passenger side squib 2nd step)
E30-2	P2-	Front passenger airbag assembly (Front passenger side squib 2nd step)
E30-3	P-	Front passenger airbag assembly (Front passenger side squib)
E30-4	P+	Front passenger airbag assembly (Front passenger side squib)
E30-5	D+	Steering pad (Driver side squib)
E30-6	D-	Steering pad (Driver side squib)
E30-7	D2-	Steering pad (Driver side squib 2nd step)
E30-8	D2+	Steering pad (Driver side squib 2nd step)
E30-9	DK+	Driver side knee airbag assembly (Driver side knee airbag squib)
E30-10	DK-	Driver side knee airbag assembly (Driver side knee airbag squib)
E30-13	CANH	CAN Communication line
E30-14	GSW2	Hybrid vehicle control ECU
E30-16	SIL	DLC3
E30-17	P-AB	Clock assembly (Passenger airbag ON/OFF indicator)
E30-21	IG2	IGN fuse
E30-22	CANL	CAN Communication line
E30-23	PAON	Clock assembly (Passenger airbag ON/OFF indicator)
E30-25	E1	Ground
E30-26	E2	Ground
E30-27	-SR	Front airbag sensor RH
E30-28	-SL	Front airbag sensor LH
E30-29	+SR	Front airbag sensor RH
E30-30	+SL	Front airbag sensor LH
N1-1	PD-	Front seat outer belt assembly LH (Front driver side pretensioner squib)
N1-2	PD+	Front seat outer belt assembly LH (Front driver side pretensioner squib)