


DATA LIST / ACTIVE TEST

HINT:

By accessing the DATA LIST displayed on the intelligent tester, you can perform such functions as reading the values of switches and sensors without removing any parts. Reading the DATA LIST as the first step in troubleshooting is one method to save labor time.

1. DATA LIST FOR CENTER AIRBAG SENSOR ASSEMBLY

- Connect the intelligent tester to the DLC3.
- Turn the power switch on (IG).
- Turn the tester ON.
- Enter the following menus: DIAGNOSIS / OBD/ MOBD / SRS AIRBAG / DATA LIST.
- Check the values by referring to the table below.

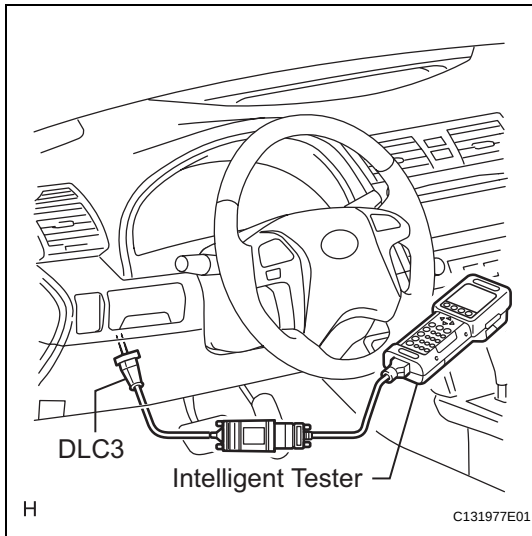

DATA LIST:

Tester Display	Measurement Item/Range	Normal Condition	Diagnostic Note
D SEAT POSITION	Driver Seat Position/ FORWARD: Seat position is forward BKWARD: Seat position is backward FAIL: Failure detected	FORWARD/BKWARD	-
PASSENGER CLASS	Passenger Classification/ NG: Data is not determined OFF: Vacant CHILD: Child (less than 36 kg (79.37 lb)) is seated AF05: Adult (36 to 54 kg (79.37 to 119.05 lb)) is seated AM50: Adult (more than 54 kg (119.05 lb)) is seated FAIL: A failure is detected	OFF/CHILD/AF05/AM50	-
D BUCKLE SW	Driver Buckle SW/ UNSET: The seat belt is not fastened SET: The seat belt is fastened NG: Data is not determined	UNSET/SET	-
P BUCKLE SW	Passenger Buckle SW/ UNSET: The seat belt is not fastened SET: The seat belt is fastened NG: Data is not determined	UNSET/SET	-
PAST CODES	Number of Past DTC/ Min.: 0, Max.: 255	0	-

TYPE INFO:

Tester Display	Measurement Item/Range	Normal Condition	Diagnostic Note
DISPLAY TYPE	Display Type Information/ LR: The display is indicated by LH/RH DP: The display is indicated by Driver/Passenger	DP	-