

SRS Warning Light does not Come ON**DESCRIPTION**

See page [RS-222](#).

WIRING DIAGRAM

See page [RS-223](#).

INSPECTION PROCEDURE**1 CHECK BATTERY**

- (a) Measure the voltage of the battery.

Standard voltage:

11 to 14 V

NG

**CHECK AND REPLACE BATTERY OR
CHARGING SYSTEM**

OK

2 CHECK CONNECTOR

- (a) Turn the power switch off.
(b) Disconnect the negative (-) terminal cable from the battery, and wait for at least 90 seconds.
(c) Check that the connector is properly connected to the combination meter assembly.

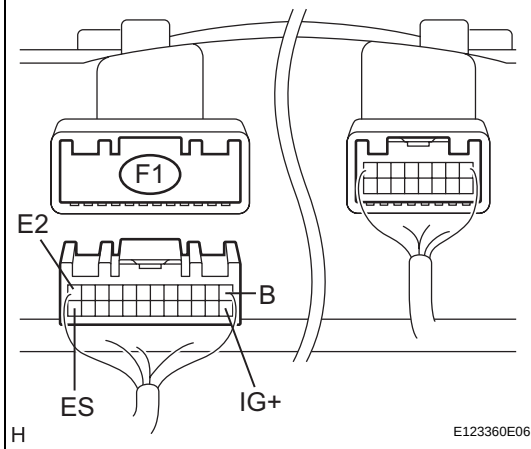
OK:

The connector is properly connected.

NG

CONNECT CONNECTOR PROPERLY

OK

3**CHECK WIRE HARNESS (COMBINATION METER ASSEMBLY - BODY GROUND)****Combination Meter Assembly Side:**

- Turn the power switch off.
- Disconnect the negative (-) terminal cable from the battery, and wait for at least 90 seconds.
- Disconnect the F1 connector from the combination meter assembly.
- Connect the negative (-) terminal cable to the battery, and wait for at least 2 seconds.
- Turn the power switch on (IG).
- Measure the voltage according to the value(s) in the table below.

Standard voltage

Tester Connection	Condition	Specified Condition
F1-1 (B) - Body ground	Always	10 to 14 V
F1-13 (IG+) - Body ground	Power switch on (IG)	10 to 14 V

- Turn the power switch off.
- Measure the resistance according to the value(s) in the table below.

Standard resistance

Tester Connection	Condition	Specified Condition
F1-12 (E2) - Body ground	Always	Below 1 Ω
F1-24 (ES) - Body ground	Always	Below 1 Ω

NG**REPAIR OR REPLACE WIRE HARNESS****OK****4****CHECK SRS WARNING LIGHT**

- Turn the power switch off.
- Disconnect the negative (-) terminal cable from the battery, and wait for at least 90 seconds.
- Connect the connector to the combination meter assembly.
- Connect the negative (-) terminal cable to the battery, and wait for at least 2 seconds.
- Turn the power switch on (IG).
- Check the SRS warning light condition.

OK:

After the primary check period, SRS warning light goes off for approximately 10 seconds, and remains on.

HINT:

The primary check period is approximately 6 seconds after the power switch is turned on (IG).

NGGO TO METER / GAUGE SYSTEM (See page [ME-14](#))OKREPLACE CENTER AIRBAG SENSOR ASSEMBLY (See page [RS-423](#))