

DIAGNOSTIC TROUBLE CODE CHART

If a trouble code is displayed during the DTC check, check the circuit listed for the code in the table below (Proceed to the page listed for that circuit).

OCCUPANT CLASSIFICATION SYSTEM:

DTC Code	Detection Item	Trouble Area	Passenger Airbag ON/ OFF Indicator (OFF Indicator)	See page
B1771	Passenger Side Buckle Switch Circuit Malfunction	1. Front seat inner belt assembly RH (Passenger side buckle switch) 2. Occupant classification ECU 3. Floor wire No. 2 4. Front seat wire RH (for Power seat)	ON	RS-253
B1780	Front Occupant Classification Sensor LH Circuit Malfunction	1. Front seat assembly RH (Front occupant classification sensor LH) 2. Occupant classification ECU 3. Front seat wire RH	ON	RS-261
B1781	Front Occupant Classification Sensor RH Circuit Malfunction	1. Front seat assembly RH (Front occupant classification sensor RH) 2. Occupant classification ECU 3. Front seat wire RH	ON	RS-269
B1782	Rear Occupant Classification Sensor LH Circuit Malfunction	1. Front seat assembly RH (Rear occupant classification sensor LH) 2. Occupant classification ECU 3. Front seat wire RH	ON	RS-277
B1783	Rear Occupant Classification Sensor RH Circuit Malfunction	1. Front seat assembly RH (Rear occupant classification sensor RH) 2. Occupant classification ECU 3. Front seat wire RH	ON	RS-285
B1785	Front Occupant Classification Sensor LH Collision Detection	1. Front seat assembly RH (Front occupant classification sensor LH) 2. Occupant classification ECU	ON	RS-293
B1786	Front Occupant Classification Sensor RH Collision Detection	1. Front seat assembly RH (Front occupant classification sensor RH) 2. Occupant classification ECU	ON	RS-297
B1787	Rear Occupant Classification Sensor LH Collision Detection	1. Front seat assembly RH (Rear occupant classification sensor LH) 2. Occupant classification ECU	ON	RS-301
B1788	Rear Occupant Classification Sensor RH Collision Detection	1. Front seat assembly RH (Rear occupant classification sensor RH) 2. Occupant classification ECU	ON	RS-305

DTC Code	Detection Item	Trouble Area	Passenger Airbag ON/ OFF Indicator (OFF Indicator)	See page
B1790	Center Airbag Sensor Assembly Communication Circuit Malfunction	1. Occupant classification ECU 2. Center airbag sensor assembly 3. Floor wire No. 2 4. Front seat wire RH (for Power seat)	ON	RS-309
B1793	Occupant Classification Sensor Power Supply Circuit Malfunction	1. Front seat assembly RH (Occupant classification sensors) 2. Front seat wire RH 3. Occupant classification ECU	ON	RS-323
B1794	Open in Occupant Classification ECU Battery Positive Line	1. Battery 2. ECU-B fuse 3. Floor wire No. 2 4. Front seat wire RH (for Power seat) 5. Occupant classification ECU	ON	RS-330
B1795	Occupant Classification ECU Malfunction	1. Occupant classification ECU 2. Floor wire No. 2 3. Front seat wire RH (for Power seat) 4. Front seat inner belt assembly RH (Passenger side buckle switch)	ON	RS-334
B1796	Sleep Operation Failure of Occupant Classification ECU	Occupant classification ECU	ON	RS-337