



SPIRAL CABLE


COMPONENTS

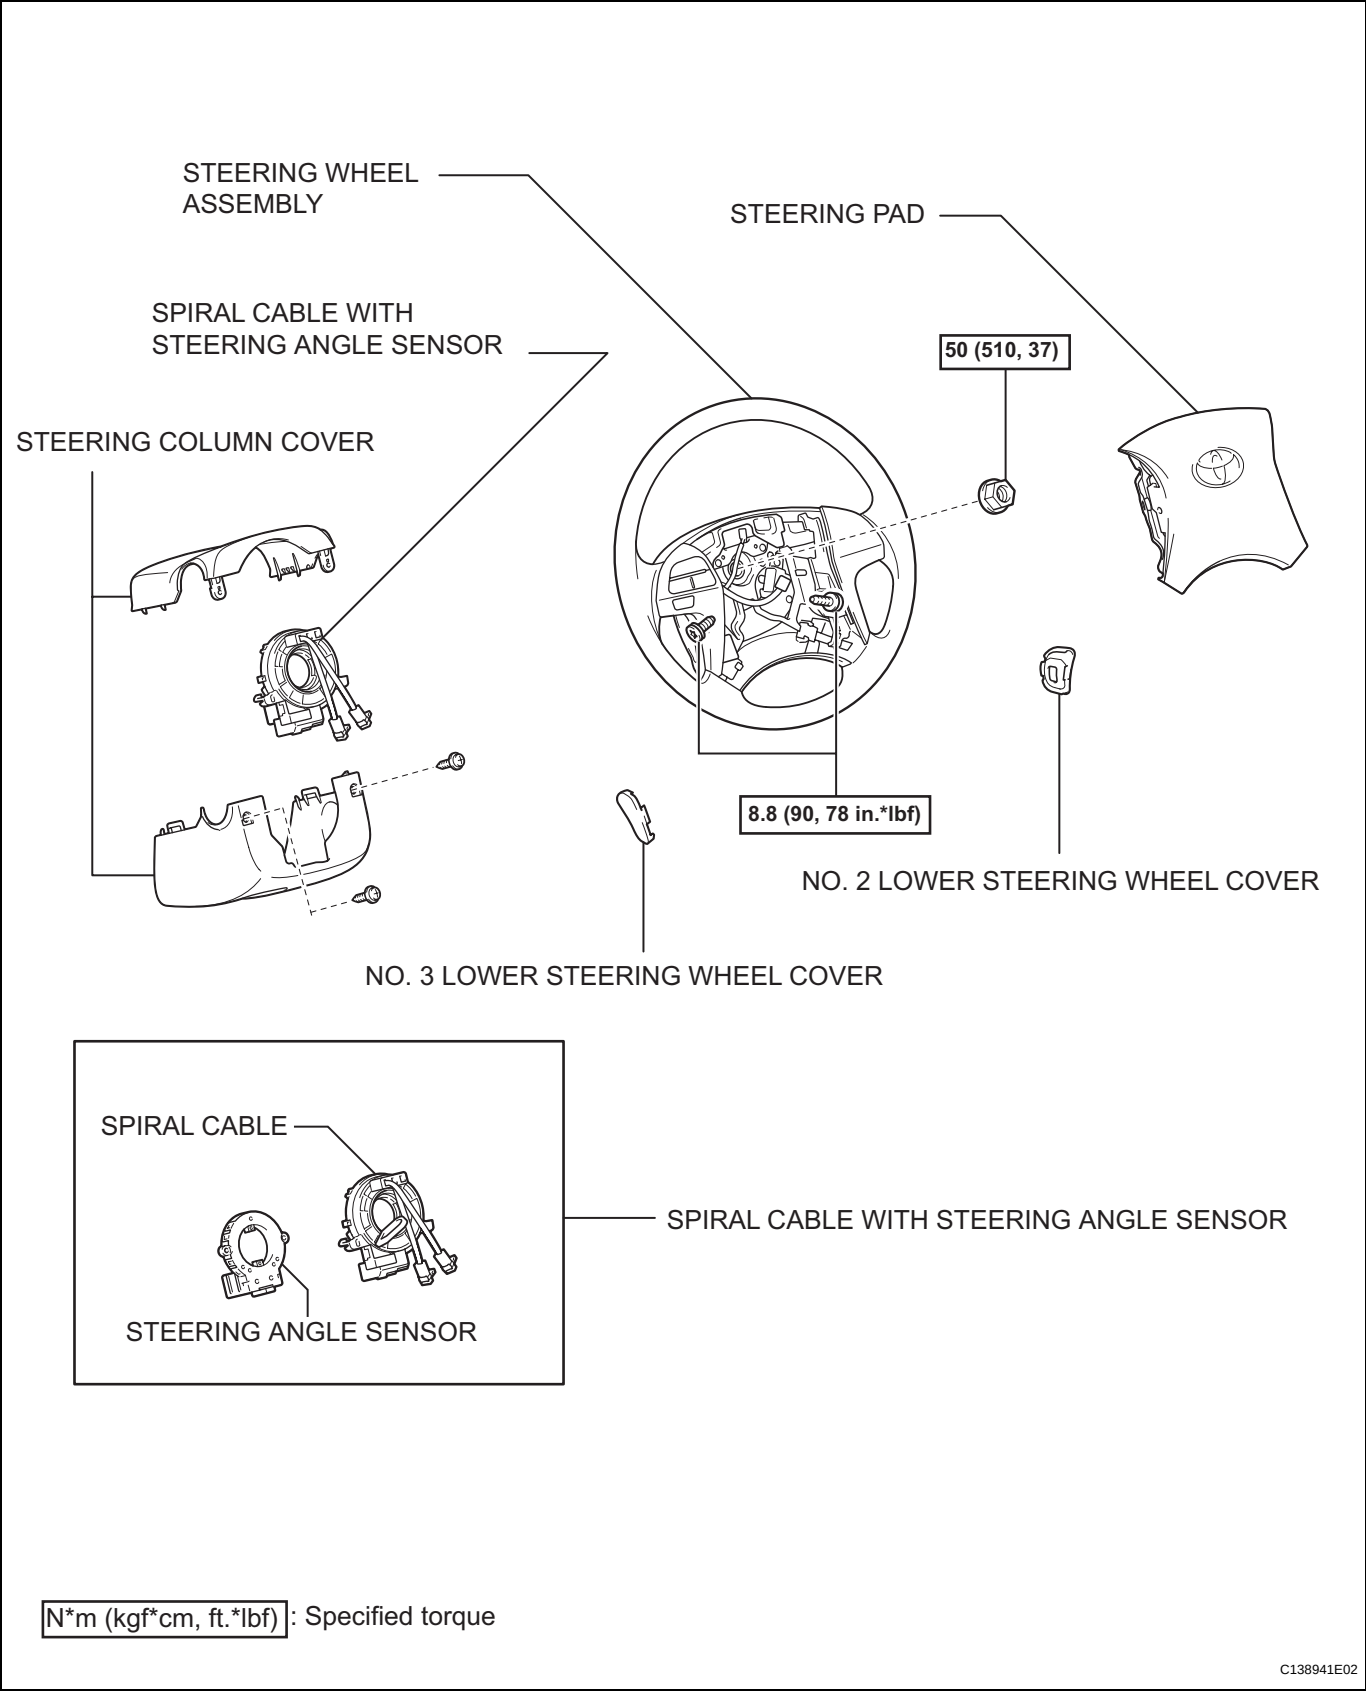

REMOVAL

1. **PRECAUTION**
CAUTION:
Be sure to read "PRECAUTION" thoroughly before servicing (See page [RS-1](#)).
2. **DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL**
CAUTION:
Wait for 90 seconds after disconnecting the cable to prevent airbag deployment.
3. **PLACE FRONT WHEELS FACING STRAIGHT AHEAD**
4. **REMOVE NO. 3 LOWER STEERING WHEEL COVER**
(See page [RS-345](#))
5. **REMOVE NO. 2 LOWER STEERING WHEEL COVER**
(See page [RS-345](#))
6. **REMOVE STEERING PAD** (See page [RS-345](#))
7. **REMOVE STEERING WHEEL ASSEMBLY** (See page [SR-36](#))
8. **REMOVE STEERING COLUMN COVER** (See page [SR-36](#))
9. **REMOVE SPIRAL CABLE WITH STEERING ANGLE SENSOR**
 - (a) Disconnect the connectors from the spiral cable with steering angle sensor.
NOTICE:
When handling the airbag connector, take care not to damage the airbag wire harness.
 - (b) Disengage the 3 claws and remove the spiral cable with steering angle sensor.

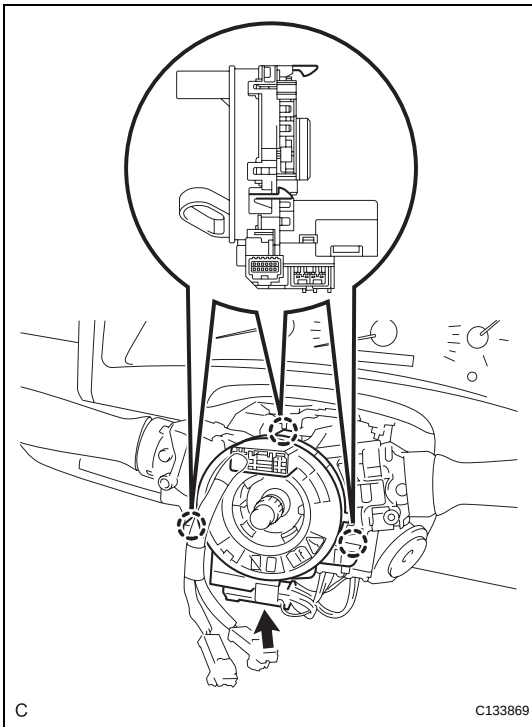

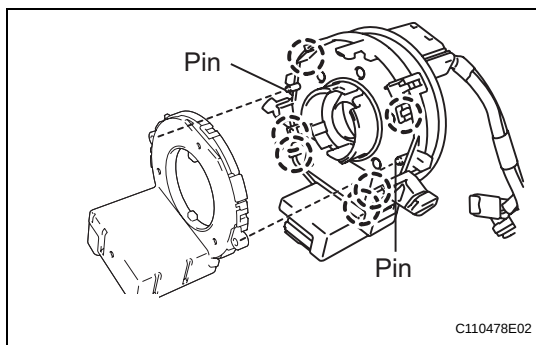**10. SEPARATE SPIRAL CABLE**

- (a) Disengage the 6 claws and 2 pins, and remove the spiral cable from the steering angle sensor.