


ON-VEHICLE INSPECTION


1. INSPECT FRONT PASSENGER AIRBAG ASSEMBLY (VEHICLE NOT INVOLVED IN COLLISION)

- (a) Perform a diagnostic system check (See page [RS-33](#)).
- (b) With the front passenger airbag assembly installed on the vehicle, perform a visual check. If there are any defects as mentioned below, replace the instrument panel with a new one:
Cuts, minute cracks or marked discoloration on the instrument panel around the front passenger airbag assembly.

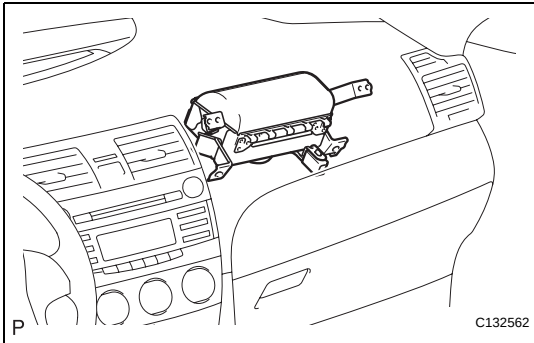

2. INSPECT FRONT PASSENGER AIRBAG ASSEMBLY (VEHICLE INVOLVED IN COLLISION AND AIRBAG HAS NOT DEPLOYED)

- (a) Perform a diagnostic system check (See page [RS-33](#)).
- (b) With the front passenger airbag assembly removed from the vehicle, perform a visual check. If there are any defects as mentioned below, replace the front passenger airbag assembly, instrument panel or instrument panel reinforcement with a new one:
 - Cuts, minute cracks or marked discoloration on the front passenger airbag assembly.
 - Cracks or other damage to the connectors.
 - Deformation or cracks on the instrument panel or instrument panel reinforcement.

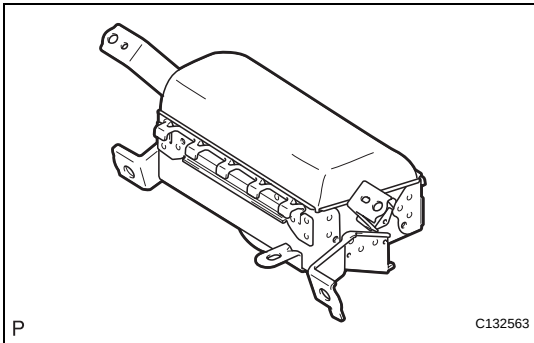

CAUTION:

Be sure to follow the correct removal and installation procedures.

REMOVAL

1. PRECAUTION
CAUTION:
Be sure to read "PRECAUTION" thoroughly before servicing (See page [RS-1](#)).
2. ALIGN FRONT WHEELS FACING STRAIGHT AHEAD
3. DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL
CAUTION:
Wait for 90 seconds after disconnecting the cable to prevent airbag deployment.
4. REMOVE NO. 3 LOWER STEERING WHEEL COVER (See page [RS-345](#))
5. REMOVE NO. 2 LOWER STEERING WHEEL COVER (See page [RS-345](#))
6. REMOVE STEERING PAD (See page [RS-345](#))
7. REMOVE STEERING WHEEL ASSEMBLY (See page [SR-36](#))
8. REMOVE FRONT DOOR SCUFF PLATE LH (See page [IR-13](#))
9. REMOVE COWL SIDE TRIM SUB-ASSEMBLY LH (See page [IR-14](#))
10. REMOVE LOWER INSTRUMENT PANEL FINISH PANEL LH (See page [IP-11](#))
11. REMOVE STEERING COLUMN COVER (See page [SR-36](#))
12. REMOVE TURN SIGNAL SWITCH ASSEMBLY WITH SPIRAL CABLE SUB-ASSEMBLY (See page [SR-37](#))
13. REMOVE NO. 1 INSTRUMENT PANEL SUB-ASSEMBLY (See page [IP-12](#))
14. REMOVE LOWER INSTRUMENT PANEL FINISH PANEL (See page [IP-12](#))
15. REMOVE INSTRUMENT CLUSTER FINISH PANEL (See page [IP-13](#))
16. REMOVE COMBINATION METER ASSEMBLY (See page [IP-13](#))
17. REMOVE FRONT DOOR SCUFF PLATE RH (See page [IR-15](#))
18. REMOVE COWL SIDE TRIM SUB-ASSEMBLY RH (See page [IR-15](#))
19. REMOVE INSTRUMENT PANEL NO. 2 UNDER COVER SUB-ASSEMBLY (See page [IP-13](#))
20. REMOVE LOWER INSTRUMENT PANEL SUB-ASSEMBLY (See page [IP-14](#))


21. REMOVE SHIFT LEVER KNOB SUB-ASSEMBLY (See page [IP-14](#))
22. REMOVE NO. 1 INSTRUMENT CLUSTER FINISH PANEL GARNISH (See page [IP-14](#))
23. REMOVE NO. 2 INSTRUMENT CLUSTER FINISH PANEL GARNISH (See page [IP-14](#))
24. REMOVE FLOOR SHIFT POSITION INDICATOR HOUSING SUB-ASSEMBLY (See page [IP-15](#))
25. REMOVE UPPER CONSOLE REAR PANEL SUB-ASSEMBLY (See page [IP-15](#))
26. REMOVE UPPER CONSOLE PANEL SUB-ASSEMBLY (See page [IP-16](#))
27. REMOVE INSTRUMENT PANEL NO. 2 REGISTER ASSEMBLY (See page [IP-16](#))
28. REMOVE RADIO RECEIVER WITH HEATER CONTROL PANEL ASSEMBLY (w/o Navigation System) (See page [AV-136](#))
29. REMOVE NAVIGATION RECEIVER WITH HEATER CONTROL PANEL ASSEMBLY (w/ Navigation System) (See page [NS-193](#))
30. REMOVE CONSOLE BOX POCKET (See page [IP-17](#))
31. REMOVE CONSOLE BOX CARPET (See page [IP-17](#))
32. REMOVE CONSOLE BOX ASSEMBLY (See page [IP-17](#))
33. REMOVE NO. 2 CONSOLE BOX INSERT FRONT (See page [IP-18](#))
34. REMOVE NO. 1 CONSOLE BOX INSERT FRONT (See page [IP-18](#))
35. REMOVE FRONT PILLAR GARNISH LH (See page [IR-16](#))
36. REMOVE INSTRUMENT PANEL NO. 1 REGISTER ASSEMBLY (See page [IP-18](#))
37. REMOVE INSTRUMENT PANEL NO. 1 SPEAKER PANEL SUB-ASSEMBLY (See page [IP-19](#))
38. REMOVE FRONT NO. 2 SPEAKER ASSEMBLY (for LH Side) (See page [AV-146](#))
39. REMOVE FRONT PILLAR GARNISH RH (See page [IR-16](#))
40. REMOVE INSTRUMENT PANEL NO. 3 REGISTER ASSEMBLY (See page [IP-19](#))
41. REMOVE INSTRUMENT PANEL NO. 2 SPEAKER PANEL SUB-ASSEMBLY (See page [IP-19](#))
42. REMOVE FRONT NO. 2 SPEAKER ASSEMBLY (for RH Side) (See page [IP-19](#))

43. REMOVE NO. 1 DEFROSTER NOZZLE GARNISH
(See page [IP-20](#))**44. DISCONNECT INSTRUMENT PANEL WIRE ASSEMBLY**


- (a) Disconnect the connector.

NOTICE:


When handling the airbag connector, take care not to damage the airbag wire harness.

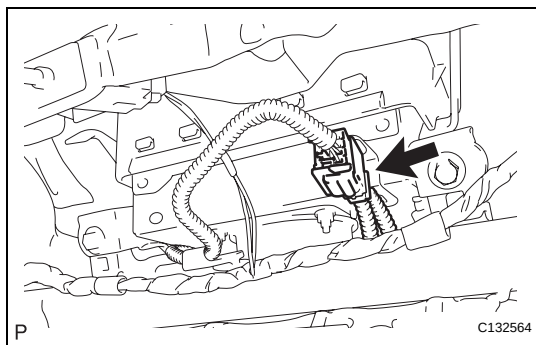
45. REMOVE INSTRUMENT PANEL SAFETY PAD ASSEMBLY (See page [IP-20](#))**46. REMOVE FRONT PASSENGER AIRBAG ASSEMBLY**

- (a) Remove the 2 screws.

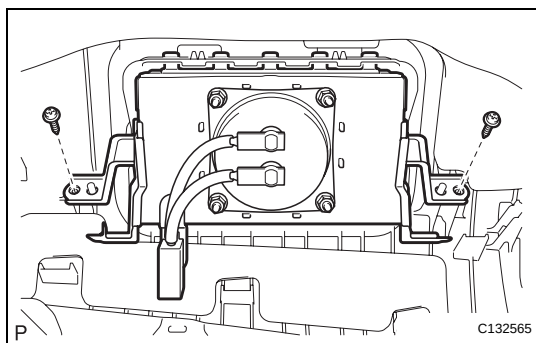

- (b) Disengage the 10 hooks and remove the front passenger airbag assembly from the instrument panel.

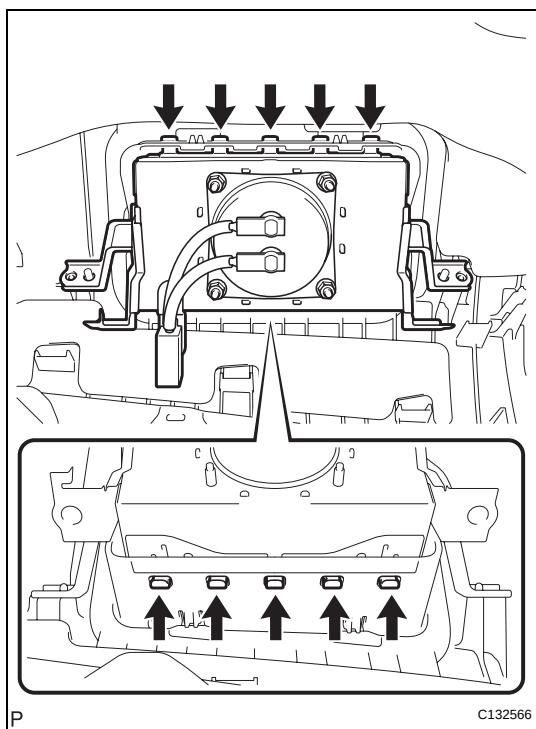


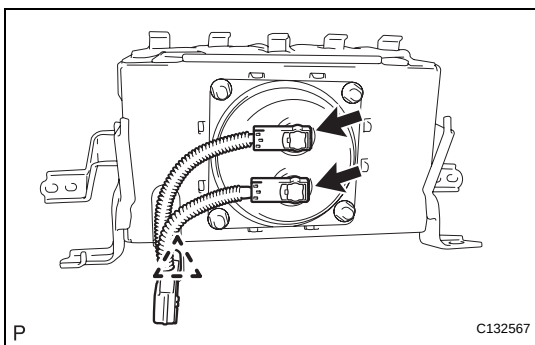**47. REMOVE INSTRUMENT PANEL WIRE ASSEMBLY**

- (a) Disconnect the 2 connectors.
- (b) Remove the clamp and the instrument panel wire assembly from the front passenger airbag assembly.

NOTICE:


When handling the airbag connector, take care not to damage the airbag wire harness.

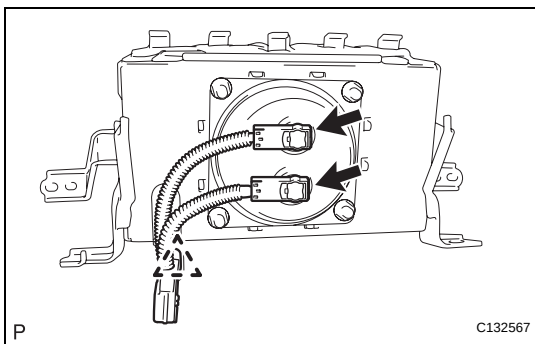**INSTALLATION****1. INSTALL INSTRUMENT PANEL WIRE ASSEMBLY**


- (a) Connect the 2 connectors.
- (b) Install the clamp and the instrument panel wire assembly on the front passenger airbag assembly.

NOTICE:

When handling the airbag connector, take care not to damage the airbag wire harness.

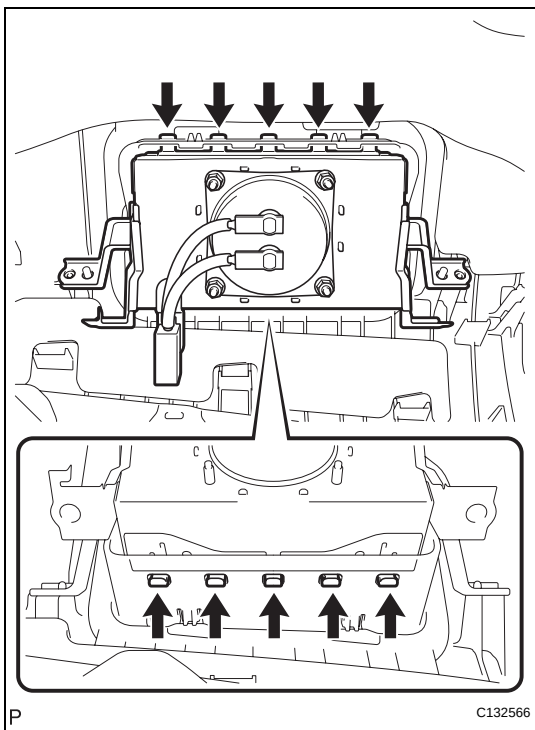
**2. INSTALL FRONT PASSENGER AIRBAG ASSEMBLY**

- (a) Engage the 10 hooks and install the front passenger airbag assembly on the instrument panel.

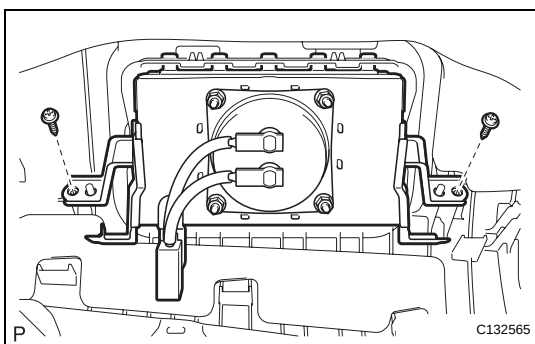

- (b) Install the 2 screws.

3. INSTALL INSTRUMENT PANEL SAFETY PAD ASSEMBLY (See page [IP-25](#))

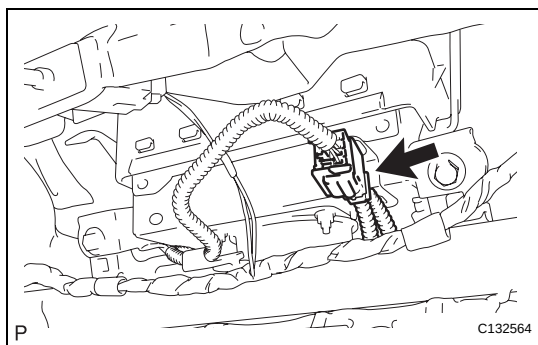

4. **CONNECT INSTRUMENT PANEL WIRE ASSEMBLY**
 - (a) Connect the connector.
NOTICE:
When handling the airbag connector, take care not to damage the airbag wire harness.
5. **INSTALL NO. 1 DEFROSTER NOZZLE GARNISH** (See page [IP-28](#))
6. **INSTALL FRONT NO. 2 SPEAKER ASSEMBLY** (for LH Side) (See page [AV-146](#))
7. **INSTALL INSTRUMENT PANEL NO. 1 SPEAKER PANEL SUB-ASSEMBLY** (See page [IP-28](#))
8. **INSTALL INSTRUMENT PANEL NO. 1 REGISTER ASSEMBLY** (See page [IP-28](#))
9. **INSTALL FRONT PILLAR GARNISH LH** (See page [IR-38](#))
10. **INSTALL FRONT NO. 2 SPEAKER ASSEMBLY** (for RH Side) (See page [IP-28](#))
11. **INSTALL INSTRUMENT PANEL NO. 2 SPEAKER PANEL SUB-ASSEMBLY** (See page [IP-29](#))
12. **INSTALL INSTRUMENT PANEL NO. 3 REGISTER ASSEMBLY** (See page [IP-29](#))
13. **INSTALL FRONT PILLAR GARNISH RH** (See page [IR-39](#))
14. **INSTALL NO. 1 CONSOLE BOX INSERT FRONT** (See page [IP-29](#))
15. **INSTALL NO. 2 CONSOLE BOX INSERT FRONT** (See page [IP-30](#))
16. **INSTALL CONSOLE BOX ASSEMBLY** (See page [IP-30](#))
17. **INSTALL CONSOLE BOX CARPET** (See page [IP-30](#))
18. **INSTALL CONSOLE BOX POCKET** (See page [IP-30](#))
19. **INSTALL RADIO RECEIVER WITH HEATER CONTROL PANEL ASSEMBLY** (w/o Navigation System) (See page [AV-137](#))
20. **INSTALL NAVIGATION RECEIVER WITH HEATER CONTROL PANEL ASSEMBLY** (w/ Navigation System) (See page [NS-194](#))
21. **INSTALL INSTRUMENT PANEL NO. 2 REGISTER ASSEMBLY** (See page [IP-31](#))
22. **INSTALL UPPER CONSOLE PANEL SUB-ASSEMBLY** (See page [IP-31](#))
23. **INSTALL UPPER CONSOLE REAR PANEL SUB-ASSEMBLY** (See page [IP-31](#))
24. **INSTALL FLOOR SHIFT POSITION INDICATOR HOUSING SUB-ASSEMBLY** (See page [IP-31](#))

25. INSTALL NO. 2 INSTRUMENT CLUSTER FINISH PANEL GARNISH (See page [IP-32](#))
26. INSTALL NO. 1 INSTRUMENT CLUSTER FINISH PANEL GARNISH (See page [IP-32](#))
27. INSTALL SHIFT LEVER KNOB SUB-ASSEMBLY (See page [IP-32](#))
28. INSTALL LOWER INSTRUMENT PANEL SUB-ASSEMBLY (See page [IP-33](#))
29. INSTALL INSTRUMENT PANEL NO. 2 UNDER COVER SUB-ASSEMBLY (See page [IP-33](#))
30. INSTALL COWL SIDE TRIM SUB-ASSEMBLY RH (See page [IR-42](#))
31. INSTALL FRONT DOOR SCUFF PLATE RH (See page [IR-42](#))
32. INSTALL COMBINATION METER ASSEMBLY (See page [IP-33](#))
33. INSTALL INSTRUMENT CLUSTER FINISH PANEL (See page [IP-34](#))
34. INSTALL LOWER INSTRUMENT PANEL FINISH PANEL (See page [IP-34](#))
35. INSTALL NO. 1 INSTRUMENT PANEL SUB-ASSEMBLY (See page [IP-34](#))
36. INSTALL TURN SIGNAL SWITCH ASSEMBLY WITH SPIRAL CABLE SUB-ASSEMBLY (See page [SR-41](#))
37. ADJUST SPIRAL CABLE (See page [RS-360](#))
38. INSTALL STEERING COLUMN COVER (See page [SR-41](#))
39. INSTALL LOWER INSTRUMENT PANEL FINISH PANEL LH (See page [IP-35](#))
40. INSTALL COWL SIDE TRIM SUB-ASSEMBLY LH (See page [IR-41](#))
41. INSTALL FRONT DOOR SCUFF PLATE LH (See page [IR-41](#))
42. INSTALL STEERING WHEEL ASSEMBLY (See page [SR-42](#))
43. INSTALL STEERING PAD (See page [RS-346](#))
44. INSTALL NO. 3 LOWER STEERING WHEEL COVER (See page [RS-347](#))
45. INSTALL NO. 2 LOWER STEERING WHEEL COVER (See page [RS-347](#))
46. CONNECT CABLE TO NEGATIVE BATTERY TERMINAL

47. PERFORM INITIALIZATION

- (a) Perform initialization (See page [IN-43](#)).

NOTICE:

Some systems need initialization after reconnecting the cable to the negative battery terminal.

48. INSPECT STEERING PAD (See page [RS-347](#))**49. INSPECT SRS WARNING LIGHT**

- (a) Inspect the SRS warning light (See page [RS-33](#)).